



Welcome to the family of Pursuit boat owners and congratulations on your purchase of your new Pursuit SC 365i.

We understand there are many choices available to you, and we appreciate the investment that you've made and the subsequent faith and confidence that you've placed into our product. Hopefully, during the selection and buying process, you discovered that each Pursuit has been designed, engineered and built with care and precision.

When our company was started, it was the goal of my father, Leon Slikkers, to provide you with the finest quality boat available. We want to be the best and deliver the best to you. And part of that includes a delightful ownership experience. Everything we have achieved since our humble beginnings has been with this same goal in mind.

The information within this owner's manual was assembled to assist you in understanding how to operate your boat to obtain the maximum enjoyment of your Pursuit. So please take time to read the manual completely and please operate your boat safely and courteously.

I would also like to ask you a personal favor. Shortly, you will receive a survey asking for your opinion about the sales process you experienced when you purchased your boat. Approximately nine months later, you'll be sent another survey inquiring about your ownership experience. By taking a few minutes to complete these surveys, you will be providing us with valuable information.

Best wishes for many happy hours aboard your new Pursuit,

Thomas B. Slikkers  
CEO/President S2 Yachts

**PURSUIT BOATS**  
3901 ST. LUCIE BLVD  
FORT PIERCE, FL  
34946  
USA  
772-465-6006  
FAX 772-465-6177  
[www.pursuitboats.com](http://www.pursuitboats.com)



# CALIFORNIA

## PROPOSITION 65 WARNING



### **WARNING**

**WARNING: OPERATING, SERVICING AND MAINTAINING A RECREATIONAL MARINE VESSEL CAN EXPOSE YOU TO CHEMICALS INCLUDING ENGINE EXHAUST, CARBON MONOXIDE, PHTHALATES, AND LEAD, WHICH ARE KNOWN TO THE STATE OF CALIFORNIA TO CAUSE CANCER AND BIRTH DEFECTS OR OTHER REPRODUCTIVE HARM. TO MINIMIZE EXPOSURE, AVOID BREATHING EXHAUST, SERVICE YOUR VESSEL IN A WELL-VENTILATED AREA AND WEAR GLOVES OR WASH YOUR HANDS FREQUENTLY WHEN SERVICING THIS VESSEL. FOR MORE INFORMATION GO TO [WWW.P65WARNINGS.CA.GOV/MARINE](http://WWW.P65WARNINGS.CA.GOV/MARINE).**



**2018 MODELS  
S2 YACHTS, INC. LIMITED WARRANTY COVERAGE**

S2 Yachts, Inc. (S2) provides limited warranty coverage on Tiara Yachts and Pursuit Boats products sold (or use by retail (non-commercial) customers, as described in this Limited Warranty. For customers in the U.S.; this warranty gives you specific legal rights, you also may have other rights, which vary from state to state. For customers in the European Union, the purchaser may have additional legal rights under applicable national legislation governing the sale of consumer goods, and those rights (if applicable) are not affected by this warranty.

This warranty is provided only to the original purchaser of the boat from an authorized S2 Yachts dealer, but can be transferred to subsequent owners. Contact S2's Customer Relations Department if you need information about transferring this warranty. No warranty coverage is provided to subsequent owners unless they follow S2's transfer procedures. This warranty does not extend or apply to anyone else. The terms of this written warranty cannot be changed or modified, except by a written agreement signed by an officer of S2 Yachts, Inc.

**COVERED PRODUCTS AND LIMITATIONS:**

S2's limited warranty coverage applies only to:

1. Defects in materials and workmanship in the boat and all components and accessories (except for the excluded items described below) for a period of two (2) years;
2. Structural defects in materials and workmanship in the hull, deck and fiberglass fuel tanks (where applicable) for a period of five (5) years;
3. Blistering due to defects in material and workmanship in the gelcoat surface of the hull bottom for a period of five (5) years, provided that the gelcoat surface has not been altered in any way such as sanding, sandblasting or application of a coating other than standard antifouling paint, any of which will void this warranty.

Each of the warranty coverage periods runs from the date of purchase of the boat from an authorized S2 Yachts dealer and applies only to warranted defects that first manifest themselves and are reported to S2 within the applicable warranty period. S2 retains the right to determine to its reasonable satisfaction whether any claimed defect is covered by this warranty.

Certain items are excluded from warranty coverage by S2, and this **limited warranty coverage does not apply to:**

1. Engines, transmissions, generators, air conditioning systems, electronics and batteries. These products may come with separate warranties from their manufacturers; see the Owner Packet for warranty registration requirements and details on these products.
2. Dealer final assembly and pre-delivery commissioning, and dealer installed components.
3. Scratching, chipping, discoloration or flaking of any powder coated or painted surface including engines and hardtop components.
4. Gelcoat stress cracking, chalking, fading or discoloration. This includes bilge gelcoat.
5. Damage caused by accident, wear, storm damage, grounding, towing, commercial use of the boat, or misuse or abuse, or deterioration resulting from normal use (including gaskets, seals, springs, wipers and sealants).
6. Maintenance, adjustments or realignments to any components including latches, hinges, hatches, doors and drive train components.
7. Mold, mildew, upholstery damage or deterioration and cleaning.
8. Damage or deterioration resulting from environmental conditions, including electrolysis, crevice or galvanic corrosion, any deterioration of underwater equipment, or any damage or deterioration resulting from any failure to undertake reasonable, routine maintenance.

9. Any repairs, adjustments, alterations or modifications made by anyone other than an employee of S2 Yachts, or an authorized S2 Yachts dealer with S2's prior, written authorization.
10. Damage which has occurred as a result of the boat being operated as a demonstrator and/or displayed for sale.
11. Damage or deterioration of the hull or deck structure due to the attachment of hardware or other components.
12. Weight, speed, fuel consumption or other performance characteristics.
13. Damage or deterioration resulting from improper trailering, hauling, launching or storage.
14. Boats purchased or used for commercial or governmental purposes or uses.

**REMEDIES UNDER THIS LIMITED WARRANTY**

If a defect covered by this warranty occurs, S2 (or one of its authorized dealers, as determined by S2) will repair or replace the defective component, in its sole discretion. This "repair or replacement" remedy is the **exclusive remedy** under this warranty. S2 has **no responsibility or liability for any consequential or incidental damages**, such as loss of use, storage charges, interest or finance charges, insurance or depreciation, transportation or lodging charges, or charges for towing or hauling out, etc. which are specifically **excluded and disclaimed** from this warranty. For customers in the U.S.: some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. **UNDER CERTAIN APPLICABLE LAWS, THERE MAY BE NO IMPLIED WARRANTIES OR GUARANTEES FROM S2 APPLICABLE TO YOUR BOAT, AND ALL IMPLIED WARRANTIES (INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) AND GUARANTEES ARE DISCLAIMED WHERE ALLOWED BY LAW. TO THE FULLEST EXTENT ALLOWED BY LAW, ANY AND ALL APPLICABLE IMPLIED WARRANTIES AND GUARANTEES (IF ANY), INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE APPLICABLE PROVISIONS OF THIS WRITTEN WARRANTY.** For customers in the U.S.: some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**RESPONSIBILITY OF PURCHASER**

1. No warranty coverage is provided by S2 unless the dealer completes and returns all Vessel Registration and Customer Acceptance Forms to S2 Yachts, Inc. within thirty (30) days after delivery of the boat to the original purchaser.
2. The original purchaser or approved transferee must notify the S2 Yachts dealer from which the boat was purchased of any claimed defect within fifteen (15) days after first detecting the claimed defect. Warranty work in excess of \$500 requires S2's prior, written approval.
3. If the dealer fails to satisfactorily repair the claimed defect within fifteen (15) days, written notice must then be promptly given directly to S2. S2 is not responsible for unrepaired warranted defects.
4. The boat, including any claimed defective part, must be returned to the S2 Yachts dealer from which the boat was purchased (or to another dealer as directed by S2 Yachts) within the warranty period for inspection and warranty service. The expense of returning and transporting the boat or any part for warranty service, and the expense of returning and transporting it back to the owner after repair or replacement, is the responsibility of the owner, and will not be reimbursed by S2.
5. If the dealer from whom the boat was purchased is no longer an authorized S2 Yachts dealer, contact S2 for instructions on how to obtain warranty service.

S2 reserves the right to improve its products through changes in design or materials without being obligated to the owners of the boats of similar or the same model of prior manufacture. We may be contacted as follows: For Tiara Yachts: Tiara Customer Relations Department, 725 East 40<sup>th</sup> Street, Holland, Michigan 49423 (616/394-7460). For Pursuit Boats: Pursuit Customer Relations Department, 3801 St. Lucie Boulevard, Ft. Pierce, FL 34946 (772/460-4650).





## **SUPPLEMENTAL LIMITED WARRANTY INFORMATION ON FINISHED WOOD COMPONENTS**

Your Pursuit® Boat may be furnished with certain finished wood panels and components that require periodic maintenance and refinishing to maintain their appearance and finish. S2 Yachts, Inc.'s Limited Warranty coverage **does not include** the matching of wood grains, or the condition or durability of any finishes for such panels and components. This statement supplements S2 Yachts, Inc.'s Limited Warranty with respect to these wood panels and components. All other terms of S2 Yachts, Inc.'s Limited Warranty remain in effect, and you should refer to the Limited Warranty for other terms, conditions and requirements.





  
**PURSUIT**<sup>®</sup>



OWNER'S MANUAL

**SC 365i**  
SPORT COUPE

MARCH 2017

**U.S. Patents**

**8,191,495**

**9,003,997**

**D 700,127**

***PURSUIT***® SC 365i

Part Number 9213042

June 2016

# Safety Information

Your Owner's Manual was written to include safety instructions to ensure safe operation and maintenance of your boat. Safety alerts symbols are used to alert potential personal injury hazards.

## DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

## WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

## CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

## NOTICE

Indicates a potentially hazardous situation which, if not avoided, may result in property damage.

All instructions are viewed from the stern looking toward the bow, with starboard (to your right) and port (to your left). A glossary of boating terms is included.

Your boat produces carbon monoxide (CO) and uses flammable fuel. CO will cause BRAIN DAMAGE or DEATH. Carbon monoxide gas (CO) is colorless, odorless and extremely dangerous.

Every precaution has been taken by Pursuit Fishing Boats to reduce the risks associated with death, possible injury and damage from fire or explosion. Your own precaution and good maintenance procedures are necessary in order to enjoy safe operation of your boat.

## DANGER

Exposure to carbon monoxide will cause death or serious injury. Avoid direct and prolonged exposure to CO.




Gasoline and other fuels are extremely flammable and highly explosive under certain conditions.

- DO NOT smoke or allow open flame or sparks nearby when fueling.
- DO NOT block fuel vents.
- DO NOT store fuel in any containers or compartments which are not designated for storing fuel.



# Specifications

## Specifications

<h1>Specifications</h1>	
<small>2/26/2013</small>	
Boat Manufacturer/Model: SC 365i	Costruttore/modello della barca: SC 365i
Boothersteller/Model: SC 365i	Modelo/Fabricante de la Embarcación: SC 365i
Constructeur/Modèle du bateau: SC 365i	Fabricante/Modelo do Barco: SC 365i
Design Category: B-Offshore Catégorie de conception: B-au large Categoría de Diseño: B-Alta Mar Konstruktionskategorie: B-Ausserhalb von Küstengewässern Categoria di progetto: B-D'Altura Categoría de Design: B-Mar Alto	Propulsion Type: Tipo di propulsione: Antriebsart: Tipo de propulsión: Type de propulsion: Tipo propulsão: <div style="text-align: center; border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;"><b>Outboard</b></div>
Intended Use: Verwendungszweck: Usage prévu: Utilizzo previsto: Uso previsto: Utilização:	Hull Identification Number: Rumpfunner: Nèmero d'identification de coque: Nèmero identificazione scafo: Número de Identificación del Casco: Número de Identificação do Casco:
<b>Recreation</b>	<b>HIN Label</b>
Maximum Recommended Load: Charge maximale recommandée: Carga Máxima recomendada: Empfohlene Beladung Maximum: Carico massimo ammesso: Carga Máxima Recomendada:	 <div style="text-align: center; margin-top: 10px;"> <b>MAXIMUM</b> </div> <div style="text-align: right; border: 1px solid black; padding: 2px; width: fit-content;"> <b>1936 kg. 4268 lbs.</b> </div>
Recommended Number of Persons: Nombre de personnes recommandé: Número recomendado de personas: Empfohlene Personenanzahl: Omologazione al trasporto di n. persone: Número de Pessoas Recomendado:	Maximum Rated Engine Power: Puissance nominale maximale du moteur: Potencia máxima del motor: Maximale Motorleistung: Massima potenza nominale motore: Máxima potência nominal do motor:
<b>MAXIMUM</b>  = <b>12</b>	<b>MAXIMUM</b>  = <b>522 kw. 700 hp.</b>
Engine Installed, Manufacturer, Model and Number(s): Moteur installé, Fabricant, modèle et numéros(s): Motor instalado, Fabricante, modelo y número(s): Motor installiert, Hersteller, modell, nummer(en): Motore istallato, Costruttore, modello e número(s): Motor Instalado, Fabricante, Modelo e Número(s):	1. _____ 2. _____ 3. _____
Mass of Craft (Approximate) Masses de Navire (Approximatives) Peso de la embarcación (aproximado) Gewicht des Bootes (Nährungswert) Massa dell'imbarcazione (approssimativa) Massa da Embarcação (Aproximada) With Largest Equipped Engine and permanently attached items: Avec le plus grand moteur équipé et systèmes en liaison permanente: Con el mayor motor equipado y elementos permanentemente instalados: Mit größter Motorausführung und fest installiertem Inventar sowie vollen Wasser- und Kraftstofftanks und empfohlener Maximalbeladung: Con il motore di maggiore cilindrata, attrezzature permanenti, più rifornimento di acqua e carburante e carico massimo ammesso: Com o maior motor instalado e os equipamentos permanentes, mais a capacidade máxima de água e combustível, mais a carga máxima recomendada:	With Largest Equipped Engine and permanently attached items, plus full water and fuel, plus maximum recommended load: Avec le plus grand moteur équipé et systèmes en liaison permanente, plus pleine charge d'eau et de carburant, plus charge maximale recommandée: Con el mayor motor equipado y elementos permanentemente instalados, más combustible y agua, más la carga máxima recomendada: Mit größter Motorausführung und fest installiertem Inventar sowie vollen Wasser- und Kraftstofftanks und empfohlener Maximalbeladung: Con il motore di maggiore cilindrata, attrezzature permanenti, più rifornimento di acqua e carburante e carico massimo ammesso: Com o maior motor instalado e os equipamentos permanentes, mais a capacidade máxima de água e combustível, mais a carga máxima recomendada:
Con il motore di maggiore cilindrata e attrezzature permanenti: Cim o maior motor instaldo e os equipamentos permanentes:	<div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;"><b>10376 kg./ 22828 lbs.</b></div>
<b>8405 kg./ 18490 lbs.</b>	Trailerable Weight (engine, fuel and water, batteries and options): Masse pour remorquage (moteur, carburant et eau, batteries et options): Peso remolcable (motor, combustible y agua, baterías y opciones): Auf Anhänger verladbares Gewicht (Motor, Kraftstoff und Wasser, Batterien und Sonderausstattung): Peso rimorchiabile su strada (motore, combustible e acqua, batterie ed accessori): Peso Rebocável (motor, combustível e água, baterias e opções):
	<div style="border: 1px solid black; padding: 2px; width: fit-content; margin: 0 auto;"><b>9148 kg./ 20127lbs.</b></div>

## Specifications

2/26/2013


EN	DE																										
Fuel Tank Capacity (0.73kg/Liter): Fuel Type: <b>1136L/300G</b> Gasoline Oil Tank Capacity: Oil Type: Water Tank Capacity (1kg/Liter): Holding Tank Capacity:  Number and Type of Fire Extinguishers: Number and Type of CO Detectors:  N/A = Not Applicable	Kraftstofftankkapazität (0,73 kg/Liter): Kraftstoffart: <b>1136L/300G</b> Benzin Öltankkapazität: Ölart: Wassertankkapazität (1kg/Liter): Speichertankkapazität: Feuerlöscheranzahl und -typ: Rauchdetektoranzahl und -typ:  n.z. = nicht zutreffend																										
<table style="width: 100%; border: none;"> <tr> <td style="width: 50%; border: none;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L/24G</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">284L/75Gal</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">106L/28G</td><td style="text-align: center;">Liters</td></tr> </table> </td> <td style="width: 50%; border: none;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Liter</td></tr> </table> </td> </tr> </table>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L/24G</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">284L/75Gal</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">106L/28G</td><td style="text-align: center;">Liters</td></tr> </table>	90L/24G	Diesel	N/A	Liters	10-40	Liters	284L/75Gal	Liters	106L/28G	Liters	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Liter</td></tr> </table>	1136	Liter	90L	Diesel	N/A	Liter	10-40	Liter	284L	Liter	106L	Liter	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">(4) A,B,C</td></tr> <tr><td style="text-align: center;">2</td></tr> </table>	(4) A,B,C	2
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L/24G</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">284L/75Gal</td><td style="text-align: center;">Liters</td></tr> <tr><td style="text-align: center;">106L/28G</td><td style="text-align: center;">Liters</td></tr> </table>	90L/24G	Diesel	N/A	Liters	10-40	Liters	284L/75Gal	Liters	106L/28G	Liters	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Liter</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Liter</td></tr> </table>	1136	Liter	90L	Diesel	N/A	Liter	10-40	Liter	284L	Liter	106L	Liter				
90L/24G	Diesel																										
N/A	Liters																										
10-40	Liters																										
284L/75Gal	Liters																										
106L/28G	Liters																										
1136	Liter																										
90L	Diesel																										
N/A	Liter																										
10-40	Liter																										
284L	Liter																										
106L	Liter																										
(4) A,B,C																											
2																											
FR	IT																										
Contenance réservoir carburant (0,73kg/litre): Type de carburant: <b>1136L/300G</b> gasoil Contenance réservoir d'huile: Type d'huile: Contenance réservoir de'eau (kg/litre) Contenance réservoir de rétention:  Nombre et type d'extincteurs: Nombre et type de détecteurs de fumée:  N/A = non applicable	Capacità serbatoio carburante (0,73kg/l): Tipo carburante: <b>1136L/300G</b> Benzina Capacità serbatoio olio: Tipo oïlio: Capacità serbatoio acqua (1kg/l): Capacità cassa di zavorra:  Numero e tipo di estintori: Numero e tipo di rivelatori di esalazioni:  N/A = non pertinente																										
<table style="width: 100%; border: none;"> <tr> <td style="width: 50%; border: none;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">litres</td></tr> </table> </td> <td style="width: 50%; border: none;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">litri</td></tr> </table> </td> </tr> </table>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">litres</td></tr> </table>	90L	diesel	N/A	litres	10-40	litres	284L	litres	106L	litres	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">litri</td></tr> </table>	1136	litri	90L	Diesel	N/A	litri	10-40	litri	284L	litri	106L	litri	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">(4) A,B,C</td></tr> <tr><td style="text-align: center;">2</td></tr> </table>	(4) A,B,C	2
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">litres</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">litres</td></tr> </table>	90L	diesel	N/A	litres	10-40	litres	284L	litres	106L	litres	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">litri</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">litri</td></tr> </table>	1136	litri	90L	Diesel	N/A	litri	10-40	litri	284L	litri	106L	litri				
90L	diesel																										
N/A	litres																										
10-40	litres																										
284L	litres																										
106L	litres																										
1136	litri																										
90L	Diesel																										
N/A	litri																										
10-40	litri																										
284L	litri																										
106L	litri																										
(4) A,B,C																											
2																											
ES	PT																										
Capacidad del Depósito de Combustible (73Kg/Litro): Tipo de Combustible: <b>1136L/300G</b> Gasolina Capacidad del Depósito de Aceite: Tipo de Aceite: Capacidad del Depósito de Agua (1Kg/Litro): Capacidad del Tanque de Retención:  Número y Tipo de Extintores de Incendios: Número y Tipo de Detectores de Humos:  N/A = no aplicable	Capacidade do Depósito de Combustível: (0,73kg/Litro): Tipo de Combustível: <b>1136L/300G</b> Gasolina Capacidade do Depósito de Óleo: Tipo de Óleo: Capacidade do Depósito de Água: (1kg/Litro): Capacidade do Depósito Provisório: Número e Tipo de Extintores de Incêndio: Número e Tipo de Detectores de Fumo:  N/A = Não Aplicável																										
<table style="width: 100%; border: none;"> <tr> <td style="width: 50%; border: none;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Litros</td></tr> </table> </td> <td style="width: 50%; border: none;"> <table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Gasóleo</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Litros</td></tr> </table> </td> </tr> </table>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Litros</td></tr> </table>	90L	Diesel	N/A	Litros	10-40	Litros	284L	Litros	106L	Litros	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Gasóleo</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Litros</td></tr> </table>	1136	Litros	90L	Gasóleo	N/A	Litros	10-40	Litros	284L	Litros	106L	Litros	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">(4) A,B,C</td></tr> <tr><td style="text-align: center;">2</td></tr> </table>	(4) A,B,C	2
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Diesel</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Litros</td></tr> </table>	90L	Diesel	N/A	Litros	10-40	Litros	284L	Litros	106L	Litros	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr><td style="text-align: center;">1136</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">90L</td><td style="text-align: center;">Gasóleo</td></tr> <tr><td style="text-align: center;">N/A</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">10-40</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">284L</td><td style="text-align: center;">Litros</td></tr> <tr><td style="text-align: center;">106L</td><td style="text-align: center;">Litros</td></tr> </table>	1136	Litros	90L	Gasóleo	N/A	Litros	10-40	Litros	284L	Litros	106L	Litros				
90L	Diesel																										
N/A	Litros																										
10-40	Litros																										
284L	Litros																										
106L	Litros																										
1136	Litros																										
90L	Gasóleo																										
N/A	Litros																										
10-40	Litros																										
284L	Litros																										
106L	Litros																										
(4) A,B,C																											
2																											

# Specifications

## Specifications

2/26/2013

Model: SC 365i

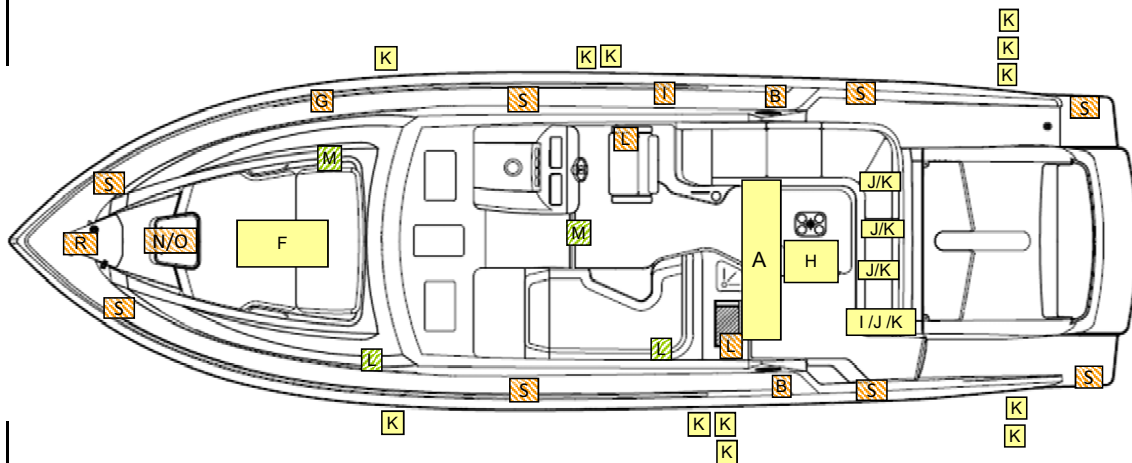

### EN

Locate and Identify:

- A) Fuel Tank
- B) Fuel Tank Filling Point
- C) Oil Tank (N/A)
- D) Oil Tank Filling Point (N/A)
- E) Oil Tank Emptying Point(N/A)
- F) Water Tank
- G) Water Tank Filling Point
- H) Holding Tank
- I) Holding Tank Emptying Point
- J) Seacocks
- K) Through-Hull Fittings
- L) Fire Extinguisher
- M) Carbon Monoxide Detector
- N) Escape Hatch
- O) Fire Escapes
- P) Life Raft Stowage
- Q) Safety Equipment
- R) Anchor Strong Points
- S) Mooring Strong Points
- T) Towing Strong Points (N/A)

### LEGEND

Deck -	
Hull -	
Cabin -	

### ES

Localizar e identificar:

- A) Depósito de Combustible
- B) Punto de Carga del Depósito de Combustible
- C) Depósito de Aceite (N/A)
- D) Punto de Carga del Depósito de Aceite (N/A)
- E) Punto de Descarga del Depósito de Aceite
- F) Depósito de Agua
- G) Punto de Carga del Depósito de Agua
- H) Tanque de Tetención
- I) Punto de Descarga del Tanque de Tetención
- J) Válvula de Toma de Agua de Mar
- K) Accesorios Pasantes del Casco
- L) Extintor de Incendios
- M) Detector de Monóxido de Carbono
- N) Escotilla de Seguridad
- O) Escalera de Incendios
- P) Almacenamiento de balsas salvavidas
- Q) Equipos de seguridad
- R) Puntos fuertes de anclaje
- S) Puntos fuertes de amarre
- T) Puntos fuertes de remolque (N/A)

### IT


Localizzazione e identificazione dei componenti:

- A) Serbatoio carburante
- B) Bocchettone di riempimento serbatoio carburante
- C) Serbatoio olio (N/A)
- D) Bocchettone di riempimento serbatoio olio (N/A)
- E) Scarico serbatoio olio (N/A)
- F) Serbatoio acqua
- G) Bocchettone di riempimento serbatoio acqua
- H) Cassa zavorra
- I) Scaric cassia zavorra
- J) Valvole di presa acqua dal mare
- K) Raccorderia passante nello scafo
- L) Estintore
- M) Rivelatore monossido di carbonio
- N) Boccaporto di sfuggita
- O) Uscite di sicurezza
- P) Stivaggio zattera di salvataggio
- Q) Dotazioni di sicurezza
- R) Punti di attacco per l'ancoraggio
- S) Punti di attacco per l'ormeggio
- T) Punti di attacco per il traino (N/A)

## Specifications

2/26/2013

Model: SC 365i

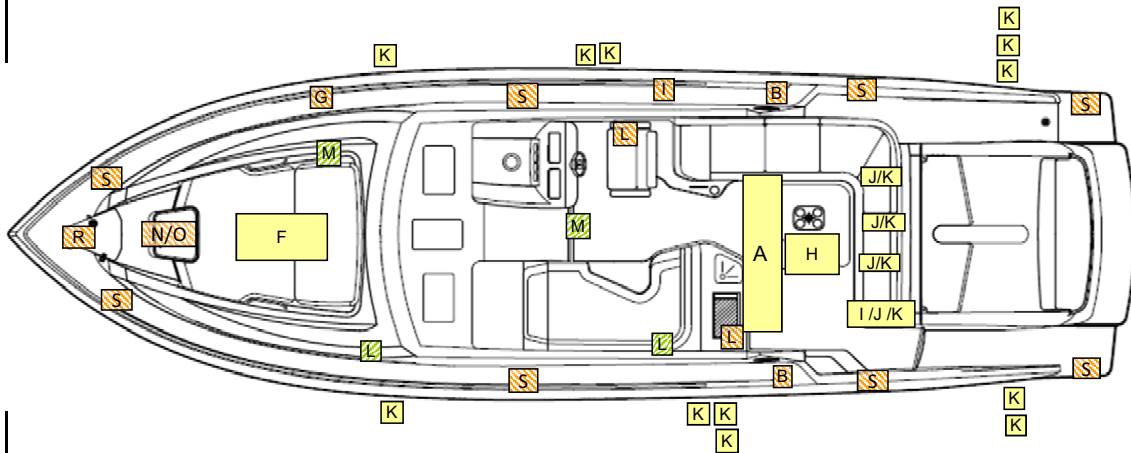

### FR

Repérez et identifiez:

- A) Réservoir de carburant
- B) Point de remplissage réservoir de carburant
- C) Réservoir d'huile (N/A)
- D) Point de remplissage réservoir d'huile (N/A)
- E) Point de vidage réservoir d'huile (N/A)
- F) Réservoir d'eau
- G) Point de remplissage réservoir d'eau
- H) Réservoir de rétention
- I) Point de vidage réservoir de rétention
- J) Prises d'eau à la mer
- K) Raccords traversant la coque
- L) Extincteur
- M) Détecteur de monoxyde de carbone
- N) Escotille d'évacuation
- O) Echelles de sauvetage
- P) Arrimage du radeau de sauvetage
- Q) Equipement de sécurité
- R) Points d'ancrage
- S) Points d'amarrage
- T) Points de remorquage (N/A)

### DE

Position and Beschreibung:

- A) Kraftstofftank
- B) Kraftstofftankfüllpunkt
- C) Öltank (n.z.)
- D) Öltankfüllpunkt (n.z.)
- E) Öltankablasspunkt (n.z.)
- F) Wassertank
- G) Wassertankablasspunkt
- H) Speichertank
- I) Speichertankablasspunkt
- J) Flutventile
- K) Rumpfdurchgangsmbauten
- L) Feuerlöscher
- M) Kohlenmonoxid-detektor
- N) Notausstieg
- O) Reuerrettungswege
- P) Rettungsflößeunterbringung
- Q) Sicherheitsausrüstung
- R) Ankerpunkte
- S) Vertäuungspunkte
- T) Abschlepppunkte (n.z.)

### PT

Localizar e Identificar:

- A) Depósito de Combustível
- B) Ponto de Enchimento do Depósito de Combustível
- C) Depósito de Óleo (N/A)
- D) Ponto de Enchimento do Depósito de Óleo (N/A)
- E) Ponto de Esvaziamento do Depósito de Óleo (N/A)
- F) Depósito de Água
- G) Ponto de Enchimento do Depósito de Água
- H) Depósito Provisório
- I) Ponto de Esvaziamento do Depósito Provisório
- J) Torneiras de tomada de água do mar
- K) Acessórios de Todo o Casco
- L) Extintor de Incêndios
- M) Detector de Monóxido de Carbono
- N) Escotilha de Fuga
- O) Saídas de Incêndio
- P) Acondicionamento do Barco Salva-vidas
- Q) Equipamento de Segurança
- R) Pontos Fortes da Ancoragem
- S) Pontos Fortes da Amargem
- T) Pontos Fortes da Rebocagem (N/A)


### LEGEND

Deck	-	▨
Hull	-	▨
Cabin	-	▨



# Specifications

---

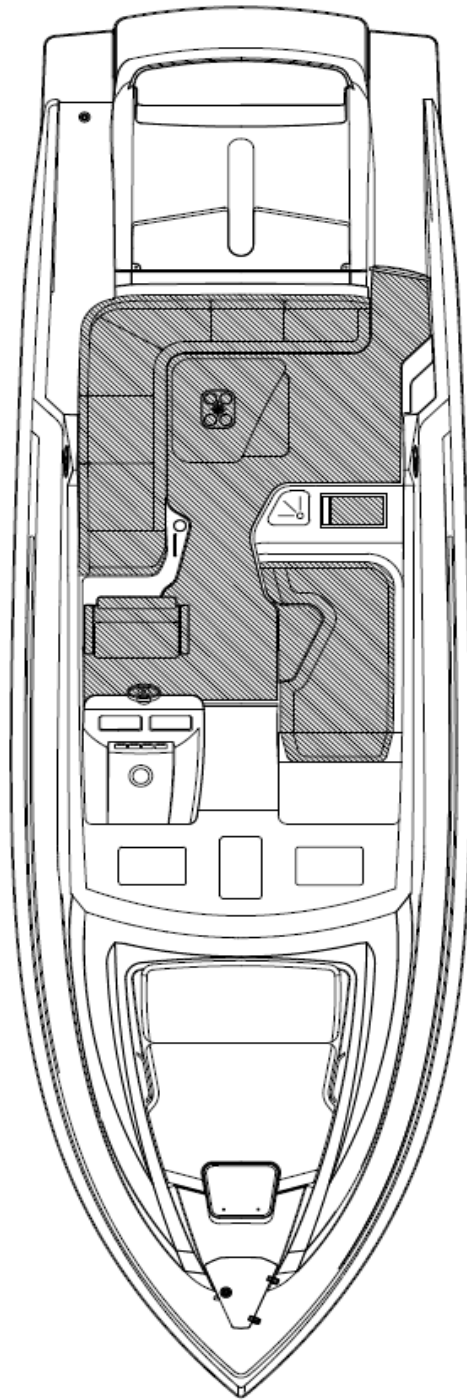


## Working Deck Area


2/26/2013  
Model: SC 365i



Working Deck  
Areas for occupation during  
normal operation of the boat

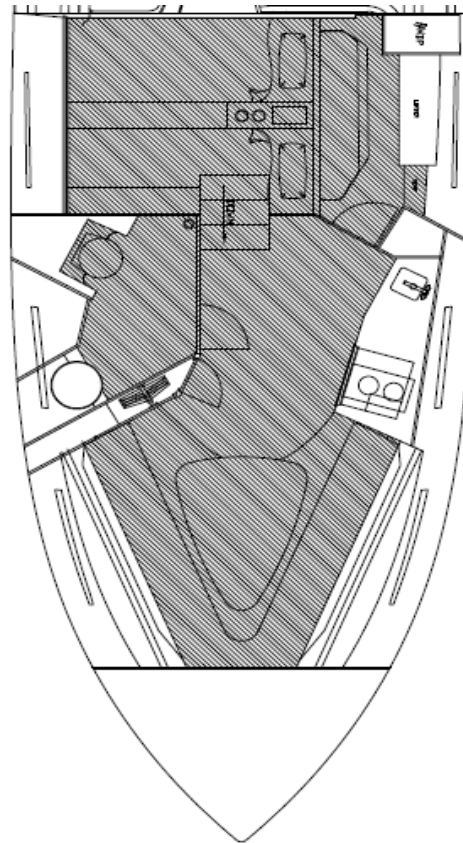

# Specifications

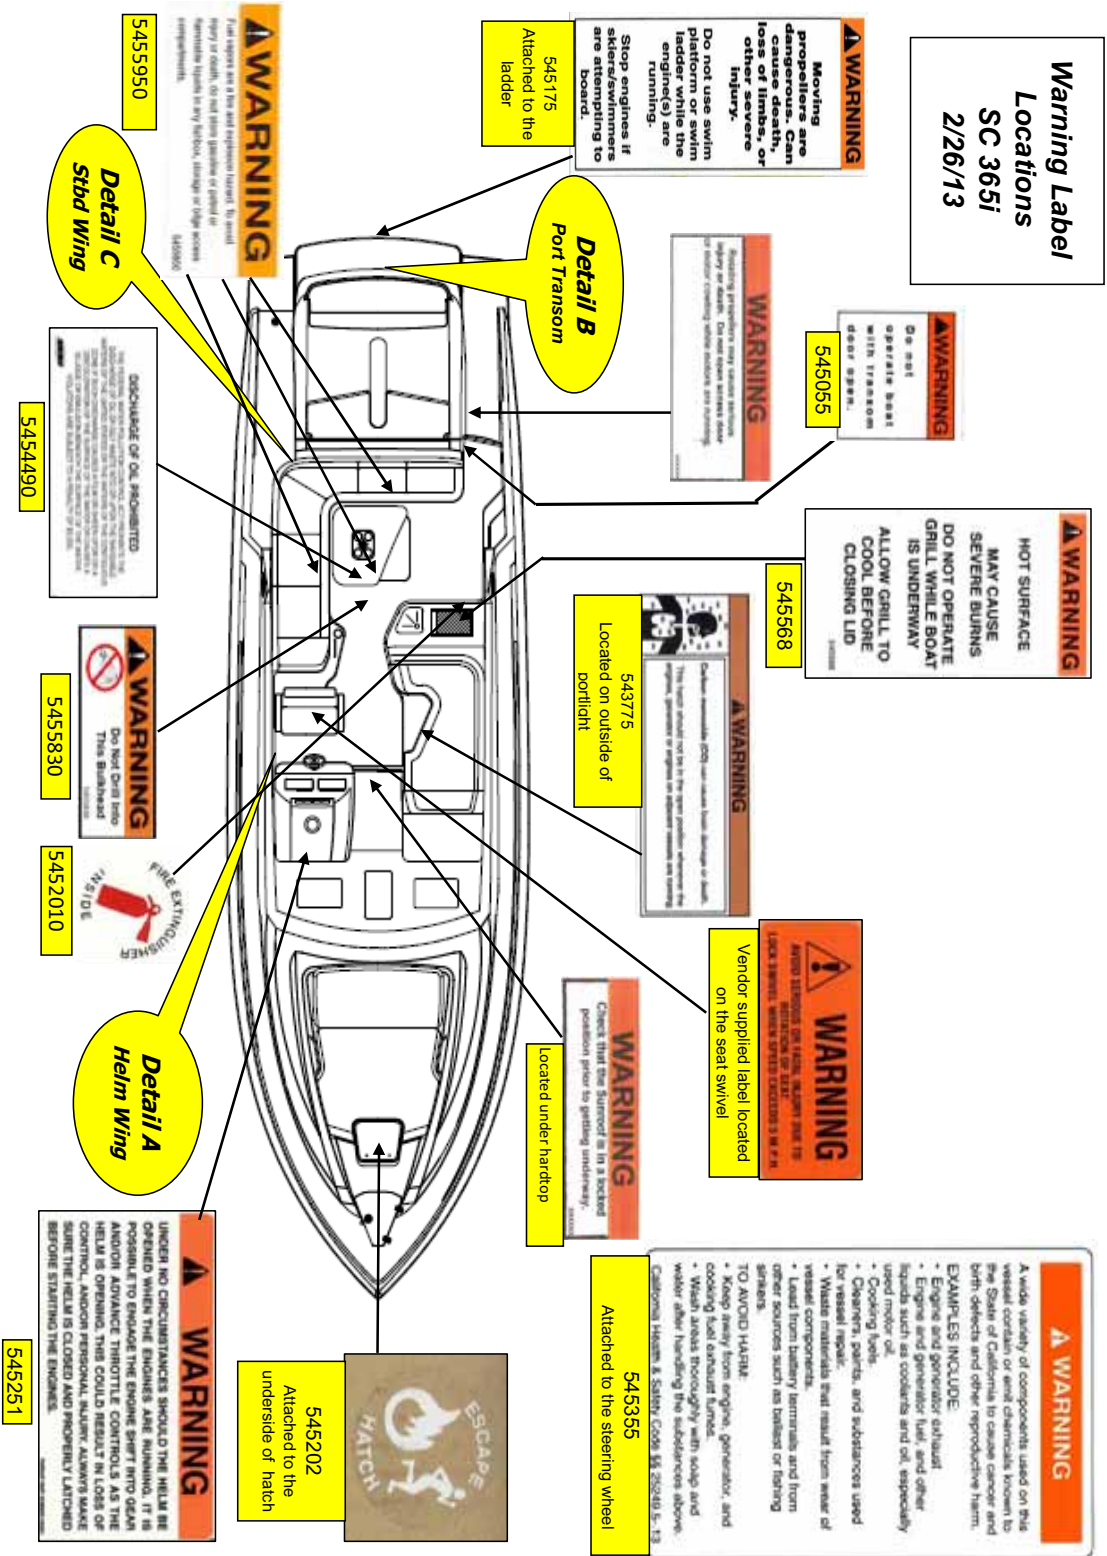

# Specifications

**545566** **NOTICE**  
Keep cockpit hatches closed while underway.

**545316** **WARNING**  
Hardtop is not a weather deck. Falling from hardtop can result in serious injury or death. Stay off hardtop.

**545006** **WARNING**  
AVOID SERIOUS INJURY OR DEATH FROM FIRE OR EXPLOSION RESULTING FROM LEAKING FUEL. ALWAYS USE FUEL AT LEAST ONCE A YEAR.

**545369** **WARNING**  
Excessive alcohol use can reduce motor function or death. Excessive alcohol use can also impair judgment and reduce reaction time. Excessive alcohol use can also impair judgment and reduce reaction time. Excessive alcohol use can also impair judgment and reduce reaction time.

**545055** **WARNING**  
The boat operator must wear your seat belt while the engine is running. Do not drink and drive. Do not drink and drive. Do not drink and drive.

**545118** **WARNING**  
Visibility with turn Post Backrests raised is limited. Lower Star Post backrest prior to getting underway.

**545012** **NOTICE**  
Boater's Checklist: Check fuel tank level. Check oil level. Check battery charge. Check engine oil level. Check engine coolant level. Check engine air filter. Check engine belt. Check engine fan. Check engine fan blades. Check engine fan blades. Check engine fan blades.

**545450** **WARNING**  
To the Owner: For your safety, please read the instructions carefully. Failure to follow the instructions may result in serious injury or death. Failure to follow the instructions may result in serious injury or death. Failure to follow the instructions may result in serious injury or death.

**545365** **WARNING**  
Moving propellers are dangerous. Do not use motor platform or swim ladder. Can cause death, loss of limbs, or other serious injury. Stop engines if observers are attempting to board.

**545118** **DANGER**  
Excessive speed can cause serious injury or death. Excessive speed can cause serious injury or death. Excessive speed can cause serious injury or death.

**545112** **WARNING**  
Hazardous voltage. Can shock, burn or cause death. Put AC Main Switch(es) in Off position before connecting or disconnecting shore power cable. To make shore power connection, make sure you do not make a connection to an ungrounded outlet or plug. Do not use worn or damaged cables. Keep all connections dry and off the ground. Do not touch plug with wet hands. Always use a three-wire electrical system connected to the electrical ground.

**545112** **WARNING**  
Hazardous voltage. Can shock, burn or cause death. Put AC Main Switch(es) in Off position before connecting or disconnecting shore power cable. To make shore power connection, make sure you do not make a connection to an ungrounded outlet or plug. Do not use worn or damaged cables. Keep all connections dry and off the ground. Do not touch plug with wet hands. Always use a three-wire electrical system connected to the electrical ground.

**Detail A**


**Detail B**

**Detail C**

**Detail of Label Locations SC 365i 2/26/13**

# Specifications

## Interior Warning Label Locations SC 365i

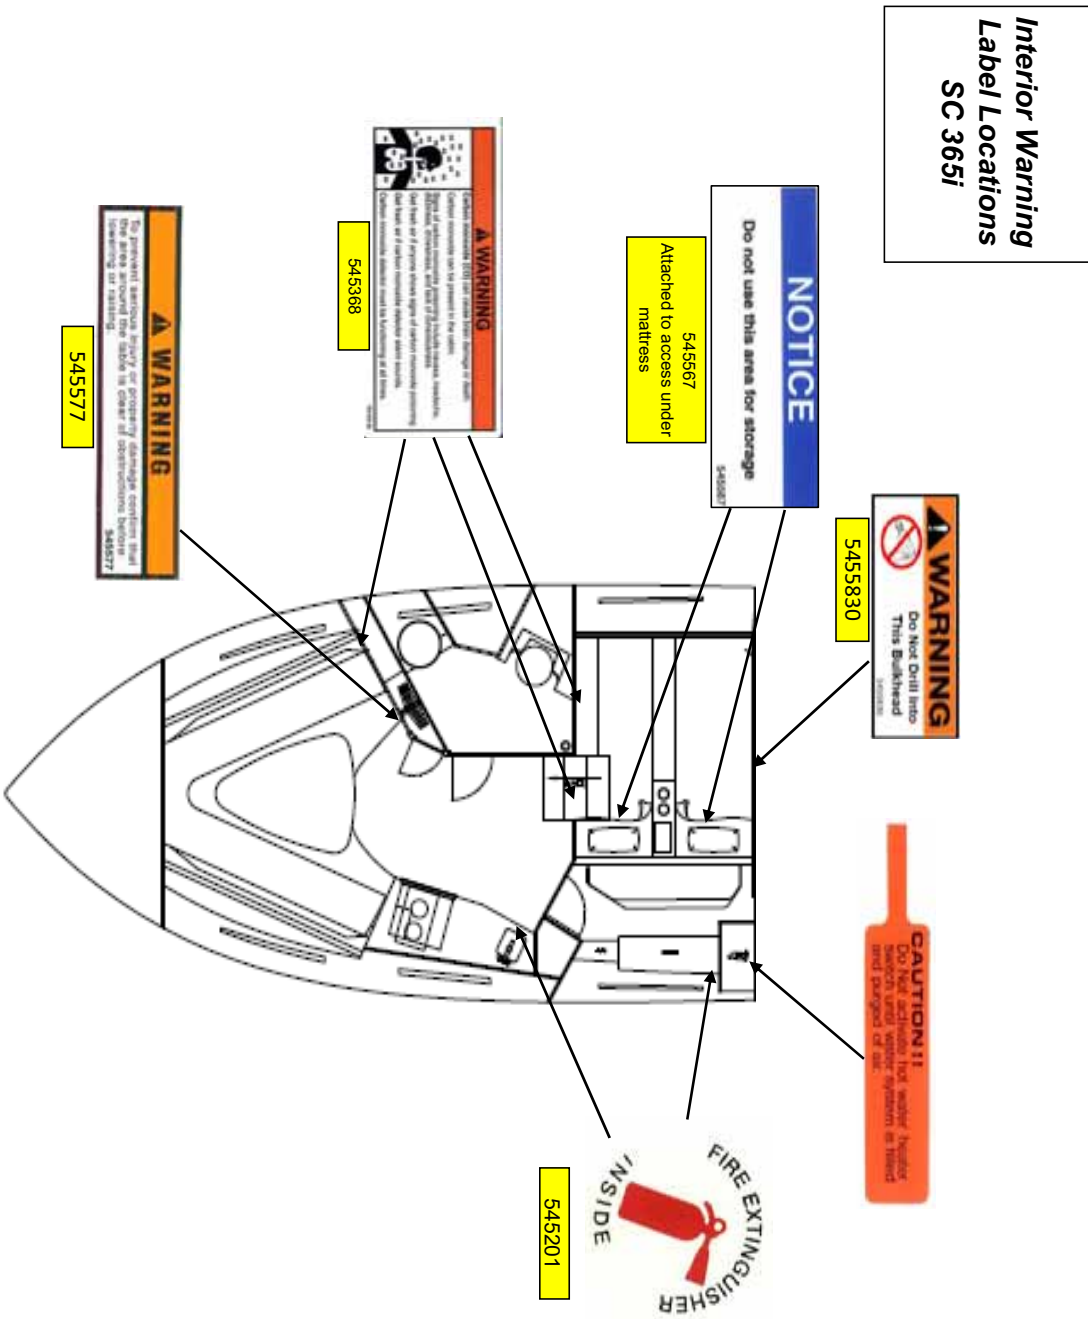

# General Information

## Boat Information

Fill out the following information and leave it in your PURSUIT Owner's Manual. This information will be important for you and PURSUIT service personnel to know, if and when you may need to call PURSUIT for technical assistance or service.

Boat	
Model:	Hull Serial #:
Purchase Date:	Delivery Date:
Ignition Keys #	Registration #:
Draft:	Weight:
Engine(s)	
Make:	Model:
Port Serial #:	Starboard Serial #:
Transmission(s) (Inboard)	
Make:	Model:
Port Serial #:	Starboard Serial #:
Ratio:	
Outdrive(s) (Inboard/Outboard)	
Make:	Model:
Port Serial #:	Starboard Serial #:
Propeller(s)	
Make:	Blades:
Diameter/Pitch:	Other:
Generator	
Make:	Model:
Serial #:	kW
Dealer	Pursuit
Name:	Phone:
Dealer/Phone:	Representative:
Salesman:	Address:
Service Manager:	
Address:	

PURSUIT Fishing Boats reserves the right to make changes and improvements in equipment, design and vendor supplied equipment at any time without notification.

## Warranty and Warranty Registration Cards

The PURSUIT Limited Warranty Statement is included with your boat. It has been written to be clearly stated and easily understood. If you have any questions after reading the warranty, please contact PURSUIT Customer Relations.

PURSUIT, engine manufacturers, and the suppliers of major components maintain their own manufacturer's warranty and service facilities. It is important that you properly complete the warranty registration cards included with your boat and engine(s) and mail them back to the manufacturers to register your ownership. This should be done within 15 days of the date of purchase and before the boat is put into service. A form for recording this information is provided at the beginning of this manual. This information will be important for you and service personnel to know, if and when you may need service or technical information.

The boat warranty registration requires the **Hull Identification Number "HIN"** which is located on the starboard side of the transom, just below the rub rail. The engine warranty registration requires the engine serial number(s). Please refer to the engine owner's manual for the location of the serial number(s).

## Federal Boat Safety Act

All boat manufacturers are required by the Federal Boat Safety Act of 1971 to notify first time owners in the event any defect is discovered "which creates a substantial risk of personal injury to the public." It is essential that we have your warranty registration card complete with your name and mailing address in our files so that we can comply with the law if it should become necessary.

## Product Changes

PURSUIT is committed to the continuous improvement of our boats. As a result, some of the equipment described in this manual or pictured in the catalog may change or no longer be available.

PURSUIT reserves the right to change standard equipment, optional equipment and specifications without notice or obligation. If you have questions about the equipment on your PURSUIT, please contact PURSUIT Customer Relations.

## Transferring the Warranty

For a transfer fee, S2 Yachts will extend warranty coverage to subsequent owners of PURSUIT models for the duration of the original warranty period. To take advantage of this program, notification of the change of ownership, including the new owner's name, address and telephone number together with the appropriate fee, must be sent to PURSUIT Fishing Boats, Customer Relations Department, 3901 St. Lucie Boulevard, Ft. Pierce, Florida 34946, within 30 days of the date of resale.

S2 Yachts will confirm, in writing, that the transfer of the warranty has taken place. After which, the transferee will be treated as the original purchaser as outlined in the PURSUIT Limited Warranty Statement.

## Owner/Operator Responsibilities

### Registration and Documentation

Federal law requires all undocumented vessels equipped with propulsion machinery be registered in the state of principal use. A certificate of documentation will be issued upon registration. These registration numbers must be displayed on your boat. The owner/operator of a boat must carry a valid certificate of registration whenever the boat is in use. When moved to a new state of principal use, the certificate is valid for 60 days.

In order to be valid, the numbers must be installed to the proper specifications. Check with your dealer or state boating authority for numbering requirements. The Coast Guard issues the certificate of number in Alaska; all others are issued by the state.

# General Information

---

## Insurance

In most states the boat owner is legally responsible for damages or injuries the boat causes. Responsible boaters carry adequate liability and property damage insurance for their boat. You should also protect the boat against physical damage and theft. Some states have laws requiring minimum insurance coverage. Contact your dealer or state boating authority for information on the insurance requirements in your boating area.

## Reporting Boating Accidents

All boating accidents must be reported by the owner or operator of the boat to the proper marine law enforcement authority for the state in which the accident occurred. Immediate notification is required if a person dies or disappears as a result of a recreational boating accident.

If a person dies or there are injuries requiring more than first aid, a formal report must be filed within 48 hours.

A formal report must be made within 10 days for accidents involving more than \$500.00 damage or the complete loss of a boat.

A "Boating Accident Report" form is located near the back of this manual to assist you in reporting an accident. If you need additional information regarding accident reporting, please call the Boating Safety Hotline, 800-368-5647 or [uscgboating.org](http://uscgboating.org).

## Education

If you are not an experienced boater, we recommend the boat operator and other people that normally accompany the operator, enroll in a boating safety course. Organizations such as the U.S. Power Squadrons, United States Coast Guard Auxiliary, State Boating Authorities and the American Red Cross offer excellent boating educational programs. These courses are worthwhile even for experienced boaters to sharpen your skills or bring you up to date on current rules and regulations. They can also help in providing local navigational information when moving to a new boating area. Contact your dealer, State Boating Authority or the Boat-

ing Safety Hotline, 800-368-5647 or [uscgboating.org](http://uscgboating.org) for further information on boating safety courses.

## Required Equipment

U.S. Coast Guard regulations require certain equipment on each boat. The Coast Guard also sets minimum safety standards for vessels and associated equipment. To meet these standards some of the equipment must be Coast Guard approved. "Coast Guard Approved Equipment" has been determined to be in compliance with USCG specifications and regulations relating to performance, construction or materials. The equipment requirements vary according to the length, type of boat, and the propulsion system. Some of the Coast Guard equipment is described in the Safety Equipment Section of this manual. For a more detailed description, obtain "Federal Requirements and Safety Tips for Recreational Boats" by contacting the Boating Safety Hotline 800-368-5647, [uscgboating.org](http://uscgboating.org) or your local marine dealer or retailer.

Some state and local agencies go beyond USCG regulations or impose similar equipment requirements on waters that do not fall under Coast Guard jurisdiction. Contact your dealer or local boating authority, they can provide you with additional information for the equipment requirements for that boating area.

## EPA Compliant Fuel System

EPA (Environmental Protection Agency) regulations have required additional emissions related components for the fuel tank, fuel fill and fuel vent systems. It is unlawful to remove or intentionally defeat these emission related components.





## Propulsion Systems

### 1.1 General

Your Pursuit boat is designed to be powered with twin 4-cycle outboard engines.

Each manufacturer of the various outboard engines provides an owner's information manual which includes its limited warranty statement with its product. It is important you read and understand the information and become familiar with the warranty, operation and maintenance of the engines and drive systems.

#### NOTICE

**DO NOT attempt to service any part of the outboard or boat systems unless you are familiar or qualified to do so. Do not use parts which are not designed for a marine application.**

#### WARNING

**MOVING PARTS HAZARD.**  
Contact with moving parts can entangle, cut and cause death or serious injury. **DO NOT** get close enough to make contact with any running machinery moving parts, i.e., engine or propeller. Contact can result in loss of body parts, strangulation, burns and/or severe loss of blood resulting in death or serious injury.

#### NOTICE

**Use only the fuel recommended by the engine manufacturer. Use of old, contaminated fuel can cause the engine to malfunction or severe damage.**

### 1.2 Saltwater Application

Each outboard engine is a complete drive system with the gear case (transmission) forward of the propeller and connected to the power head with a vertical drive shaft. Other than the routine maintenance outlined in the engine owner's manual, there is little to be concerned with unless the boat is to be kept in saltwater for extended periods. Marine growth will occur when components are left in the water for extended periods and can cause poor performance or permanent damage to the exposed components. The type of growth and how quickly it occurs is relative to the water conditions in your boating area. Water temperature, pollution, current, etc. can have an effect on marine growth.

Galvanic corrosion is the corrosion process occurring when different metals are submerged in an electrolyte. Sea water is an electrolyte and submerged engine components must be properly protected. Outboard engines are equipped with sacrificial anodes to help prevent galvanic corrosion problems. The anodes must be monitored and replaced as necessary. For locations and maintenance, refer to the engine owner's manual.

When leaving the boat in the water, tilt the motors as high as possible to decrease the risk of marine growth around the cooling inlets, propeller and exhaust ports and damage from galvanic corrosion.

## CAUTION

**DO NOT use copper-based coatings or any coatings not approved for use with aluminum. Some paint manufacturers claim their paints are safe for aluminum. Copper components and copper-based paints can cause severe corrosion to aluminum. DO NOT use copper-based paints. Mercury or mercury-based compounds that come into contact with aluminum will result in severe corrosion.**

## 1.3 Engine Lubrication

4-cycle engines have an oil sump in the crankcase. The oil type, grade and level must be followed in accordance with the engine manufacturer's recommendation. It is normal for 4-cycle engines to consume a small amount of oil. Check the oil level before each use and change it following the engine manufacturer's recommendation.

## NOTICE

**Use only the oil recommended by the engine manufacturer, and monitor the oil level. Use of any other type of oil can cause the engine to malfunction or severe damage.**

## 1.4 Engine Cooling System

Outboard engines are raw water (sea water) cooled. Water is pumped through the water inlets, circulated through the engine block, and expelled with the exhaust through exhaust port, water port and the propeller hub. The water pump uses a small impeller made of synthetic rubber. The impeller and water pump cannot run dry for more than a few seconds. In most outboard engines, some cooling water is diverted through ports below the engine cowling. This allows the operator to visually check the operation of the cooling system. When the engine is started, make sure a steady stream of water is present.

## CAUTION

**DO NOT operate an engine out of the water, even momentarily. Water must be supplied to the cooling system of the power head and water pump, or serious damage will result. If it is necessary to run the engine out of the water, connect it to a engine flush attachment design for your specific engine.**

If the boat is used in salt or badly polluted water, flush the engines after each use to reduce corrosion. Refer to the engine owner's manual for the proper engine flushing procedure.

## 1.5 Propellers

The propellers convert the power of the engines into thrust. Propellers vary in style, diameters and pitch. The best set for your needs will depend on your application and expected average load. Propeller sizes are identified by two numbers stamped on the prop in sequence; the first is the diameter and the second is the pitch (example 14 x 21). Pitch is the theoretical distance the propeller will travel in one rotation. Repair or replace a propeller immediately if it has been damaged. A damaged propeller can cause

vibration that can be felt in the boat and can damage the engine gear case. Refer to the engine owner's manual for information on propeller removal and installation.

## 1.6 Engine Instrumentation

The helm station is equipped with a set of engine instruments and alarms. The instruments allow the operator to monitor the operational conditions of the engines. Monitoring the instrumentation allows the operator to operate the engines most efficiently and prevent serious costly damage. The instrumentation is unique to the type of outboard engines installed on your Pursuit. Your boat may not be equipped with all of the following gauges.

**Some models may be equipped with Yamaha Command Link Integrated Information System®. Refer to the Yamaha manuals for information on the operation of this system.**

### Tachometer

The tachometer displays the speed of the engine in revolutions per minute (RPM). This speed is not the boat speed or the speed of the propeller. The tachometer may not register zero with the key in the "OFF" position.

### NOTICE

**DO NOT exceed maximum recommended engine RPM. Exceeding, maintaining or close to maintaining maximum can reduce engine life.**

### Speedometer

The speedometer indicates the speed of the boat in miles per hour (MPH). Most speedometers measure the water pressure against a small hole in a pick-up tube located in the engine lower unit or from GPS in a Yamaha® installation.

### Temperature Warning

The temperature warning indicates the temperature of the engine. A sudden increase in the temperature could indicate an obstructed water inlet or an impeller failure.

### NOTICE

**Continued operation of an overheated engine will cause severe engine damage. If the engine overheats, shut off the engine, investigate the problem and correct it.**

### Fuel Gauge

The fuel gauge indicates the approximate fuel level in the fuel tanks. This gauge is a relative indication of the fuel supply available; it is not a calibrated instrument. On Yamaha equipped boats, fuel level is displayed in the speedometer.

### Voltmeter

The voltmeter displays the voltage for the battery and the charging system. The normal voltage for a full charged battery is 12.6 volts with the engine(s) off and 13 to 14.5 volts with the engine(s) running.

### Hourmeter

The hourmeter keeps a running total of engine hours while operating.

### Tilt/Trim Gauge

The tilt/trim gauge monitors the position of the outboard engine. The upper range of the gauge indicates the tilt, which is used for shallow water operation, trailering and to keep the gear case out of the water. The lower range indicates the trim position. Trim is used to adjust the hull angle while operating your boat on plane. Refer to the engine owner's manual for more information on the operation of the outboard power tilt and trim.

## Engine Alarms

Most outboards are equipped with an audible alarm system mounted in the helm area to monitor selected critical engine systems and functions. The alarm will sound if one of these systems begins to fail. Refer to the engine owner's manual for information on the alarms installed with your engines.

### CAUTION

**If an engine alarm sounds, shut off the engine, investigate the problem and correct it.**

## Fuel Management

Fuel management systems are standard equipment with some outboard engines. On Yamaha® engines, the fuel management gauge is a multifunction gauge used to monitor fuel consumption of the engines. If your boat is equipped with this system, refer to the engine or fuel management manual.

## Instrument Maintenance

Electrical system, instruments and ignition circuitry are protected by a circuit breaker or fuse located on the engine. The ignition switches and all instruments, controls, etc. must be protected from the weather when not in use. Excessive exposure can lead to gauge and ignition switch failures.

Moisture may fog the inside of the gauge lens. Turning the gauge lights on will help dry the lenses. Fogging will normally not harm the gauges, but if the fogging continues and moisture accumulates, the excess water can damage the gauges. The gauges are designed with drain holes to reduce the accumulation of moisture. Make sure that if a gauge is removed, it is reinstalled with the drain holes in the proper position.

## Helm Systems

### 2.1 General

The helm controls consist of engine throttle and shift controls, steering system, trim tab control switches, optional spotlight and the optional bow thruster controls.

Each manufacturer of the control components provides an owner's manual with its product. It is important that you read, understand and become familiar with the proper care and operation of all control systems.

### 2.2 Helm Access

The helm and engine controls are located on an opening helm station. The helm station is hinged at the bottom and opens to provide access to service the helm equipment. To open, slide the seat back, tilt the steering wheel to the full upright position and open the latches securing the helm in place. A strap holds the helm in the open position. To secure the helm in place, close the helm and secure the two latches. The helm station must be secured before operating or transporting your boat, injury or damage can occur. Do not open helm station with engines running; accidental engagement of shift and throttle can occur.

### WARNING

#### **LOSS OF CONTROL AND UNSAFE BOAT HAZARD**

**Hazard from improper securing of helm is hazardous and can cause death or serious injury from sudden loss of control. Make sure the helm is secure before getting underway and during transporting the boat.**

### 2.3 Engine Throttle and Shift Controls

The shift and throttle controls on your boat may vary depending on the engines. The following control description is typical to most outboard remote controls. Refer to the engine or control manuals for specific information on the controls installed on your Pursuit.

The helm on your Pursuit is designed for a binnacle style control with a single gear shift and a throttle lever for each engine; a position for neutral (straight up and down), forward position (first detent forward of neutral) and reverse position (the first detent aft of neutral). Advancing the control lever beyond the shift range will advance throttle, forward or reverse. Each control is equipped to allow the engine to be operated above idle RPM while in neutral for cold starting or warming up.

**⚠ CAUTION**

Avoid possible injury or engine damage when shifting:

- Pause in neutral before shifting from FORWARD to REVERSE, or REVERSE to NEUTRAL.
- DO NOT shift into reverse while the boat is traveling forward at speed.
- Keep area around shifter control clear of obstructions.

**⚠ WARNING**

Test the neutral safety switch periodically. If the switch is not operating properly, DO NOT use the boat. Contact your Pursuit Dealer and have it repaired. A neutral safety switch not operating properly can allow the boat to start in FORWARD or REVERSE causing sudden boat movement and throwing operator and passengers.

**2.4 Neutral Safety Switch**

Every control has a neutral safety switch to prevent the engine from being started while in gear. Control or cable adjustments must be performed if the engine will start in forward or reverse.

Test the neutral safety switches periodically to ensure they are operating. To test the neutral safety switches; tilt the engines down and move the shift levers to the forward position, past first detent. DO NOT advance past the idle position. Turn the ignition key to the start position. The starter should not engage for either engine. Repeat test with the shift levers in reverse and the engine throttles at idle, the starter should not engage for either engine. If an engine starts in gear during this test, immediately move the control levers to the neutral position and turn the engine off. Ejection or sudden loss of control can occur if an engine can start in gear and neutral safety switch system does not function properly.

**⚠ WARNING****LOSS OF CONTROL AND UNSAFE BOAT HAZARD**

A neutral safety switch that does not function properly can cause death or serious injury. DO NOT operate the boat if the switch does not function properly.

**2.5 Engine Power Tilt and Trim**

All outboard engines used on your boat have a tilt and trim feature. The tilt and trim switches are usually built into the engine shift and throttle controls and allow the operator to control the position of the outboards from the helm. Moving the gear cases closer to the boat transom is called trimming “in” or “down.” Moving the gear cases away from the boat transom is called trimming “out” or “up.” In most cases, the boat will perform best with the outboards adjusted so the hull will run at a three to five degree angle to the water.

The term “trim” generally refers to the adjustment of the outboards within the first 20 degree range of travel. This is the range used while operating your boat on plane. The term “tilt” refers to adjusting the outboards further up for shallow water operation, trailering or “tilting” the outboards out of the water. Refer to the engine owner’s manual for information on the proper use and maintenance of the power tilt and trim.

## ⚠ CAUTION

The outboard hoses and cables or the transom gel coat can be damaged if the engine(s) are tilted to full up position or turned in the wrong direction. Turn the steering wheel completely to one direction or the other before tilting up to determine which direction is best for your boat.

## 2.6 Engine Stop Switch

Your Pursuit is equipped with an engine stop switch and lanyard located on the helm. For additional protection the engine well access door is also equipped with an engine stop switch. Do not enter the engine well area while the engines are running. When the lanyard is pulled away, it will shut off the engines.

## ⚠ WARNING

### LOSS OF CONTROL AND UNSAFE BOAT HAZARD

An engine stop switch system that does not function properly or is not used can cause death or serious injury. **DO NOT** operate the boat if the emergency stop switch system does not function properly.

Attach the engine stop switch lanyard to a strong piece of clothing on the operator. The engines will not start if the clip is not inserted into the stop switch. Make sure the lanyard is properly attached to the engine stop switch before attempting to start the engine.

DO NOT use the switch to stop the boat under normal operation. Test the switch periodically, if the switch is not operating properly, DO NOT use the boat. Contact your Pursuit Dealer and have it repaired.

Refer to the engine owner's manual for more information on the engine stop switch.




Engine Stop Switch Lanyard (Typical)

## 2.7 Automatic Fire Extinguisher System (with Generator)

This system protects the machinery space in the case of fire. The helm mounted display provides systems status - charged (visual), discharged (visual and audible) -and an override switch to allow for engine restart.

Generator blower operation is required after the fire suppression system discharges. To operate blower reset the system. Run the blower for four minutes before opening generator compartment to evacuate the fire suppression agent.

For additional important information on this system, read Automatic Fire Extinguishing System in the Safety Equipment and the automatic fire extinguisher owner's manual in the Generator Compartment of this binder.

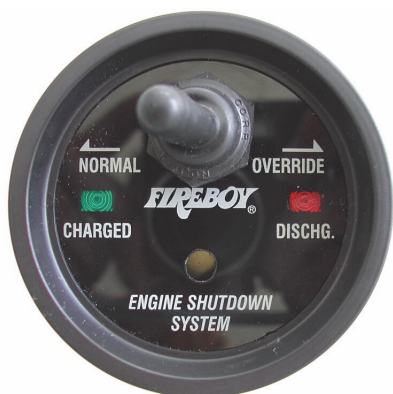

Automatic Fire Extinguisher Display Unit

## 2.8 Steering System

The steering system is hydraulic and made of two main components: the helm assembly and the hydraulic cylinder. The helm unit acts as both a fluid reservoir and pump. Turning of the helm, or steering wheel, pumps the fluid in the hydraulic hoses and activates the hydraulic cylinder causing the motors to turn. A slight clicking sound may be heard as the wheel is turned. This sound is the opening and closing of valves in the helm unit and is normal. Refer to the steering manufacturer owner's manual for specific information on the steering system.

Dual engine outboards are coupled at the tiller arms by a tie bar. The outboards must be aligned with each other to provide maximum stability on straight ahead runs and proper tracking through corners. If damage has ever occurred with the outboards or steering system, the outboards may have to be realigned.

### CAUTION

Some autopilot systems have engine position sensors mounted to the hydraulic steering cylinder. The sensor bracket can contact the transom when the engines are fully tilted up and damage the autopilot, engine rigging or transom. Monitor the bracket and rigging while engines are tilting to determine the best position for your application.

## Power Steering

The power steering system uses an electrically controlled hydraulic pump to provide power to the standard hydraulic steering system. Additional components are a helm mounted power steering switch and a hydraulic pump. The switch activates the power steering feature. Manual steering is always available regardless of the switch position. To reduce the sensitivity of the steering, turn off the power steering at low speeds. To conserve battery power, because of limited engine charging output, during extended periods of slow speed operation, the power steering should be turned off. Refer to the Teleflex® Power Assist manual for more information.

## Yamaha Helm Master (Optional)

The Yamaha Helm Master system is an option. **Before using this system, you should carefully review the Yamaha Owner's Manual for important safety warnings and information, including important operating information and instructions.**

### NOTICE

If your boat is equipped with the Yamaha Helm Master system it is very important to install the trailering clips on each steering cylinder when transporting the vessel. Failure to do so can cause damage to the engine cowlings.



## ⚠ CAUTION

Ensure steering lock clips are removed **BEFORE** operating boat. Failure to remove steering lock clips may result in no steering control and potential injury.

### Tilt Helm

A tilt helm, steering wheel may be installed on your boat. To tilt the helm, depress the lever located in the base of the helm and lock into position. **DO NOT** adjust when the boat is underway.

### 2.9 Trim Tabs

The trim tabs are recessed into the hull on the transom. Switches are used to control the trim tabs. The switches are labeled and control bow up and down movements. They also control starboard and port up and down movements. Bow up and bow down will control the hull planning attitude, while port and starboard up and down provide control for the hull trim side to side.

Before leaving the dock, make sure that the tabs are in the full "UP" position by holding the control in the bow "UP" position for ten seconds. Do not continue to operate the switch when the tabs are fully up or down.

Establish the intended heading and cruise speed before attempting to adjust the hull attitude with the trim tabs. Always make slight adjustments to reduce over adjustments. After stabilizing speed and direction, move the trim tabs to achieve a level side to side running attitude being careful not to over trim.

After depressing a trim tab switch, always wait a few seconds for the change in the trim plane to take effect.

Avoid depressing the switch while awaiting the trim plane reaction. By the time the effect is noticeable the trim tab plane will have moved too far and the boat will be in an overcompensated position.

When running at a speed that will result in the boat falling off plane, lowering the tabs slightly, bow down, will improve the running angle and operating efficiency. Too much bow down tabs can reduce operating efficiency and cause difficult steering and handling.

When running at high speeds, make sure the tabs are in the full "UP" position. Only enough trim plane action should be used to compensate for any listing. Trim tabs are more sensitive at higher speeds. Adjust for this and be prepared to slow down if difficulties arise.

Be extremely careful when operating in a following sea. The effect of trim tabs is amplified under these conditions. Difficulty in steering and handling can result from improper trim tab usage, especially in a following sea; raise the tabs to the full bow "UP" position.

When running into a chop, a slight bow down attitude will improve the ride. Be careful not to over trim, difficulty in handling can result.

### Trim Tab Indicator



**Trim Tab Switches**

The switches are labeled to indicate the reaction of the bow of the boat. The L.E.D. displays indicate the position of the trim tabs. When adjusting the starboard bow up or down, the L.E.D. indicator on the right side of the panel will activate, indicating the movement of the port tab. Refer to the trim tab operation manual.

## 2.10 Compass

The compass is located at the helm. To adjust the compass, read the instructions on “Compass Compensation” included in the literature packet. The compass cannot be adjusted accurately at the factory as it must be compensated for the influence of the electrical equipment and electronics unique to your boat. The compass should be adjusted by a professional after the electronics and additional electrical accessories are installed and before operating the boat.

## 2.11 Bow Thruster (Optional)



**Bow Thruster Control**

The bow thruster is electrically driven and controlled by a joystick on the helm. The main breaker and battery are located under the starboard side of the V-berth. The bow thruster is powered from the house battery. Operate in short bursts of a few seconds to preserve battery life. Refer to the bow thruster manual for more information, maintenance and warranty information.

### **⚠ WARNING**

**ROTATING PARTS HAZARD**  
A rotating bow thruster can cut, entangle or draw a swimmer closer or into the thruster causing death or serious injury. DO NOT use the bow thruster near swimmers.

### **⚠ CAUTION**

**DO NOT operate bow thruster out of the water, even momentarily. Water must be supplied to prevent impeller from over speeding, which will result in serious damage and void the warranty.**

## 2.12 Control Systems Maintenance

### Control Maintenance

Periodic inspection of the control systems and all connections should be made. Signs of rust, corrosion, wear, or other deterioration must immediately be serviced. Periodic lubrication of all moving parts and connections with light waterproof grease is required.

Control system adjustments may become necessary. If adjustments are necessary, see your Pursuit Dealer.

### Steering System Maintenance

Periodically inspect all steering hoses, linkages and helm assemblies. Signs of corrosion, cracking, loosening of fastenings, excessive wear, or deterioration must be corrected immediately. Check the hydraulic steering fluid level frequently and maintain the proper level. Periodic lubrication of all moving parts and connections with light waterproof grease is required. Failure to do so can lead to steering system failure and result in loss of control.

When new, or after repairs, hydraulic steering systems may need to be purged of air. Refer to the information provided with the steering system for specifications and service information. Check steering operation and visually inspect for loose or missing hardware before operating the boat. If you suspect the steering system is damaged, see your Pursuit dealer. DO NOT operate the boat if you suspect the steering system is malfunctioning.

## **WARNING**

### **LOSS OF CONTROL AND UNSAFE BOAT HAZARD**

Improper maintenance of steering system is hazardous and can cause death or serious injury from sudden loss of control. Make sure all steering hardware, cables and fluid levels are regularly inspected and maintained.

**DO NOT** attempt to service any part of the steering system unless you are familiar or qualified to do so. Follow all instructions regarding maintenance procedures in the steering system owner's manual.

### **Trim Tab Maintenance**

Marine growth can affect the operation of the trim tab planes and actuators. To help reduce marine growth, return the trim tabs to the full "UP" position after operating the boat. Inspect and clean the actuators and planes regularly.

The trim tabs also include a zinc anode to help prevent galvanic corrosion. Galvanic corrosion occurs when different metals are submerged in an electrolyte. Sea water is an electrolyte and submerged metal components must be protected. Anodes were factory installed and need to be replaced when they are 75% of their original size.

Refer to Routine Maintenance for information regarding zinc anodes and the trim tab owner's manual for additional maintenance information, fluid specifications and operating instructions.



## Fuel Systems

### 3.1 General

The fuel system of your Pursuit boat is designed to meet the requirements of the U.S. Coast Guard, Environmental Protection Agency (EPA), National Marine Manufacturers Association (NMMA), and American Boat and Yacht Council (ABYC) in effect at the time of manufacture.

Pursuit Boats has engineered an improved fuel tank fill and vent system that will reduce or eliminate fuel spillage when re-fuelling the boat with a standard automatic shut-off fuel fill nozzle provided by marinas and gas stations. This is in accordance to EPA regulations. While this system provides a clean consistent refueling experience, it still requires the operator's attention and must not be defeated by attempting to over-fill the tank with fuel. This system will automatically provide the proper air space (approximately 5% of total tank volume) in the fuel tank to accommodate the expansion of fuel during daily temperature cycles.

This new EPA compliant fuel system is engineered to vent through a carbon canister when the fuel cap is installed. This will greatly reduce fuel vapors that escape to the atmosphere and reduce the fuel odor that was present on traditional systems. For that reason, the fuel cap has been changed to help the operator verify the cap is properly closed.

The fuel system was factory inspected and pressure tested in accordance with regulations in effect at the time of manufacture. It is the responsibility of the boat owner to maintain the safe condition of the system. Inspect the system frequently to ensure no deterioration or loosening of connections has occurred.

### DANGER

#### FIRE/EXPLOSION HAZARD

Fuel and their vapors are highly explosive when exposed to open flame or spark, resulting in death or serious injury.

- Make sure no vapors are present before turning on electrical equipment or starting engines.
- Make sure fuel is added to the fuel tank only. **DO NOT** confuse other deck fills with fuel fills.
- **DO NOT** remove anti-siphon valves from the system.
- Turn off all electrical switches before servicing the fuel system.
- **DO NOT** drain any fuel in the bilge.
- Check all fuel lines and fittings for leaks before and after starting the engines and after any fuel system service.
- Prime fuel system and check all fittings for leaks before and after starting the engines.
- **DO NOT** block fuel vents.
- **DO NOT** store fuel in any containers or compartments not designated for fuel storage.

### NOTICE

Certain bulkhead areas are sealed following U.S. Coast Guard regulations at the date of manufacture. Any modifications must be in accordance with the regulations.

### 3.2 Fuel System



**Fuel Tank Shut Off Valves**

The fuel system on your Pursuit boat has a single fuel tank and two manual “ON/OFF” fuel valves. Refer to the Schematics section. The valves can be accessed from the machinery space by reaching over the top of the forward bulkhead, starboard of the ladder. The valves are off when the handle is perpendicular to the fuel flow.

The fuel valves on the tank are labeled port (red band) and starboard (green band). The labels refer to the engine the valve supplies.

All boats equipped with gasoline engines are required to have anti-siphon valves by the U.S. Coast Guard. The fuel delivery lines are equipped with anti-siphon valves where the lines attach to the fuel tanks. These valves help prevent gasoline from siphoning out of the fuel tank should a line rupture.

DO NOT remove anti-siphon valves from system. Anti-siphon valves prevent fuel from flowing into bilge should a fuel hose or fitting leak. If the valve becomes clogged, clean and reinstall or replace it.

#### Fuel Tanks

The fuel pick-up tubes are positioned in the tanks to achieve optimum fuel usage, fuel line routing, etc. At certain speeds and hull trim angles, the fuel supply at the withdrawal tube can increase or decrease accordingly. Be extremely careful when attempting to operate the boat when low on fuel. Though some fuel may be in the tank, the trim angle of the boat may cause the fuel to flow away from the pickup tubes.

#### Fuel Gauge Senders

The fuel gauge senders are more accurate when the boat is stationary and level. Because of the change in attitude when the boat is underway, variations in gauge readings can occur. This system is a relative indication of the available fuel supply and not a calibrated instrument.

#### Fuel Fills

A fuel fill is located on each gunwale and is marked “GAS.” The fuel fill is opened by turning it counterclockwise. After fueling, screw the cap on in a clockwise direction until an audible click is heard indicating that the cap is seated. If the cap is lost or damaged replace only with original equipment. During refueling the tank vents out at both the fuel fill plate and the vent located on the side of the hull. Note: There should not be any residual fuel at the vent but there could be residual fuel at the deck fill plate. Do not block or restrict either of these vents.

Fill the fuel tank slowly and monitor the fuel gauge while filling. Once fueling is completed wash the areas around the fuel fill(s) to help reduce discoloration of the fiberglass or striping. Use only the fuel recommended by the outboard manufacturer; refer to the engine owner’s manual for additional information.

If fuel is added to any other tank, DO NOT attempt to pump fuel out, these systems are not designed to pump fuel. Fuel must be removed by qualified personal only. Fuel in other systems will also require replacement of that system and/or many components.



**EPA Fuel Fill**

## Fuel Filters



**Fuel Filters**

Fuel filters are located in the machinery space. The filters are the water separator type and there is one filter for each engine fuel line. Check both filters for water frequently to ensure an adequate supply of clean, dry fuel to the engines. The filter elements should be changed once a season. Fuel primers are connected to the outlet side of each fuel filter.

Turn off all electrical switches before servicing the fuel system and DO NOT drain any fuel into the bilge. Check all fuel lines and fittings for leaks before and after starting the engines and after any fuel system service. Prime fuel system and check all fittings for leaks before starting the engines.

### 3.3 Diesel Generator Fuel System

The diesel generator is equipped with a separate 24-gallon fuel tank. The fuel filter is located in the mechanical space. The tank is filled through a deck fill marked "DIESEL" on the starboard gunwale. The fuel gauge for this tank is part of the generator panel. The fuel level may be read, without starting the generator, by turning the panel on.



**Generator Panel**

### CAUTION

**DO NOT confuse the diesel and gas fuel fills; severe engine damage will result.**

The diesel fuel system works like the gas system. The difference is, the diesel system is not equipped with anti-siphon valves and there is a fuel return line to return unused fuel to the fuel tank. The diesel system may require priming after servicing. Refer to the generator owner's manual for information on priming.

Make sure the fuel valve is in the "ON" position before attempting to start the generator.

A water separator type fuel filter is installed near the diesel fuel tank. The fuel filter has a sediment bowl that must be inspected frequently for water to ensure an adequate supply of clean, water-free fuel is supplied to the engine. Inspect the filter periodically and change the element as needed.

## 3.4 Fueling Instructions

**⚠ DANGER****FIRE/EXPLOSION HAZARD**

Gasoline vapors are highly explosive when exposed to open flame or spark, resulting in death or serious injury.

- Stop engines before fueling.
- DO NOT smoke or allow open flames or sparks nearby, within 50 ft (15 m) of the fueling area.
- Maintain contact between fuel nozzle and fuel tank fill to prevent electrostatic spark. DO NOT use a plastic funnel.
- Fill in an open area.

**BURN HAZARD**

Fuel floating on water which is ignited can cause death or serious injury. Fuel will float on top of water and can burn. If the boat is abandoned, swim upwind, far enough to avoid fuel that can spread over the surface of the water.

Try not to spill fuel. If fuel is spilled, wipe up all traces with dry rags and immediately dispose of the rags properly onshore. DO NOT allow fuel to stay on the finish of the boat, discolor and damage to trim can occur. Avoid fueling at night, except under well-lighted conditions. Also, monitor fuel level gauge to avoid overfilling.

**⚠ CAUTION**

Use only the fuel recommended by the engine manufacturer. Use of old, contaminated fuel can cause the engine to malfunction or severe damage. Do not use fuel that contains more than 10% ethanol, harsh additives or methanol; damage to the engines and fuel system will result. Fuel system damage, related to use of alcohol-blended fuels, is not covered by the Pursuit Limited Warranty. Refer to the engine owner's manual for specific fuel requirements for your engines.

## To fill fuel:

1. Turn all switches to "OFF."
2. Secure boat.
3. Remove passengers from boat.
4. Extinguish all flame producing items.
5. Open fuel fill(s) by turning counterclockwise.
6. Put nozzle in the fuel fill opening.
7. The fuel delivery system will shut off when the tank is filled to the proper capacity.
8. Remove the nozzle.
9. Install and tighten fuel cap until it clicks.
10. Check the fuel compartment and below the deck for fuel odors. If you smell fuel, DO NOT start engines.

## 3.5 Fuel System Maintenance

**⚠ DANGER****FIRE / EXPLOSION HAZARD**

Fuels are extremely flammable and highly explosive under certain conditions. DO NOT smoke or allow open flames or sparks nearby when inspecting the fuel system.

Frequently check fuel lines and all system components (filters, primer bulbs, clamps and connections) for leaks, damage or deterioration, or if you suspect damage, replace as necessary. Surface cracking on a hose indicates wear. Replace it.

Spray the valves, fuel tank gauge sender and ground connections with a metal protector.

Inspect the fuel fill cap o-ring seals frequently and lubricate with petroleum jelly or silicone grease. The o-ring seal prevents water from entering the fuel system through the fuel fill cap. If the o-ring is damaged, or you suspect it is damaged, replace it.

Old, degraded gasoline can affect engine performance and damage the engine and boat fuel system. Chemical changes occur as gasoline ages, reducing octane and can cause deposits and varnish in the fuel system.



If your boat is not operated enough to require at least one full tank of fresh fuel a month, a fuel stabilizer should be added to the gasoline to protect the fuel from degrading. Do not allow the boat to sit unused for an extended period with the fuel tanks less than 3/4 full. Changes in temperature and weather conditions can cause condensation in fuel tanks. Your Pursuit dealer or the engine manufacturer can provide additional information on fuel degrading and fuel stabilizers recommended for your engine.

Improper storage of fuel at marinas, limited boat usage, etc. can cause the fuel to become contaminated. Periodically, it may be necessary to pump accumulating water and contaminated fuel from the bottom of the fuel tanks. If the fuel system on your boat becomes contaminated, contact your dealer or marina for assistance.

Avoid using fuels with alcohol additives. Alcohol blend gasoline will absorb moisture from the air which can reach such concentrations that "phase separation" can occur where the water and alcohol mixture becomes heavy enough to settle out of the gasoline to the bottom of the tank. Since the fuel pickup tubes are near the bottom of the tank, phase separation can cause the engine to run very poorly or not at all. Phase separation is more severe with methyl alcohol and will increase as the alcohol content increases. Water or a jelly like substance in the fuel filters is an indication of phase separation from the use of alcohol blended fuels.

Diesel engine operation requires a good supply of clean, water-free diesel fuel. Algae can grow in the accumulated water in the diesel fuel tank. This will normally occur in warm climates. Adding a high quality diesel fuel additive containing an algaecide periodically may be required to control algae in your diesel system, depending on your boating area. Contact your Pursuit Dealer or engine manufacturer for additional information regarding fuels and additives.



## Electrical Systems

### 4.1 General

Your Pursuit boat is equipped with DC and AC electrical systems. The DC system draws current from onboard batteries. The AC system can draw current from either shore power outlets at dockside or the generator.

Electrical schematics are included in this manual to assist technicians in the servicing the electrical systems. Pursuit recommends you take your boat to an authorized Pursuit dealer for service or installation of additional electrical equipment. Pursuit reserves the right to modify or update the electrical system at any time without notice to the consumer or obligation to make updates to boats built prior to the change.

Some compartments on your boat may be lighted. Lights bulbs produce heat and can ignite combustible products. Turn off all lighting before you leave the boat.

#### **WARNING**

**FIRE OR EXPLOSION HAZARD**  
Ignited combustible products can cause fire or explosion, resulting in death or serious injury. **DO NOT** store combustibles near lights and turn off all lighting before leaving the boat.

### 4.2 DC System

#### Batteries

The 12-volt batteries have been selected to provide optimum performance for engine starting, and house and electronics loads. There are 5 batteries; 2 Group 27 lead acid for the engines and 2 Group 31 AGM for house and electronics all located in the machinery space and a Group 31 AGM for the bow thruster located under the starboard side of the V-berth. The AGM batteries are maintenance free. A circuit breaker on each engine protects the engine ignition systems and gauges. Refer to the engine owner's manual for information on the circuit breakers installed on your engines.


#### DC Distribution

The 12-volt DC system batteries are charged by the engine charging system or the battery charger when connected to shore power or when operating the generator. 12-volt power is distributed to the battery switches and breakers on the Main Distribution Panel (MDP) located at the end of the L-lounge that protect the switch panels on the helm and in the cabin. The battery voltage for the house and electronics batteries is monitored using the volt meters on the MDP. The engine battery voltage is monitored on the engine display.


The circuit breaker on each engine protects the engine ignition systems and gauges. Refer to the engine owner's manual for information on your engines.

## Main Distribution Panel (MDP)

### ELECTRONICS & HOUSE

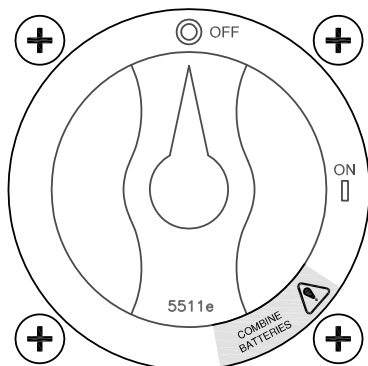

### PORT & STBD ENGINES

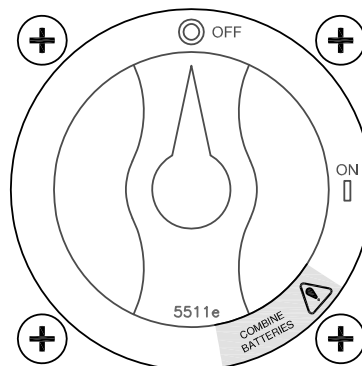

HOUSE

12.40

ELECTRONICS

12.40

HOUSE BATTERY METER	ELECTRONICS BATTERY METER	PORT BATTERY CHARGER	STBD BATTERY CHARGER	ELECTRONICS PORT BATTERY ISOLATOR	ELECTRONICS BATTERY CHARGER	HOUSE STBD BATTERY ISOLATOR	HOUSE BATTERY CHARGER	HIGH WATER ALARM
5A	5A	40A	40A	50A	40A	50A	40A	20A

V1D1B60 ON-OFF

BOW THRUSTER BATTERY

ELECTRONICS MAIN	HOUSE MAIN	HELM MAIN	COCKPIT AMP	CABIN AMP	VACUFLUSH	HEAD MACERATOR	CABIN FRIDGE	COCKPIT FRIDGE
50A	50A	50A	60A	30A	10A	25A	20A	20A

WINDLASS

BUSS MRCB

70A

WEATHERPROOF LIGHTEN PROTECTIVE

FWD BILGE	AFT MANUAL BILGE	AFT AUTO BILGE	H.W. BILGE ALARM	SUMP	CABIN STEREO MEMORY	FWD CO DETECTOR	AFT CO DETECTOR	HATCH	TRIM TABS	SPOT LIGHT	HEAD FAN	CABIN 1 USB CHARGERS	CABIN 2 USB CHARGERS
5A	10A	10A	5A	5A	10A	5A	5A	20A	20A	15A	5A	10A	10A

CABIN 1	CABIN 2	HELM 1	HELM 2	STEREO	ANTENNA	ELECTRIC TABLE	COMPANION WAY LIGHTS	HEAD LIGHTS	AFT BERTH LIGHTS	FWD BERTH LIGHTS	LOCKER LIGHTS	BLOWER 1 GENERATOR	BLOWER 2 GENERATOR
15A	15A	15A	15A	5A	5A	25A	10A	10A	10A	5A	10A	5A	5A

HORN	NAV / ANCHOR	FRESH WATER	RAW WATER	HATCH CONTROL	BLOWER 1 ENGINE HATCH	BLOWER 2 ENGINE HATCH	WINDLASS	ACCY	ACCY	ACCY	CABLE REEL
10A	10A	15A	15A	5A	15A	15A	5A	10A	10A	10A	20A

WASHER	PORT WIPER	STBD WIPER	COCKPIT LIGHTS	HARDTOP LIGHTS	SPREADER LIGHT	UNDER WATER LIGHTS	PANEL LIGHTS	MACH. SPACE LIGHT	ACCY	ACCY	SPARE
10A	7A	7A	10A	10A	10A	20A	5A	5A	10A	10A	10A

## Battery Switch Panel Feeds



**Battery Switch Panel Feeds**

The house and electronics breakers disconnect ALL battery power to the electronics and house battery switch. These breakers are located in the machinery space. If the boat is stored out of the water, turn off the house and electronics breakers to ensure there is no electrical drain from the associated batteries. Turning off the house main will disable the CO detector, the automatic bilge pumps and high water alarm and cause the stereo memory to be lost. These breakers should NEVER be turned off if the boat is kept in the water as the automatic bilge pumps will not run.

## Battery Switches

There are two battery switches to manage the 12-volt power distribution. One battery switch controls the house battery and the electronics battery. The other battery switch controls the two engine batteries. The electronics and house batteries or the port and starboard batteries can be paralleled by switching to "combine batteries." It is not possible to parallel the engine batteries with the house and electronics batteries.

Make sure the electronics and house and the engines battery switches are in the "ON"

position whenever the engines are running to ensure ALL 12-volt accessories will operate when they are needed. Current is supplied to the CO monitor, the automatic float switches for the bilge pumps, stereo memory, high water bilge alarm and the sump when the batteries are connected and the battery switches are "OFF" (battery switch panel feed breakers must be "ON").

## CAUTION

**DO NOT** operate the boat with the engine battery switch in the combine batteries position.

## Bow Thruster Main

This main fuse provides protection to the bow thruster and its wiring. The fuse is located in the control enclosure adjacent to the bow thruster battery. A spare fuse is also stored in the enclosure.



**Bow Thruster Main**

### Main Breakers

### Electronics Main

This is reserved for electronic accessories installation. An electronic bus is located behind the helm.

### Helm Main

Supplies the 12-volt current to helm and cockpit switch panels.

### House Main

Supplies the 12-volt current to breakers for cabin equipment and the cabin switch panels.

### Windlass Main

The windlass breaker is located on the MDP. Rotate lever to turn off and on. Turn off this breaker when the windlass is not in use to reduce the possibility of accidentally activating the windlass.

### CO Detectors (Forward and Aft)

These breakers supply current to the carbon monoxide detectors. The power indicator on the carbon monoxide detector should be lit whenever someone is occupying the cabin. If the breaker has tripped, it indicates there is a problem with the carbon monoxide detector(s), the breaker or the wiring from the breaker panel to the detector(s). Determine the cause of the problem and correct it before resetting the breaker.

Carbon monoxide detectors are safety devices designed to sound an audible alarm when carbon monoxide is detected in the area of the detector. Carbon Monoxide (CO) gas is colorless, odorless and extremely dangerous. All engines and fuel-burning appliances produce CO as exhaust.

CO detectors are recommended in areas where CO build-up is a possibility, especially in boats having confined areas; such as sleeping quarters, galleys and head compartments.

Check the condition of the CO detector regularly for proper operation. See the manufacturer's instructions for installation requirements and operating instructions.

### **⚠ DANGER**

#### **EXTREME HAZARD**

**Carbon monoxide (CO) gas is colorless, odorless and extremely dangerous. All engines and fuel-burning appliances produce CO as exhaust. Direct and prolonged exposure to CO will cause brain damage or death.**

## 4.3 12-Volt DC Panels

### Helm Switch Panel

The following are descriptions of the components controlled by the helm switches:

### Helm Panel



Helm Panel

### Horn

Activates the boat horn.

### Nav/Anc

Pressing the top of the rocker switch activates the navigation lights. Pressing the bottom will activate the anchor light.

## Power Steering

Activates the power steering feature.

## Fresh Water

Activates the fresh water pump.

## Washdown

Pressing this switch activates the raw water washdown pump.

## Open/Close

Not used.

## Blower

Activates the generator blower located in the machinery space.

## Deploy/Retrieve

Pressing the rocker switch drops (deploys) and retrieves the anchor. Refer to the Windlass in the Exterior Equipment.

## Fwd Bilge or Aft Bilge

Depressing the switch will activate the respective manual pump. If the automatic pump activates, the automatic bilge pump indicator on the switch will light.

## ACCY

This is open and reserved for additional accessories. DO NOT exceed 10 amps.

## Washer

Activates the windshield washer. The fresh water system must be on to operate the washer.

## Port Wiper or Stbd Wiper

Activates the respective wiper.

## Cockpit

Activates lights to illuminate the cockpit area.

## Hardtop Lights

Activates the lights mounted underneath the hardtop. Pressing once is red; pressing again is bright white; pressing the third time is dim white. If lights get out of sequence, depress the switch and hold for two seconds.

## Spreader

Activates the flood lights located on the hardtop.

## Underwater Lights (Optional)

Activates the underwater lights. Use these lights only when the boat is in the water as they rely on water for cooling.

## Panel

Activates the instrument and compass lighting.

## Machinery Space

Activates the light in the machinery space.

## ACCY

This is open and reserved for additional accessories. DO NOT exceed 10 amps.

## Cabin Switch Panel

Switches on the cabin panel operate the interior and accent lighting for the cabin.



**Cabin Panel**

The Electric Table switch on this panel raises and lowers the V-berth table.

**⚠ WARNING**

To prevent serious injury or property damage, clear obstructions around the table before operating the switch to raise or lower the table.

## Head Panel



**Head Switch Panel**


The indicators on this panel display the holding tank level and also includes the holding tank overboard discharge macerator switch. The macerator switch can only be activated when the key switch is fully turned. Refer to Head Compartment of the Interior Equipment.





AC Main Distribution Panel (AC MDP)

#### 4.4 AC System

 **DANGER**

**ELECTROCUTION, FIRE OR EXPLOSION HAZARD**

Contact with live wires or working on an energized electrical system can cause electrocution. It can also cause sparks, resulting in fire and/or explosion. Both cases will result in death or serious injury. **DO NOT** work on an energized system or allow unqualified personnel to work on the system.

The AC electrical system operates on a 240 volt, 50 amp, 60 cycle system. Models with CE designations operate on a 230 volt, 32 amp, 50 cycle system.

The AC system is fed by the shore power or by the generator. Your boat is equipped with an isolation transformer. The isolation transformer maintains correct AC polarity regard-

less of the polarity of the shore power supply and eliminates the need for a galvanic isolation system and a reverse polarity indicator. Refer to the isolation transformer manual for additional information.

The main breakers in the AC Main Distribution Panel (AC MDP) are equipped with a selector slide to prevent the shore power source and the generator source from being energized simultaneously and damaging the electrical system components. These breakers protect the system and components from an overload. All AC current is distributed to the AC components through individual 120V/240V (230V for CE) circuit breakers located in the AC MDP.

#### 4.5 AC Main Distribution

The AC MDP is located in the aft cabin. The following are descriptions of the AC MDP and the breakers that protect the accessories:

### AC Multi-Meter

Use the arrow keys to scroll through digital readouts for amperage (A), voltage (V), cycles (hertz) (Hz) and watts (W).

- (A) Indicates the total amperage being drawn through the AC MDP. It is the total current level of all of the AC equipment in operation at the time.
- (V) Indicates the voltage supplied to the panel. Ideally the voltage should be approximately 240 volts (230 for CE) but never less than 208 volts.
- (Hz) Indicates cycles which should be 60 (50 for CE).
- (W) Indicates total watts being consumed as a result voltage x amperage.

### AC Main Breakers

The shore power or generator main breaker protects the AC distribution. This breaker is very sensitive. The resulting power surge that occurs when connecting the dockside cord or starting the generator may cause the main breaker to trip. To avoid this surge, always turn the selected main breaker to the "OFF" position before plugging or unplugging the shore power cord or starting or stopping the generator.

The following components are protected by either 120 or 240 Volt 60 Hz breakers for domestic models. Certain export models use only 220 Volt 50 Hz breakers for all components:

#### 240 Volt Circuits (Domestic Only)

### Cabin Air Conditioning

Supplies electrical current directly to the cabin air conditioner. This breaker will trip if sea water is not being supplied to the air conditioning unit. If this breaker trips, reset and check for water flow out of the air conditioning thru-hull. Refer to the air conditioner owner's manual for additional information.

### Helm Air Conditioning

Supplies electrical current directly to the helm air conditioner. This breaker will trip if sea water is not being supplied to the air conditioning unit. If this breaker trips, reset and check for water flow out of the air conditioning thru-hull. Refer to the air conditioner owner's manual for additional information.

### Cooling Pump

The breaker supplies power to the cooling pump for the air conditioners. This breaker **MUST** be turned on before operating the air conditioners.

### House Charger

The house 40 amp battery charger charges the house, electronics and bow thruster batteries. This breaker should **ALWAYS** be on whenever the boat is occupied and either the shore power or generator is operating. It is automatic and is equipped with an ammeter to monitor charging. See the battery charger manual for more information.

### Engine Charger

The engine 20 amp battery charger maintains the charge on the engine batteries. It is automatic and is equipped with an ammeter to monitor charging. See the battery charger manual for more information.

### Water Heater

Supplies electrical current directly to the water heater circuit. The water temperature is automatically controlled by a thermostat in the water heater control panel. Before operation, you must have water in the water heater (see the water heater manual for more information).

### Cockpit Grill

Supplies electrical current to the cockpit grill. This breaker should **ONLY** be on when the grill is being used. See the grill manual for more information.

## Stove

Supplies electrical current directly to the galley stove. See the stove manual for more information.

## 120 Volt Circuits (Domestic Only)

### Microwave

Supplies AC current directly to the microwave oven. See the microwave manual for more information.

### Outlets

Supplies electrical current to the cabin electrical outlets. AC electrical outlets are provided with ground fault interrupters (GFI) to protect against electric shock. These outlets should be tested periodically to ensure proper operation by pressing the test/reset buttons in the center of the face plate. GFI outlets do not protect against short circuits and overloads. This is done by the outlet breakers on the AC panel.

GFI outlets do not provide 100% protection from electric shock. Even though ground fault interrupters provide protection by reducing exposure time from line to ground shock hazards, it is still possible to receive an electric shock from defective appliances or power tools and misused electrical equipment.

## 4.6 Battery Charger Operation

Your boat is equipped with two battery chargers. The forty amp charger charges the house, electronics and bow thruster batteries and is calibrated to provide the proper charge levels for AGM batteries. The twenty amp charger maintains the engine batteries and is calibrated to provide the proper charge levels for lead acid batteries. Changing the battery specification will require recalibration of the battery chargers. The battery chargers are located under the mid berth settee.

At dockside, when the boat is connected to shore power, the battery chargers maintain the charge on the house, electronics and bow thruster batteries. When operating on the generator, the house battery charger must be on to maintain charge to the batteries. The generator charging system does not generate enough current to keep up with the electrical demand of the house and electronics batteries.

The wires that supply DC charging current to the batteries are protected by an internal fuse in the battery chargers and three circuit breakers, one for each battery bank output wire. The breakers protect the DC charging circuit from the batteries to the charger. They are located on the MDP. Push to reset the breakers. The internal fuses in the charger protect the DC charging circuit from the charger to the batteries.

## 4.7 Shore Power Connection

### Connecting Shore Power

The shore power system is designed to be connected to a single 240V/50A (230V/32A for CE) shore outlet. Boats equipped with 240V/50A systems are supplied with a reverse Y-adapter to make a connection between the 50 amp shore power cord and two 120V/30A outlets when a 50 amp outlet is not available. These 30 amp outlets must be on separate breakers. No other adapters are recommended or will supply sufficient current to operate the boat's systems.

A Cablemaster system is used to manage the shore power cable. The cable is deployed manually by pulling the cable out to the desired length. It is retrieved electrically with the switch located in the lazarette or the provided key fob remote.



**Reverse Y-Adapter**

Turn the AC main breaker to the “OFF” position. If the dockside outlet(s) includes a disconnect switch(es), turn it to the “OFF” position also.

To avoid strain on the cable make sure it has more slack than the mooring lines. Dress the cable so that it cannot be damaged by chafing between the boat and the dock. Make sure the cable does not come in contact with the water. Then connect the cable to the dockside outlet(s). Tighten the locking ring the shore and the connector plugs. Turn the dockside disconnect switch(es) or circuit breaker(s) to the “ON” position.

### **Disconnecting Procedure for Shore Power**

Turn the main breaker on the AC MDP off and the disconnect switch(es) on the dockside outlet(s) to the “OFF” positions.

Disconnect the cable from the dockside outlet(s) and replace the outlet cover to maintain a water tight seal to the machinery space. Remove reverse Y-adapter from the cable if used.

## **4.8 Generator**

### **⚠ DANGER**

#### **ELECTROCUTION HAZARD**

Exposure to high voltage will cause death or serious injury. **DO NOT** attempt to correct wiring yourself. **DO NOT** swim in marinas or near boats connected to shore power. Keep children away from any electrical cables or equipment and use grounded appliances onboard only.

Your Pursuit is equipped with a diesel generator. The generator is equipped with an automated start-up sequence to prevent overcranking which can lead to engine damage and to ensure that the generator is up to operating temperature before the electrical load is applied. The display on the generator panel provides detailed information on the operating status of the generator. Refer to the generator owner's manual for complete explanation on the operation and interpretation of the displayed data.

Because of the number of DC systems on this boat that can be in operation, a significant drain on the batteries can occur. Depending on the RPM and the duration of operation of the engines, the engines' charging systems may not be able to keep up with the DC electrical demand particularly when the engines are run at low RPM for extended periods. To ensure that the batteries remain at peak charge, Pursuit **strongly** recommends that the generator be run whenever the boat is in use and not connected to shore power. It is important to activate the house battery charger to maintain the house, electronics and bow thruster batteries whenever the generator is running.

The generator is located in an enclosure in the machinery space. The generator compartment is equipped with an automatic fire extinguisher system and an automatic engine shutdown system. Refer to the Safety Equipment chapter.



**Generator Panel**

Fuel injected generators require bleeding of air from the fuel delivery system prior to initial start-up. Bleeding of the fuel system will also be required if the generator is allowed to run out of fuel. Continued attempts to start the generator without bleeding the fuel system under these circumstances can lead to engine damage or erratic operation. This procedure must be completed by your servicing dealer.

### AC Power Selector Switch

The main breakers in the AC Main Distribution Panel (AC MDP) are equipped with a selector slide to prevent the shore power source and the generator source from being energized simultaneously and damaging the electrical system components. Turn the generator breaker to the "OFF" position before starting the generator. After starting the generator, monitor the display to determine that the operating voltage and hertz have stabilized. Then turn the breaker to the "ON" position.

## ⚠ NOTICE

**DO NOT** allow the generator to run out of fuel. Fuel injected generators require air to be removed from the fuel delivery system before initial start-up or if the generator is allowed to run out of fuel. Continued attempts to start generator with air in the fuel system can lead to engine damage or erratic operation. Air must be purged by your servicing dealer only.

## ⚠ CAUTION

**DO NOT** start generator with selector switch in the "GENERATOR" position. Allow generator to warm-up three to four minutes before transferring the electrical load. After warm-up, place switch in "GENERATOR" position.

## 4.9 Electrical System Maintenance

### 12-Volt DC Electrical System Maintenance

At least once a year, spray all exposed electrical components behind the helm and in the plugs with a protector specific for electrical connections. Exterior light fixture bulbs should be removed and the metal contact areas coated with a non-water soluble lubricant like petroleum jelly or silicone grease. The sockets should be sprayed with a protector. **DO NOT** get any oil or petroleum jelly on the glass portion of the bulbs; this will cause the bulb to overheat and burn out.

## ⚠ CAUTION

**Use exact replacement light bulb; a different bulb can cause fixture to overheat, melt or short circuit.**

Make sure to check that all below deck wiring is properly supported, the insulation is sound and there are no loose or corroded terminals. Clean any corroded terminals thoroughly with sandpaper, or replace them. Tighten securely and spray with a metal and electrical protector. Inspect all engine wiring.

Check the electrolyte level in the batteries regularly and add distilled water as necessary. If the batteries are frequently charged by a battery charger, check the electrolyte level more often. The correct fluid level in the cells is approximately  $\frac{1}{4}$  to  $\frac{1}{2}$  inch above the plates. If fluid is needed, fill to the proper level with distilled water **ONLY**. **DO NOT** overfill. Some batteries are sealed and cannot be filled.

Keep the tops of any battery clean and dry. Dirt and water can conduct electricity from one post to the other and can cause battery discharge or cause errant engine warnings.

Keep the battery posts free of corrosion. **DO NOT** use wing nuts to attach battery cables. Remove the cables and clean the posts and cable clamps with a battery post cleaner or sandpaper as required. Coating the battery posts and cable clamps with petroleum jelly or silicone grease will help protect and reduce corrosion. Battery cables, both positive and ground must be replaced when they show signs of corrosion or fraying. Deteriorated cables cause a considerable voltage loss when high currents are drawn, as for starting the engine.

### **DANGER**

**FIRE OR EXPLOSION HAZARD**  
Explosion or fire from hydrogen gases produced by lead acid batteries will cause death or serious injury. **DO NOT** smoke or bring a flame near battery storage area. If ignited by a spark or flame, gas may explode violently, causing spraying of battery acid or fragmentation of the battery.

### AC Electrical System Maintenance

Inspect all wiring insulation for nicks, chafing, brittleness, improper support, etc. periodically. Also, inspect portable appliance cords and plugs.

Examine the shore power cord for cracks in the insulation and corrosion in electrical connectors. Spraying receptacles and electrical connections with an electrical contact cleaner or a metal and electrical protector will help reduce corrosion and improve electrical continuity.

### **DANGER**

#### **ELECTROCUTION, FIRE OR EXPLOSION HAZARD**

**Contact with live wires or working on an energized electrical system will cause electrocution. It can also cause sparks, resulting in fire and/or explosion. Both cases will result in death or serious injury. DO NOT work on an energized system or allow unqualified personnel to work on the system.**

### GENERAL PRECAUTIONS

- **DO NOT** work on an energized system; make sure all power sources are off.
- **DO NOT** allow unqualified personnel to perform electrical maintenance; only a qualified marine electrician should work on the electrical system.
- **DO NOT** work in a wet area.
- Use caution when connecting wires to avoid reversing polarity.
- **DO NOT** alter wires, connectors or use inferior parts; use OEM replacement parts only.

Corrosion on the electrical connectors can cause poor connections, shorts and ground faults, and/or poor ground connections. Check at least annually and clean as required. DO NOT allow corrosion to build on connections.

Inspect all terminals and make sure they are tight.

Have the entire AC circuitry tested every season by an experienced marine electrician, especially the shore power cord. This will detect any shorts, open wires or ground faults. Also, have the polarity indicator system inspected for proper operation.

Test outlets periodically by pressing the test/reset buttons in the center of the face plate to ensure proper operation.

The engine maintenance required on the generator is similar to the main engines. The most important factors to the generator's longevity are proper ventilation, maintenance of the fuel, ignition, cooling and lubrication systems, and the AC alternator.

Maintenance schedules and procedures are outlined in your generator owner's manual, follow them exactly.





## Plumbing System

### 5.1 Fresh Water System

#### General

The fresh water system consists of a potable water tank, distribution manifold, distribution lines and a distribution pump. The pump is equipped with an automatic pressure switch and is located in the machinery space. An in-line strainer located near the pump protects the system from debris. The tank, located under the cabin sole, is filled through a labeled deck fill located on the gunwale.

DO NOT confuse other deck fill with fresh water fill. If toxic fluids or fuel is added to fresh water tank, the system will be contaminated. DO NOT attempt to pump fuel out; this system is not designed to pump fuel. Fuel must be removed by qualified personal only. Fuel in the fresh water systems will also require replacement of that system and/or many components.

#### DANGER

**FIRE OR EXPLOSION HAZARD**  
Fuel and their vapors are highly explosive when exposed to open flame or spark, resulting in death or serious injury. Do not confuse deck fills.

#### Operation

Fill the water supply tank slowly through the FRESH WATER FILL deck plate. After filling tank, partially open all faucets. Turn on "Fresh Water System" switch at the helm. Allow the pump to run until all of the air is purged from the system and a steady stream of water is flowing from each outlet. Next, turn off the faucets one by one. As the pressure builds, the pump will automatically shut off.

When properly primed and activated, the water system will operate like the water system in a home. An automatic pressure sensor keeps the system pressurized. If the

system has been recently filled or has not been used for an extended period, air may accumulate at the pump and the system may have to be re-primed.

The water system manifold, located on the starboard side of the machinery space, provides a shutoff valve for each fixture in the boat. Each line is a "home run." There are no fittings between the manifold and the fixture to leak or fail. Should a problem occur with any plumbing fixture in the boat, shut off the appropriate valve to isolate it while leaving the remainder of the system operational. See the schematics section for additional information on the water system manifold.

Whenever the boat is left unattended, turn the fresh water system switch "OFF."

#### CAUTION

**DO NOT allow the fresh water pump to run dry; damage to the pump can occur. The fresh water pump works on demand and WILL NOT shut off when the tank is empty. Turn the water pump switch "OFF" when the system is not in use. Operating any pump from a low-charged battery can lead to a pump failure. Keep the batteries properly charged. The fresh water system must be properly winterized prior to winter lay-up. Refer to Winterizing.**

#### Sink and Shower Operation

To use the galley sink, head sink or shower turn on the fresh water system. Some minor variations in the water temperature and pressure may occur as the pump cycles. The sinks drain overboard.

Water drains from the shower to a sump pump system located in the bilge below the the aft berth. An automatic float switch in the shower sump controls the pump. After showering, let the cold water flow for a period of time to flush the drainage system of soap residue. It is essential that the shower drain strainer is cleaned regularly

and the sump is inspected periodically for accumulated debris that needs to be removed.

### Water Heater

The water heater is located in the machinery space. The water heater has an AC element that is thermostatically controlled at the heater and activated by a circuit breaker located in the AC panel. A high pressure relief valve protects the system from excessive pressure. Make sure all air is purged from the water heater and lines before activating the water heater breaker. Refer to the water heater manual for additional information.

#### CAUTION

**DO NOT** turn on water heater until it is filled and primed; damage to the heater will result.

### Shore Water Connection

The shore water connection allows the direct connection of the water system to a shore side water supply. This provides the system with a constant supply of fresh water and minimizes the pressure pump operation. A female inlet fitting is mounted in the splash well.

To use shore water, connect a hose from the shore water faucet to the shore water fitting on the boat, then turn on the shore water. The pressure pump will not run and the water in water tank of the boat will not be used. Also, the water tank will not be filled by connecting to shore water.

#### CAUTION

**DO NOT** change or modify the shore water inlet connector without contacting Pursuit Customer Relations or your dealer. Use of the wrong type or a modification can damage the fresh water system.

### 5.2 Raw Water Washdown

The raw water washdown system pump is supplied by hoses connected to a ball valve and a thru-hull fitting located in the bilge.

#### Operation



Washdown Hose Connector

Make sure the ball valve is open before attempting to operate the raw water washdown system. The pump is activated by the washdown switch located on the helm. When activated, the pressure switch will automatically control the pump. As pressure builds in the washdown hose, the pump will shut off. When the washdown hose is in use and the pressure drops, the pump will turn on. Turn the switch off when the washdown is not in use. The raw water washdown is equipped with a sea strainer on the intake side of the pump, located in the aft bilge; check it frequently and clean as necessary.

#### Priming the System

Open the ball valve and hose connector, and activate the pressure pump. Run the pump until all air is purged from the system. Close the thru-hull ball valve before the boat is hauled from the water to eliminate an air lock in the system. It may be necessary to re-prime the raw water system if the system is not used for an extended period.

## ⚠ CAUTION

**DO NOT** operate high-pressure pump dry, damage to pump will result. Turn the raw water pump switch "OFF" when leaving the boat unattended.

### 5.3 Drainage

#### General

Review and become familiar with the drainage schematic, located in the back of this manual and location of the thru-hull.

Check the drain system to ensure it is free flowing and hoses on the thru-hull fittings are secure and not leaking.

#### Bilge Drainage

The bilge pumps are located in the stern bilge and under the aft berth. All bilge pumps pump water out of thru-hulls located above the waterline in the hull. A high water bilge alarm monitors excessive bilge water levels and signals a high water condition through a visual and audible alarm. See Electrical Systems for additional information on bilge pump and high water bilge alarm operations.



Automatic Bilge Pump Switch

Inspect the bilge area frequently for evidence of excessive water. Continuous operation of the bilge pump can mean there is excess water in the bilge. Test the bilge pump at regular intervals. Debris can also prevent the pump from operating or make it operate continuously. Make sure no debris is blocking the bilge pump float.

Bilge pumps and bilge pumping systems are not designed for damage control. Continuous operation of the bilge can mean a leak or a drain plug is installed incorrectly; make sure all drain plugs are installed.

Excess water in the bilge area will adversely affect the handling and maneuverability of the boat and can cause personal injury. DO NOT allow the bilge pump to operate after all the water has been cleared from the bilge area. Damage to the pump will occur.

The aft bilge pump system consists of two pumps and an automatic float switch. The float switch activates one pump that is fully automatic. The other pump is the manual pump and is controlled by the switch at the helm. The forward pump has both automatic and manual functions.

Current is supplied to the automatic float switches whenever the batteries are connected. The bilge pump switches in the helm are supplied current when the house battery switch is in the "ON" position. Breakers for both the manual and the automatic functions are located on the MDP.

Activate the manual bilge pump briefly each time the boat is used to ensure pumps are operating properly. Activate the automatic switch manually to verify operation by placing a wet rag across the sensor and mounting bracket. There is a delay built into the switch before the pump will activate. The pump will continue to operate for a short time after the rag is removed. Refer to the Water Witch manufacturer's information under "Plumbing" for more information.

When the boat is out of the water, the bilge can be drained by a thru-hull drain located in the transom, near the bottom of the hull. It is

important to check the drain plug regularly to make sure it is tight.

A loose drain plug will allow sea water to enter the bilge and cause the boat to sink. Check the drain plug frequently to make sure it is secure.

Any oil spilled in the bilge must be thoroughly removed and properly disposed of before operating the bilge pump. The discharge of oil from the bilge is illegal and subject to fine.

### NOTICE

The federal water pollution control act prohibits the discharge of oil or oily waste into or upon the navigable waters of the United States or the waters of the contiguous zone if such discharge causes a film or sheen upon, or a discoloration of the surface of the water, or causes a sludge or emulsion beneath the surface of the water. Violators are subject to a penalty of \$10,000.

### Exterior Drains

Your Pursuit has two scupper drains located in the rear of the cockpit. The drain rails for the mechanical space drain overboard by gravity.

The exterior sink drains by gravity to overboard thru-hulls.

The rope locker drains overboard through a drain fitting located in the hull side at the bottom of the rope locker. It is important to inspect the drain frequently to remove any accumulated debris.

## 5.4 Plumbing System Maintenance

Information supplied with water system components, by the equipment manufacturers, is included with this manual. Refer to the information for additional operation and service information.

### Fresh Water System

#### CAUTION

Turn the fresh water system switch "OFF" when leaving the boat unattended or when the fresh water system is not in use.

Perform these routine maintenance procedures to maintain your fresh water system:

- Remove filter screens from faucet spouts and eliminate any accumulation of debris. A debris build-up can cause the pump to cycle excessively.
- Check and clean the fresh water system strainer located on the intake line near the pump at least annually.
- Remove the lid on the shower sump assembly located under the mid-berth, clean debris from the sump and flush with clean water, activate the float switch to test the pump and spray the pumps and metal components with a metal protector periodically.

#### CAUTION

Maintain a proper charge on the batteries, operating the pressure pump from a battery with a low charge could lead to pump failure.

- Add a commercially available potable water conditioner to the water tank to keep it fresh.
- Make sure the fresh water system switch is "OFF" when leaving the boat unattended or when not in use.

- The fresh water system must be winterized properly before storage. Refer to Winterizing.

## Raw Water System

### CAUTION

**If a hose ruptures, turn pump off immediately. Close the thru-hull valve before performing maintenance on sea water pump. Operating any pump from a low-charged battery can lead to a pump failure. Keep the batteries properly charged. The raw water system must be properly winterized prior to winter lay-up. Refer to Winterizing.**

Perform these routine maintenance procedures to maintain your raw water system:

- Check hoses for signs of deterioration, especially the sea water hoses.
- Remove and clean livewell, air conditioner and washdown pump sea water strainers, as needed. Spray pumps and thru-hull valves with a metal protector periodically.
- Drain and clean the fishboxes and livewells after each use.
- Operate all thru-hull valves at least once a month to keep them operating properly.

If a hose ruptures or leaks, turn off pump immediately. Keep the thru-hull valve closed when performing service on a sea water system.

### CAUTION

**Maintain a proper charge on the batteries; operating the pressure pump from a battery with a low charge could lead to pump failure.**

The fresh and raw water systems must be winterized properly before storage. Refer to Winterizing.

## Drainage Systems

Perform these routine maintenance procedures to maintain your drainage system:

- Clean the cockpit drain rails with a hose and water to remove all debris.
- Clean the hardtop leg drain holes, especially before winter storage.
- Clean the bilge pump and automatic float switch strainers of any debris. Check the bilge for debris that can block the function of automatic switch.
- Test rear automatic bilge pump switch and high water alarm float switch each time the boat is used, for proper operation. Operate the knob or lever on the side of the switch until the pump is activated, or add water to the bilge until the water level is high enough to activate the pump.
- Flush all gravity drains with fresh water to keep them clean and free flowing.
- Clean and inspect the shower and sink drain sump system. Remove accumulated debris and flush with fresh water. Test the automatic sump pump switch for proper operation, frequently.
- Clean and flush the fishbox and cooler/storage boxes with a mild soap or a bilge cleaner and fresh water after each use to keep them clean and fresh.
- Operate the thru-hull valves once a month and service as required.
- Check the drain system regularly to ensure it is free flowing and hoses on the thru-hull fittings are secure and not leaking.

### CAUTION

**DO NOT use harsh chemical drain cleaners in drain systems; permanent damage to the hoses, fittings and system can result. Also, drains and pumps must be properly winterized before winter lay-up.**



---

## Ventilation System

### 6.1 Cabin Ventilation

Ventilation is supplied by opening deck hatches and port lites.

#### Deck Hatch

The deck hatch is supported in the open position by an adjustable hatch adjuster. To close, loosen hatch adjuster and lower hatch. Secure the two cam levers on the inside of the hatch.

#### Port Lites

The port lites are secured by adjustable dogs. The dogs should be adjusted so they are tight enough to seal the window in the closed position, but not so tight that they are difficult to latch. The dogs are adjusted by turning a screw. The screw increases or decreases the pressure on each dog. The screen must be removed prior to closing the port light to ensure a water resistant seal.

### 6.2 Carbon Monoxide and Proper Ventilation

Read "Carbon Monoxide" in the Safety Section. It contains important information on carbon monoxide and the carbon monoxide detector.

### 6.3 Maintenance

- Periodically lubricate all hinges and latch assemblies with a light oil. And, clean and coat gasket materials with silicone to help keep them pliable.
- The opening cabin deck hatches and port windows are made of acrylic plastic. Acrylic can scratch easily. DO NOT use a dry cloth or glass cleaning solutions; use a soft cloth, mild soap, and water for routine cleaning. Solvents and products containing ammonia can permanently damage acrylic. Refer to Routine Maintenance for more information on the proper maintenance for acrylic.
- Many manufacturers of carbon monoxide detectors offer a testing and recertification program. Contact the manufacturer of your carbon monoxide detector and have it tested and recertified periodically. These types of detection equipment have a limited life span.





## Exterior Equipment

### 7.1 Deck

#### CAUTION

Unsecured open exterior doors and/or hatches can slam closed and cause injury or damage the boat. Most doors and hatches are equipped with fasteners, hatch lifters, snaps and/or straps to secure them open; make sure they are properly secured while they are open.

#### Rails and Deck Hardware

Rails and deck hardware perform specific functions. Do not use for securing fenders or mooring lines; these must be secured to the cleats. Make sure mooring lines are clear of rails or stanchion, or damage can result.

The stern cleats are flush mount and must be raised prior to use.

DO NOT use cleats or any other hardware for the purpose of towing or being towed. Inspect all hardware periodically for loosening, wear or damage. Repair or replace immediately.

#### Anchor/Rope Locker

The anchor locker at the bow of the boat can be accessed through the deck hatch.

The anchor locker is drained by a thru-hull fitting in the hull side near the bottom of the locker. Check it frequently and keep it clean and free flowing.

Secure anchor chain when trailering or while underway.

#### CAUTION

Secure anchor when it is stored in its locker and make sure it does not rest against the hull sides. If the anchor is loose, it will bounce and damage the boat. Damage from anchor bouncing in the locker is not covered by the Pursuit warranty.

#### Windlass

The windlass is located under the forward deck hatch above the rope locker. The anchor is stored on the anchor roller and is raised and lowered by the windlass. The anchor line is stored in the rope locker and routed out through the windlass to the anchor chain. The anchor locker is equipped with a receptacle for the windlass remote control.

Become familiar with the safe operation of the windless before using it. Refer to the windlass owner's manual for use of the windlass and remote control.

The anchor is lowered by releasing the anchor from the cleat or chain snubber and activating the "Deploy" switch at the helm. After the anchor is set, do not allow the windlass to take the force from the anchor line; secure line to bow cleat.

#### WARNING

##### MOVING PARTS OR ENTANGLEMENT HAZARD

Contact with moving parts can entangle, cut, resulting in loss of body parts, strangulation and/or severe loss of blood, causing serious injury or death. Stay clear of moving parts.

**CAUTION**

**DO NOT use windlass as the only method of securing anchor in bow pulpit. Secure anchor line to a cleat or chain snubber before operating your boat.**

The anchor is retrieved by releasing the line from the bow cleat and activating the "Retrieve" switch at the helm. When the chain begins to enter the windlass gypsy, release the switch. Jog the switch to start and stop the windlass, to allow the anchor to properly seat in the anchor roller. Inspect the anchor to ensure it is stowed with the plow/flukes down so the anchor does not contact the hull. Once the anchor is retrieved, secure the anchor to the chain snubber or bow cleat to prevent it from being released while underway.

Boats at anchor in high swell conditions will snub on the anchor line. This can cause slippage or apply excessive loads to the windlass.



**Anchor Line Secured to Cleat**

DO NOT use the windlass as a winch to move the boat over the anchor. Move the boat under its own power to the anchor and to break the anchor loose.

**Foredeck Sun Pads (optional)**

The sun pads backrests are adjustable to achieve optimum comfort. Raise the backrest to the desired location. To lower raise the backrest all the way up, then lower it to the horizontal position.

The forward sun pads should not be used when the boat is underway. Lower the sun pad backrest prior to getting underway.

Water that may become trapped between the cushion and foredeck could cause the gelcoat to blister. Remove the cushions every two - three weeks and allow them to dry out on the bottom side. Blistering under these conditions is not covered by the Pursuit Limited Warranty.

For longer life we recommend that the cushions be stored out of the elements when not in use.

**Windshield**

Your Pursuit boat is equipped with a chemically toughened, single piece, laminated windshield. This glass provides enhanced safety and excellent optical properties. To maintain performance and ensure long life, it must be cared for properly. Clean the windshield using only mild soap and water. Do not pressure wash the windshield or perform heavy scrubbing along the perimeter of the glass as damage to the membrane along the edges could occur. Do not use chemicals to clean the glass as these can potentially degrade the edge sealant. Should the glass become scratched, mechanical polishing will degrade the strength of the glass and should not be performed. If damage results from use of any of these methods then this damage will not be covered under Pursuit's limited warranty.

**NOTICE**

**Wash windshield only with soapy water. Use of abrasives, pressure cleaners and chemicals can cause irreparable damage.**

## Sky Lights

The tempered glass sky lights installed behind the windshield provide light to the cabin. Do not store heavy, sharp items on the skylights. Do not allow anyone to sit or stand on the skylights.

## 7.2 Cockpit

### Swim Platform

Your Pursuit boat is equipped with an integral swim platform. A foldaway boarding ladder is located under the swim platform.

DO NOT use swim platform or ladder while an engine is running. The engines must be "OFF" before allowing anyone to enter or exit the boat or when they are in the water. Stow ladder before starting an engine.

### DANGER

**CARBON MONOXIDE POISONING AND/OR ROTATING PARTS HAZARD**  
Poisonous CO gases are present at the rear of the boat when an engine is running. A rotating propeller can cut or entangle swimmers. Both of these hazards will cause death or serious injury. DO NOT use the swim/boarding platform when the engine is running.

### Cockpit Shower

A fresh water shower is located on the port side of the cockpit. It is supplied hot and cold water by the fresh water system and works much like the shower in the head.

### Lazarette

The starboard side lazarette houses the shore power cable housing and the shore side water connection. The machinery space blowers exhaust into this area.

## Engine Cover

The engine cover is secured with latches at each corner and is counter-balanced with SS gas springs. An access door is provided on the port side. Neither of these should be opened while the boat is underway. Do not run the engines in excess of 1200 rpm in neutral, while stationary, with the engine cover closed.

## Transom Door

Do not use the transom door when the boat is in motion. DO NOT leave the transom door unlatched. Latch it in the full "OPEN" or full "CLOSED" position.

### WARNING

#### UNSAFE BOAT HAZARD

Failure to close and secure transom door/gate while underway can expose passengers to rotating propellers, throw them overboard or swamp the boat which can cause death or serious injury. Close and secure door/gate before getting underway.

### CAUTION

Inspect transom door/gate fittings periodically for wear, damage or loose fit. Repair or replace before using your boat.

## Helm Seat

The helm seat is a swivel pedestal seat and can be adjusted fore and aft, as well as vertically. A friction knob, located on the side of the seat adjusts the tension of the seat base on the pedestal. Adjust it to eliminate play between the seat base and the pedestal. Lock the swivel when the boat speed exceeds 5 miles per hour.

**⚠ WARNING****DROWNING OR LOSS OF CONTROL HAZARD**

**Serious or fatal injury can occur due to the rotation of the seat if the swivel is not locked.**

**Cockpit Refrigerator**

A 12-volt refrigerator is located behind the helm seat and is protected by a breaker on the MDP. Operate the cooler by turning on the house battery. The thermostat inside the unit can be set so that the cooler acts as a refrigerator OR a freezer.

**Helm Air**

The helm area is equipped with an air conditioning system. Please refer to the Air Conditioner section in the Interior Section. The cold air return is located under the helm seat. Do not obstruct this area to obtain maximum efficiency for the air conditioning unit.

**Cockpit Grill**

A 240V/220V electric grill is installed in the cockpit. To use, turn on the cockpit grill breaker. Turn the breaker off whenever the grill is not being used. The grill should not be used under or inside any kind of enclosure. The grill must be allowed to cool before the cover is shut to avoid damage to the gel coated surfaces of the cover. Never clean the grill with any form of pressurized water or other types of cleaners. Use only a cloth and a stainless steel or glass surface cleaner. This grill like all appliances has the potential to create safety hazards through careless or improper use. Please observe all of the safety precautions listed in the grill manufacturer's owner's manual. Refer to the grill owner's manual.

**⚠ WARNING**

**Severe burns can occur from the improper use of this device. Do not leave the grill unattended when is hot. Close supervision is required when the grill is being used or is hot. Do not use the grill while underway.**

**Hardtop**

The hardtop consists of a fiberglass top and sun roof, supported by the windshield in the front and stainless steel supports in the back. It is designed to accommodate radio antennas, radar antennas and navigation lights.

The hardtop is not designed to support the additional weight of items like an instrument locker or a life raft. Radar and electronics antennas must be mounted to the top aft of the sun roof and forward of the rear legs. Do not mount any antennas or equipment to the area above the sun roof. The hardtop frame is not designed to support the weight of accessories in this area and can be damaged. The starboard rear leg provides the chase for components mounted to the top.

The hardtop warranty will be voided if the top is modified in any way or heavy accessories are mounted to the top. Also, if items like radar antennas, spotlights and other accessories are mounted in the wrong location, the warranty can be voided. If you intend to add equipment or make modifications to the hardtop, contact Pursuit Customer Relations to make sure the equipment you would like to add or the intended modification will not void the warranty on the top.

**Hardtop Canvas**

The side curtains and drop curtain are custom made to each boat at the factory.

Slide the side curtains into the slide tracks on the hardtop. Snap the side curtains to the hardtop legs and windshield wings. The side curtains will have to be stretched slightly to pull out the wrinkles and reach the snaps.

If you have an optional drop curtain or aft curtain, slide it into the slide track on the back of the hardtop and attach it to the rear of the side curtains. Snap the drop curtain to the deck and cockpit.

Cold weather can make the clear vinyl material on the curtains stiff and difficult to stretch to the snaps. This can be particularly difficult with new canvas that has been stored off the boat. Lay the curtains in the sun for 30 minutes during the heat of the day to make installation easier in cold weather.

## Sun Roof

The hardtop is equipped with a sunroof. To operate rotate the locking handle and move the sun roof to the desired position. Ensure the the locking pins are fully engaged into one of the holes in the track. Do not attempt to operate the sunroof while the vessel is underway. The sunroof is not designed to be weight bearing. Do not stand, sit or store items on top of it. Do not allow persons to sit on the open sunroof at any time.

## 7.3 Hull

### Hull Windows

Tempered glass windows are bonded into the hull side. Care should be exercised when docking and tying off. Concentrated loads applied to the windows could cause breakage. Inspect the dock structure to insure that there are not any protuberances that could contact the windows. Position fenders vertically across the windows to spread out the load. Do not position fenders horizontally across the windows.

## 7.4 Tower (Dealer Installed)

Your boat could be equipped with a dealer installed aluminum tower. Towers are normally equipped with full engine controls, compass, engine alarms, restart buttons and tachometers. This allows for complete operation of the boat from the tower.

### NOTICE

**To prevent gelcoat, gunwales or deck damage, supporting extension to the stringers may be required. Damage resulting from installation of a tower is not covered by the Pursuit Limited Warranty. Also, equipping a boat with a tower may require lower pitched propellers to compensate for the wind resistance and weight of the tower.**



## Interior Equipment

### 8.1 Companionway Door

The cabin is accessed through a sliding door. Behind the companionway door is a screen door. Lockable latches secure the doors in the closed position. A vinyl covered latch secures the doors in the open position. DO NOT leave the door unlatched. Latch it in the full “OPEN” or full “CLOSED” position.

The doors are made of acrylic plastic. Acrylic plastic scratches easily and can chip. Refer to Routine Maintenance for information regarding proper care of acrylic plastic.

#### CAUTION

**Keep the cabin door latched in the open or closed position. The door is heavy and slides easily. If the door is unlatched, it could slide unexpectedly as the boat rocks, causing injury or damage.**

### 8.2 Mid-Berth

The mid-berth is located behind the steps. There are hatches below the berth to provide access to the shower sump and forward bilge pump. The mid berth divider can be relocated to the forward side of the berth to create a single sleeping surface.

### 8.3 Head Compartment

The head compartment is equipped with a tempered glass sink and a shower. For care and cleaning information on the sink, refer to Routine Maintenance Section. A port light above the sink provides daylight. An AC G.F.I. duplex outlet is also provided. An exhaust fan is provided for ventilation.

A multi-functional door provides access to the linen locker and acts as the shower door. Release the left hand latch to access the linen locker. Close off the shower compartment by fully opening the bi-fold door and secure in place with the right hand latch.

Secure door in closed position whenever the boat is underway to prevent damage to the door.

### Marine Head System

Your boat is equipped with a VacuFlush® marine head system as standard equipment. This system uses a small amount of water and vacuum, which is generated by the 12-volt vacuum pump to flush. The toilet is connected to the pressurized fresh water system. Fresh water is used to reduce odor in the head compartment.

To use the toilet, make sure the “VacuFlush” breaker on the MDP is on; lift the foot flush lever slightly to wet the bowl with the desired water level. Depress the flush lever all the way for approximately three seconds or until the bowl is clear. A sharp popping noise is normal when the vacuum seal is broken and flushing action begins. It is also normal for a small amount of water to remain in the bowl after flushing.

The waste is directed to the holding tank until it is pumped out by a waste dumping station or the overboard macerator discharge system. The waste moves through a one-inch opening in the toilet base. Incoming air fragments mix with the waste as it passes through the base opening. This process eliminates the need for macerators or mechanical motors in the toilet base. When the tank is full, the tank monitor will show full and the vacuum pump will not run.

#### NOTICE

**DO NOT operate the macerator dry; damage to the pump can occur. In some waters it is illegal to discharge waste overboard. Remove the seacock handle or use another method to prevent accidental discharge.**

The vacuum generator is mounted on the holding tank and contains stored vacuum. System vacuum is monitored by a vacuum switch, which is located on the vacuum gen-

erator tank. When the switch senses a drop in vacuum in the system, it automatically signals the pump to energize and bring the vacuum back to operating level. This process is normally completed in less than two minutes.

It is normal for the stored vacuum to leak down slightly between flushes, causing the vacuum pump to run for a short period. The pump should not run more than once every three hours after the last flush for recharging the system. A holding tank fluid level monitor and macerator pump-out switch are located in a panel near the toilet. Refer to the head manufacturer owner's manual for more information on the operation of the marine head system.

### Holding Tank

Monitor tank level and have it pumped out before it is completely full. If the tank is allowed to overflow, the waste will overflow out the tank vent and overboard.

### Emptying The Holding Tank

When the tank is full, pump it out by an approved waste dumping station through the waste deck fitting or use the macerator discharge pump, when it is legal to do so.

To operate the macerator pump, open the ball valve at the thru-hull fitting located in the port, aft corner of the machinery space, activate macerator switch until tank is empty. Release the switch and close the discharge ball valve when pumping is complete.

### Maintenance

Clean and inspect the head for leaks regularly. Periodically add chemical to the head to help control odor and to chemically break down the waste. Refer to the head owner's manual for additional operating and maintenance information.

### NOTICE

**The head and macerator systems must be winterized before winter lay-up; refer to Winterizing.**

## 8.4 Galley

The galley is equipped with storage and a fresh water sink with a hot and cold faucet. When the water pressure switch in the 12-volt panel is on, the water system will operate much like a home water system. Refer to Plumbing Systems for more information on operating the system.

Use the overhead opening hatch for daylight and fresh air. For additional night lighting, use the 12-volt lights.

To operate galley drawers, push button to extend the knob and pull open. Push button in to lock. Lock drawers before getting underway. Remove the drawers by extending the drawer, depressing the latch in the track and pulling out the drawer.

The counters may be made of Corian® and should be cared for much as you would your Corian® counters in your home. Refer to Corian® Surfaces in Routine Maintenance.

### Stove

The galley is equipped with a double burner electric stove recessed into the counter top. To activate the stove, make sure the stove breaker in the AC breaker panel is on. After cooking, be sure the burner is off and allow to cool. A manual for the stove is included with your boat. It is extremely important that you read the manual and become familiar with the proper care and operation of the stove before attempting to use it.

After cooking, make sure the burner is off and allowed to cool before returning the cover.



## Refrigerator

A 12-volt refrigerator is standard equipment. The breaker on the MDP and the thermostat inside the refrigerator must be on. Use care while operating the refrigerator without the engines running; continued use will drain the house battery. When connected to shore power, keep the battery charger on and the house battery switch on. If the boat is equipped with the generator, make sure the battery charger is operating. If the house battery voltage falls below 9.6 volts, the refrigerator will shut off. Refer to the refrigerator owner's manual for additional operating and maintenance information.

## Microwave Oven

A microwave oven is standard equipment. The microwave operates on AC power and is protected by a breaker on the AC panel. Refer to the microwave owner's manual for additional operating and maintenance information.

## 8.5 Convertible V-Berth and Table

The table lowers electrically to convert the V-Berth to a bed. While lowering the table, watch that the cushions don't get caught under the table. Once the table is in the full "DOWN" position, remove the forward cushion, release the latch on each seat and swing inward. Latch the seats in place. Remove the filler cushions from their storage area and put in place. Stow the forward cushion under the seat.

### **WARNING**

**To prevent serious injury or property damage confirm that the area around the table is clear of obstructions before lowering or raising.**

## 8.6 Carbon Monoxide Detector

The Safety Section in this manual contains important information on carbon monoxide and the carbon monoxide detector. Read section titled Carbon Monoxide.

## 8.7 Air Conditioners

The reverse cycle air conditioners can be operated to cool or heat. The cabin air conditioner is located under the mid-berth. The helm air conditioner is located behind the port side entertainment center. Both units are controlled by thermostats located in the cabin. To operate either or both units first turn on the AC cooling pump breaker and then the individual air conditioner breakers.



**Air Conditioning Control Panel**

The cold air returns are located under the cabin steps and behind the helm seat. Do not obstruct the return to obtain maximum efficiency from the air conditioner. Be careful when storing items in this compartment if an air conditioner is installed. Items stored on or next to the air conditioning unit can damage the air conditioner or be damaged by heat or condensation.

The air conditioners are self-contained and sea water cooled. The cooling pump supplies sea water to the units, cools the condensing unit and is discharged overboard. The pump is located in the machinery space.

Sea water is supplied to the pump from a thru-hull fitting located in the hull near the pump. A sea strainer between the pump and thru-hull fitting protects the system from contaminants that can damage the pump or the air conditioning system. Periodically clean the sea strainer basket to make sure the sea water pump receives adequate water.

Air locks can occur in the cooling pump water supply at the time of launching. If your boat has been recently launched and water is not flowing from the overboard thru-hull when the air conditioner is activated, air may have to be purged from the system. This can be achieved by making sure the valve at the cooling pump intake thru-hull is open. Then run the boat at cruise speed for several minutes. A scoop attached to the intake thru-hull will pressurize the system and force the air through the pump. Refer to the air conditioner owner's manual for additional operating and maintenance information.

### NOTICE

**Air conditioners use surface water to cool. DO NOT operate the air conditioner out of the water or without the raw water supply or damage to the system will occur. Make sure there is a water supply before operating the air condition. No water supply can also trip the circuit breaker.**

## 8.8 Audio and Video Systems

### Stereo

The stereo is located under the television. An iPod®/MP3 USB input jack is included with the stereo. Refer to the stereo owner's manual for additional operating information.

### Stereo Amplifier

The stereo amplifiers for the cabin and cockpit are located behind an access panel in the aft berth hanging locker. The amplifier has controls to adjust the sound system response. Refer to the amplifier owner's manual for additional operating information.

### TV/DVD

The SC 365i comes equipped with Apple TV, iCloud account and iPad. Refer to the TV and Apple owner's manuals for additional operating information.

### TV Antenna

A TV antenna is installed on the hardtop. The amplifier for the TV antenna is located in the machinery space. A red light on the antenna indicates the antenna is selected and activated.

## Safety Equipment

### 9.1 General

Your boat and outboard engines have been equipped with safety equipment designed to enhance the safe operation of the boat and to meet U.S. Coast Guard safety standards. The Coast Guard or state, county, and municipal law enforcement agencies require certain additional accessory safety equipment on each boat. This equipment varies according to length and type of boat and type of propulsion. Most of the accessory equipment required by the Coast Guard is described in this Section. Some local laws require additional equipment. It is important to obtain "Federal Requirements And Safety Tips for Recreational Boats," published by the Coast Guard, and copies of state and local laws, to make sure you have the required equipment for your boating area. You should also read the book entitled "Sportfish, Cruisers, Yachts - Owner's Manual" included with this manual.

Your Pursuit boat could be equipped with engine alarms and cabin monitoring equipment. These systems are designed to increase your boating safety by alerting you to potentially serious problems in the primary power systems, the engine compartment and the cabin. Alarm systems are not intended to lessen or replace good maintenance and "Pre-Cruise System Check."

This Section also describes safety related equipment that could be installed on your boat. This equipment will vary depending on the type of engines and other options installed by you or your dealer.

### 9.2 Engine Alarms

Most outboards are equipped with an audible alarm system mounted in the helm area that monitors selected critical engine systems. The alarm will sound if one of these systems begins to fail. Refer to the engine owner's manual for information on the alarms installed with your engines and additional operating and maintenance information.

If the alarms sounds:

- throttle the engines back to idle immediately.
- shift to neutral.
- monitor the engine gauges to determine the cause of the problem.
- if necessary, shut off the engines and investigate until the cause of the problem is found.
- if the boat is equipped with water sensors in the fuel filters, make sure to check them for excessive water.

### 9.3 Neutral Safety Switch

Every throttle/shift control system has a neutral safety switch. The switch allows the engines to be started in NEUTRAL only. If engines will not start, make sure controls are in NEUTRAL. Control or cable adjustments may be required to correct this condition should it persist. See your Pursuit Dealer for necessary control and cable adjustments. Refer to the Helm Systems for more information on the neutral safety switch.

### 9.4 Engine Stop Switch

Your Pursuit boat is equipped with an engine stop switch, clip and lanyard. When the lanyard is pulled, it will shut off the engines.

#### **WARNING**

#### **LOSS OF CONTROL AND UNSAFE BOAT HAZARD**

**An engine stop switch system that is not used or does not function correctly can cause death or serious injury. DO NOT operate the boat if the stop switch system does not function properly.**

The stop switch will stop an engine whenever the lanyard is pulled far enough to disconnect the clip from the switch. Attach the lanyard to the boat operator whenever an engine is running, but be aware of loss of engine power if the switch is activated.

If the operator is thrown from the seat, or moves too far from the helm, the lanyard will disconnect the clip from the switch, shutting off the engine.

To attach a lanyard, connect the clip to the emergency stop switch and the hook to a strong piece of clothing on the operator, such as a belt loop.

If the engines will not start, the clip may not be inserted into the engine stop switch properly or the control is not in neutral. Make sure the clip is properly attached to the engine stop switch before attempting to start the engine.

Always carry a spare stop switch clip and lanyard and instruct at least one other person onboard the operation of the stop switch and location of the spare.

### 9.5 Automatic Fire Extinguishing System (with Optional Generator)

#### WARNING

##### **FIRE/EXPLOSION HAZARD**

The gas of the fire extinguisher system displaces oxygen to “smother” the fire. **DO NOT** open the hatch. Oxygen can feed a fire and flashback can occur which can cause death or serious injury. If the onboard fire system discharges, wait at least 15 minutes before opening engine hatch.

The generator is equipped with an automatic fire extinguishing system. The extinguisher has been chosen and located to provide sufficient coverage of the generator compartment. While the system helps ensure bilge fire protection, it does not eliminate the U.S. Coast Guard requirement for hand held fire extinguishers.

The system is equipped with an engine shut-down circuit to automatically shut down the generator. The red light on the fire extinguisher control panel will light and an alarm will sound if this should occur. When suffi-

cient time has elapsed for the fire to be extinguished and a flashback is no longer possible, find and fix the problem, then the override switch on the control panel can be moved to the “OVERRIDE” position and the engines can be restarted. Refer to the Automatic Fire Extinguisher System in the Helm Systems.

If the extinguisher system is activated, shut down all engines immediately. Turn off all electrical systems, powered ventilation and extinguish all smoking materials. **DO NOT** open the engine compartment hatch, this will feed oxygen to the fire and a flashback can occur. Allow the extinguishing agent to soak the generator compartment for at least 15 minutes and wait for hot metals or fuels to cool before inspecting for cause or damage. Have an approved portable fire extinguisher at hand and ready for use and **DO NOT** breathe fumes or vapors caused by the fire.

It is extremely important that you read, understand and know how this system works, refer to the manufacturer’s literature.

### 9.6 Carbon Monoxide Hazards

#### DANGER

##### **CARBON MONOXIDE HAZARD**

Exposure to CO will cause death or serious injury. CO is colorless, odorless and extremely dangerous. Avoid CO exposure and make sure the CO detector is working properly.

Carbon monoxide (CO) poisoning is lethal and should not be confused with seasickness, intoxication or heat exhaustion. If someone complains of irritated eyes, headache, nausea, weakness or dizziness, or you suspect carbon monoxide poisoning, immediately move the person to fresh air, investigate the cause, and take corrective action. Seek medical attention if necessary.

All engines and fuel burning appliances produce CO as exhaust. Direct and prolonged exposure to CO will cause **BRAIN DAMAGE** or **DEATH**.

Other symptoms that may signal exposure to CO: dizziness, flushed face, ears ringing, headaches, tightness of chest or hyperventilation, drowsiness, fatigue or weakness, inattention or confusion, lack of normal coordination, nausea and unconsciousness. The victim's skin also may turn red. A slight buildup of CO in the human body over several hours causes headache, nausea and other symptoms similar to food poisoning, motion sickness or the flu. Anyone with these symptoms should immediately be moved to an area of fresh air. Have the victim breathe deeply and seek immediate medical attention. To learn more about CO poisoning, contact your local health authorities.

## Carbon Monoxide Detector

If the carbon monoxide detector is activated, this indicates the presence of CO, which can be fatal. Evacuate the cabin immediately. Make sure all passengers are accounted for. DO NOT enter the cabin until you know it is safe and the problem found and corrected.

CO detectors warn occupants of dangerous accumulation of CO gas. It is automatically activated whenever the house battery switch panel feed breaker is "ON." When powered, the green indicator will flash for ten to fifteen minutes, indicating the unit is in its warm-up stage. The green power indicator will stop flashing when the sensor has reached optimum operating temperature. The indicator will then switch from flashing green to solid green, indicating the detector is activate.

Make sure the battery switch is on and the power light is lit whenever the cabin is occupied.

This device uses a micro controller to continuously measure and accumulate CO levels. Should a very high level of CO exist, the alarm will sound within a few minutes. If small quantities are present or high levels are short-lived, the detector will accumulate the information and determine when an alarm level has been reached.

While a CO detector enhances your protection from CO poisoning, it does not guaran-

tee it will not occur. Do not use CO detectors as a replacement for ordinary precautions or periodic inspections of equipment. Never rely on alarm systems to save lives; common sense is still the best form of protection. Remember, the boat operator carries the ultimate responsibility to make sure the boat is properly ventilated and passengers are not exposed to dangerous levels of CO. Be alert to the symptoms and early warning signs of carbon monoxide.


CO detectors are very reliable and rarely sound false alarms. If the alarm sounds, DO NOT think it is false. If anyone has been exposed to CO, move them into fresh air immediately. Never disable the CO detector because you think the alarm may be false.

## Carbon Monoxide Poisoning


Carbon monoxide (CO) is a by-product of combustion, is invisible, tasteless, odorless and is produced by all engines and most heating and cooking appliances. It exists wherever fuels are burned to generate power or heat. The most common sources of CO on boats are combustion engines, auxiliary generators and propane or butane stoves.

These produce large amounts of CO and should never be operated while sleeping. High concentrations of CO can be fatal within minutes. Many cases of CO poisoning indicate that while victims are aware they are not well, they become so disoriented they are unable to save themselves by either exiting the area or calling for help. Also, young children, elderly persons and pets may be the first affected. Drug or alcohol use increases the effect of CO exposure. Individuals with cardiac or respiratory conditions are very susceptible to the dangers of CO. CO poisoning is especially dangerous during sleep while victims are unaware of any side effects.

Low levels of CO over an extended period of time can be just as lethal as high doses over a short period. Therefore, low levels of CO can cause the alarm to sound before persons notice any symptoms.

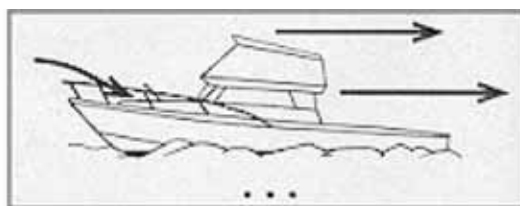


OPERATING SAFELY

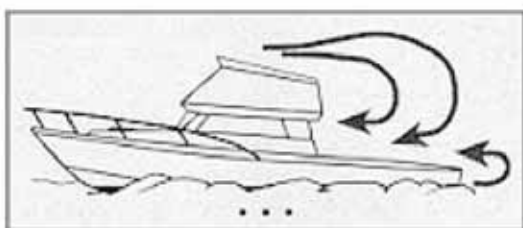


BACK DRAFTING / STATION WAGON EFFECT



NEARBY BOAT GENERATOR EXHAUST

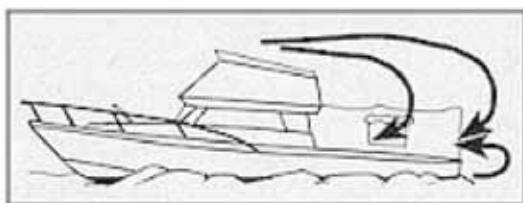

BACK DRAFTING / STATION WAGON EFFECT

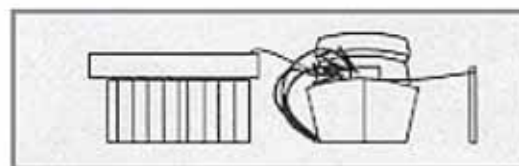

ONBOARD BOAT GENERATOR EXHAUST

Contact the detector manufacturer, the Pursuit Customer Relations Department or your local fire department for assistance in finding and correcting the situation.

In certain situations, boats can have a problem due to the “station wagon effect” where engine exhaust fumes are captured in the vessel by the vacuum or low pressure area, usually the cockpit, bridge deck and cabin, that can be created by the forward speed of the boat. Boats that are underway should close all aft facing portholes, hatches and doors. The forward facing deck hatches should be open whenever possible to help pressurize living spaces of the boat. Sleeping, particularly in aft cabins, should not be permitted while underway. Proper ventilation must be maintained on the bridge deck by opening a forward window or windshield to drive fumes away from the occupants. The canvas drop or aft curtain must be removed and side curtains should be opened or removed to increase airflow and maintain

proper ventilation whenever the engines are running.

DO NOT operate the engines with side curtains closed and the aft or drop curtain installed.

Use extreme caution while anchored or in a slip and an auxiliary power generator is operating. Calm wind nights can easily allow fumes to enter the boat. Inspect the exhaust systems of propulsion and the auxiliary generators, if equipped, frequently for possible leaks. High concentrations of CO in your boat can originate from an adjacent boat through open hatches or windows.

Failure to properly ventilate the boat while the engines are running can cause CO to accumulate within the cabin. Make sure to ventilate the boat and to avoid CO from accumulating in the boat whenever an engine is running.

Read the book entitled, "Sportfish, Cruisers, Yachts - Owner's Manual" and the owner's manual supplied by the CO detector manufacturer for additional information regarding the hazards and symptoms of CO gas, CO poisoning and operation instructions. If you did not receive these manuals, contact the Pursuit Customer Relations Department.

Many manufacturers of carbon monoxide detectors offer a testing and recertification program. We recommend that you contact the manufacturer of your CO detector and have it tested and recertified periodically. Certain electronic equipment have a limited life span, follow the CO detectors manufacturers recommendations on when the detector must be replaced.

## 9.7 First Aid

It is the boat operator's responsibility to be familiar with proper first-aid procedures and be able to care for minor injuries or illnesses of your passengers. In an emergency, you could be far from professional medical assistance, so be prepared. We recommend you be prepared by receiving training in basic first aid and CPR, through classes given by the Red Cross or your local hospital.



Equip your boat with at least a simple marine first-aid kit and a first-aid manual. The marine first-aid kit should be designed for the marine environment and be well supplied. Keep it accessible so each person onboard knows where it is located. As supplies are used, replace them. Some common drugs and antiseptics can lose their strength or become unstable as they age.

Ask a medical professional about the supplies you should carry and the safe shelf life of prescription drugs or other medical supplies you carry. Replace old supplies whether they have been used or not.

In many emergency situations, the Coast Guard can provide assistance in obtaining medical advice for treatment of serious injuries or illness. If you are within VHF range of a Coast Guard Station, make the initial contact on channel 16 and follow their instructions.

## 9.8 Required Safety Equipment

In addition to items installed by Pursuit, certain other equipment is required by the U.S. Coast Guard to help ensure passenger safety. Items like a sea anchor, working anchor, extra dock lines, flare pistol, life vests, a line permanently secured to your ring buoy, etc., could at some time save your passengers' lives, or save your boat from damage. Refer to the "Federal Requirements and Safety Tips for Recreational Boats" pamphlet for a more detailed description of the required equipment. You can also contact the U.S. Coast Guard Boating Safety Hotline, 800-368-5647, for information on boat safety courses and brochures listing the Federal equipment requirements. Also, check your local and state regulations.

The Coast Guard Auxiliary offers a "Courtesy Examination." This inspection will help ensure your boat is equipped with all of the necessary safety equipment.

The following is a list of the accessory equipment required on your boat by the U.S. Coast Guard:

### Personal Flotation Devices (PFD's)

PFD's must be Coast Guard approved, in good and serviceable condition, and of appropriate size for the intended user. Wearable PFD's must be readily accessible, meaning you must be able to put them on in a reasonable amount of time in an emergency. Though not required, the Coast Guard emphasizes that PFD's should be

worn at all times when the vessel is underway. Throwable devices must be immediately available for use. All Pursuit boats must be equipped with at least one Type I, II or III PFD for each person onboard, plus one throwable device (Type IV).

### Visual Distress Signals

All Pursuit boats used on coastal waters, the Great Lakes, territorial seas, and those waters connected directly to them, must be equipped with Coast Guard approved visual distress signals. These signals are either Pyrotechnic or Non-Pyrotechnic devices.

#### Pyrotechnic Visual Distress Signals

Pyrotechnic visual distress signals must be Coast Guard approved, in serviceable condition and readily accessible. They are marked with a date showing the service life, which must not have expired. A minimum of three are required. Some pyrotechnic signals meet both day and night use requirements. They should be stored in a cool, dry location. They include;

- pyrotechnic red flares, hand held or aerial.
- pyrotechnic orange smoke, hand-held or floating.
- launchers for aerial red meteors or parachute flares.

Pyrotechnics are universally recognized as excellent distress signals. However, there is potential for injury and property damage if not handled properly. These devices produce a very hot flame and the residue can cause burns and ignite flammable material. Pistol launched and hand-held parachute flares and meteors have many characteristics of a firearm and must be handled with caution. In some states they are considered a firearm and prohibited from use. Make sure you are careful and follow the manufacturer's instructions when using pyrotechnic distress signals.

## WARNING

**FIRE/EXPLOSION HAZARD**  
Pyrotechnic signaling devices can cause fire and/or explosion, death, serious injury and property damage if misused. Follow the manufacturer's directions in the use of these signaling devices.

### Non-Pyrotechnic Devices

Non-Pyrotechnic visual distress signals must be in serviceable condition, readily accessible, and certified by the manufacturer as complying with U.S. Coast Guard requirements. They include:

#### Orange Distress Flag, day use only.

The distress flag is a day signal only. It must be at least 3 x 3 feet with a black square and ball on an orange background. It is most distinctive when attached and waved from a paddle or boat hook.

#### Electric Distress Light, night use only.

The electric distress light is accepted for night use only and must automatically flash the international SOS distress signal. Under Inland Navigation Rules, a high intensity white light flashing at regular intervals from 50-70 times per minute is considered a distress signal.

### Sound Signaling Devices

The navigation rules require sound signals to be made under certain circumstances. Recreational vessels are also required to sound fog signals during periods of reduced visibility. Therefore, you must have some means of making an efficient sound signal.

### Navigation Lights

Recreational boats are required to display navigation lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.) Navigation lights are intended to keep other vessels informed of



your presence and course. Your Pursuit boat is equipped with the navigation lights required by the U.S. Coast Guard at the time of manufacture. It is up to you to make sure they are visible, operational and turned on when required.

## Fire Extinguishers

Pursuit Boats provides locations for two fire extinguishers on boats under 26 feet. Boats over 26 feet have provisions for up to three fire extinguishers. Boats equipped with cabins have one fire extinguisher located in the cabin, cockpit and helm areas. Center console boats have fire extinguishers mounted in the vicinity of the helm and passenger cockpit. Coast Guard approved fire extinguishers are hand-portable, either B-I or B-II classification and have a specific marine type mounting bracket. It is recommended the extinguishers be mounted in a readily accessible position.

### Fire extinguishers require regular inspections to ensure:

- seals and tamper indicators are not broken or missing.
- pressure gauges or indicators read in the operable range.
- no obvious physical damage, corrosion, leakage or clogged nozzles.

For information on the type and size fire extinguisher required for your boat, refer to the "Federal Requirements and Safety Tips for Recreational Boats" pamphlet or contact the U.S. Coast Guard Boating Safety Hotline, 1-800-368-5647.

For instructions on the proper maintenance and use of your fire extinguisher, refer to the information provided by the fire extinguisher manufacturer.

Information for halon or agent FE-241 extinguishers is provided by the manufacturer. It is extremely important that you read, understand and know how this system works; refer to the manufacturer's literature.

## Bilge And Fuel Fires

Fuel compartment and bilge fires or explosions are dangerous because of the presence of fuel. You must make the decision to fight the fire or abandon the boat. If the fire cannot be extinguished quickly or it is too intense to fight, abandoning the boat may be your only option. You must consider your safety, the safety of your passengers, the intensity of the fire and the possibility of an explosion in your decision.

If you find yourself in this situation, make sure all passengers have a life preserver on and go over the side and swim well upwind of the boat, to keep clear of any burning fuel that could be released and spread on the water as the boat burns or in the event of an explosion. When clear of the danger, check and account for all passengers who were onboard. Give whatever assistance you can to anyone in need or in the water without a buoyant device. Keep everyone together for morale and to aid rescue operations.

### **WARNING**

#### **BURN HAZARD**

**Fuel floating on water which is ignited can cause death or serious injury. Fuel will float on top of water and can burn. If the boat is abandoned, swim upwind, far enough to avoid fuel that can spread over the surface of the water.**

### 9.9 Additional Safety Equipment

Besides meeting the legal requirements, prudent boaters carry additional safety equipment. This is particularly important if you operate your boat offshore. You should consider the following items, depending on how you use your boat.

#### Satellite EPIRB 'S

EPIRB's (Emergency Position Indicating Radio Beacon) operate as part of a world wide distress system. When activated, EPIRB's will send distress code homing beacons that allow Coast Guard aircraft to identify and find them quickly. The satellites that receive and relay EPIRB signals are operated by the National Oceanic and Atmospheric Administration (NOAA) in the United States. The EPIRB should be mounted and registered according to the instructions provided with the beacon, so the beacon's unique distress code can be used to quickly identify the boat and owner.

#### Additional Equipment to Consider:

- VHF Radio
- Life Raft
- Spare Anchor
- Spare Keys
- Heaving Line
- Fenders
- First Aid Kit
- Portable Radio
- Flashlight and Batteries
- Mirror
- Searchlight
- Sunburn Lotion
- Tool Kit
- Ring Buoy
- Whistle or Horn
- Anchor
- Chart and Compass
- Boat Hook
- Spare Propellers
- Mooring Lines
- Food and Water
- Binoculars
- Sunglasses
- Marine Hardware
- Extra Clothing
- Spare Parts

## Operation

### 10.1 General

Before you start, become familiar with the various component systems and their operation, and perform a "Pre-Cruise System Check." A thorough understanding of the component systems and their operation is essential to operate the boat safely. This manual and the associated manufacturers' information have been provided to enhance your knowledge of your boat. Read them carefully, and also, read the book titled "Sportfish, Cruisers, Yachts - Owner's Manual."

Your boat must have the necessary safety equipment onboard and be in compliance with the U.S. Coast Guard, local and state safety regulations. There should be one Personal Floatation Device (PFD) for each person. Non-swimmers and small children should wear PFD's at all times. You should know and understand the "Rules of the Road" and have had an experienced operator brief you on the general operation of your new boat. At least one other person should be instructed on the proper operation of the boat in case the operator is suddenly incapacitated.

The operator is responsible for his safety and the safety of his passengers. When boarding or loading the boat, always step onto the boat, never jump.

**⚠ WARNING**

**DROWNING OR LOSS OF CONTROL HAZARD**

**Ejection or sudden loss of control can cause death or serious injury from improper use of seating. DO NOT stand while driving above engine idle speeds and make sure cockpit seat is locked/secured and all passengers are seated when boat is underway.**

DO NOT allow passengers to sit on the seat backs, gunwales, bows, transoms or on fishing seats whenever the boat is underway.

Passengers should be seated to properly balance the load and must not obstruct the operator's view, particularly to the front.

Overloading and improper distribution of weight can cause the boat to become unstable and are significant causes of accidents. Know the weight capacity and horsepower rating of your boat. Do not overload or overpower your boat.

**⚠ WARNING**

**OVERLOAD HAZARD**

**Overloading the boat beyond maximum load or altering the stability, buoyancy or center-of-gravity can result in death or serious injury. DO NOT exceed the maximum load or alter the center-of-gravity of the boat.**

Remember, it is the operator's responsibility to use good common sense and sound judgment in loading and operating the boat.

**⚠ WARNING**

**SLIPPERY SURFACE HAZARD**

**Wet surfaces can generate slippery conditions which can result in death or serious injury. Use caution on wet surfaces.**

### 10.2 Homeland Security Restrictions

- Recreational boaters have a role in keeping our waterways safe and secure. Violators of the restrictions below can expect a quick and severe response:
- Do not approach within 100 yards, and slow to minimum speed within 500 yards of any U.S. Naval vessel. If you need to pass within 100 yards of a U.S. Naval vessel, for safe passage you must contact the U.S. Naval vessel or the Coast Guard escort vessel on VHF-FM channel 16.
- Observe and avoid all security zones. Avoid commercial port areas, especially those that involve military, cruise-line or

petroleum facilities. Observe and avoid other restricted areas near dams, power plants, etc.

- Do not stop or anchor beneath bridges or in channels.


## America's Waterway Watch

America's Waterway Watch, a combined effort of the Coast Guard and its Reserve and Auxiliary, wants your help in keeping America's waterways safe and secure. America's Waterway Watch urges you to adopt a heightened sense of sensitivity toward unusual events or individuals you may encounter in or around ports, docks, marinas, riversides, beaches or waterfront communities. To report suspicious activities, call the National Response Center at 1-877-24WATCH or 1-800-424-8802. If there is immediate danger to life or property call 911 or call the Coast Guard on Marine channel 16.

## 10.3 Rules of the Road

As in driving an automobile, there are a few rules you must know for safe boating operation. The following information describes the basic navigation rules and action to be taken by vessels in a crossing, meeting or overtaking situation while operating in inland waters. These are basic examples and not intended to teach all the rules of navigation. For further information consult the "Navigation Rules" or contact the Coast Guard, Coast Guard Auxiliary, Department of Natural Resources, or your local boat club. These organizations sponsor courses in boat handling, including sponsor rules of the road. We strongly recommend such courses. Books on this subject are also available from your local library.

When two motor boats are crossing, the boat on the right has the right of way and should maintain its course and speed. The other vessel should slow down and permit it to pass. Both boats should sound appropriate signals.

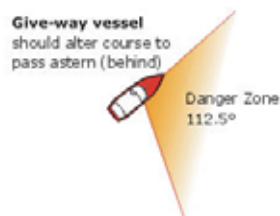


### CAUTION

**Avoid collisions by following navigation rules. If a collision appears unavoidable, both vessels must act. Prudence takes precedence over right-of-way rules if a crash is imminent. Less maneuverable boats generally have the right of way. Steer clear of the right-of-way boat and pass to its stern.**

When two motor boats are crossing, the boat on the right has the right of way and should maintain its course and speed. The other vessel should slow down and permit it to pass. Both boats should sound appropriate signals.

### Crossing situations

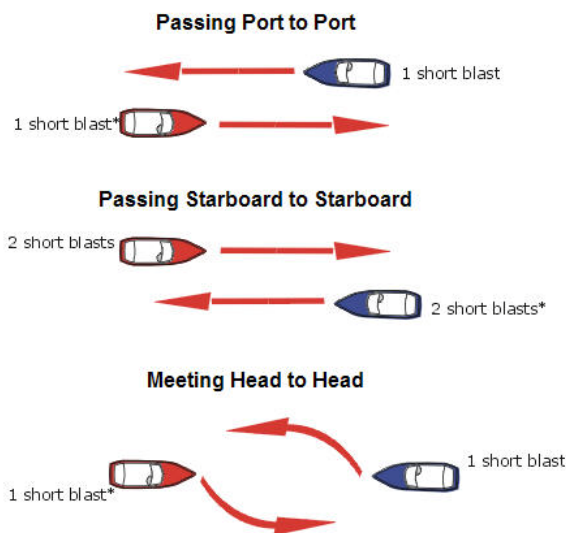


\* Response not sounded on International Waters

## Meeting Head-On Or Nearly-So Situations

When two motorboats are approaching each other head-on or nearly head-on, neither boat has the right of way. Both boats should reduce their speed and turn to the right, passing port side to port side and provide enough clearance for safe passage. Both boats should sound appropriate signals.

## Overtaking Situations

When one motorboat is overtaking another motorboat, the boat being passed has the right of way. The overtaking boat must make adjustments necessary to provide clearance for a safe passage of the other vessel and should sound appropriate signals.

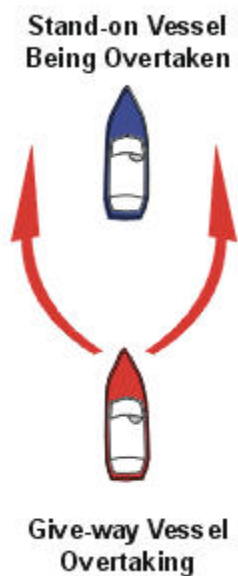










## The General Prudential Rule

In obeying the Rules of the Road, due regard must be given to all dangers of navigation and collision and to any special circumstances, including the limitations of the vessels, which may justify a departure from the rules that is necessary to avoid immediate danger or a collision.

## Navigation Aids

Aids to navigation are placed along coasts and navigable waters as guides to mark safe water and to assist mariners in determining their position in relation to land and hidden dangers. Each aid to navigation is used to provide specific information. Become familiar with these and any other markers used in your boating area.

Port Side Lateral System As seen entering from seaward (Green Light Only Odd Numbered Aids)	Starboard Lateral System As seen entering from seaward (Red Light Only Even Numbered Aids)
 <p><b>Green Light</b> Chart Symbol "1" Fl G 6s</p>	 <p><b>Red Light</b> Chart Symbol "2" Fl R 6s</p>
 <p><b>Green Lighted Buoy</b> Chart Symbol G "9" Fl G 4s</p>	 <p><b>Red Lighted Buoy</b> Chart Symbol R "8" Fl R 4s</p>
 <p><b>Can</b> Chart Symbol G C "7"</p>	 <p><b>Nun</b> Chart Symbol R N "6"</p>
 <p><b>Daymark</b> Chart Symbol G "1"</p>	 <p><b>Daymark</b> Chart Symbol R "2"</p>

 **CAUTION**

**Storms and waves can move buoys, do not rely on buoys alone to determine your position.**

## 10.4 Pre-Cruise Check

### Before Starting The Engines:

- Check the weather forecast. Decide if your planned cruise can be made safely.
- Make sure all required documents are onboard.
- Make sure all necessary safety equipment is onboard and operative; items like running lights, spotlight, life saving devices, etc. Refer to Safety Equipment for additional information.

Each person onboard must have at least one personal flotation device onboard and one throwable device. Check the U.S. Coast Guard standards for the correct type required for your boat.

- Make sure signal kits are onboard and are in good operating condition and are not expired.
- Make sure you have sufficient water and other provisions for the planned cruise.
- Leave a written message listing details of your planned cruise (Float Plan) with a close friend ashore. Include a description of your boat, where you intend to cruise, schedule of your arrival in the cruising area and when you expect to return. Keep the person informed of any changes in your plan to prevent false alarms. This information can tell authorities where to look and your boat type in the event you fail to arrive.
- Check the amount of fuel onboard. Observe the “rule of thirds”: one third of the fuel for the trip out, one third to return and one third in reserve. An additional 15% may be consumed in rough seas.
- Check the water separating fuel filters for water.
- Turn on the battery switches.
- Check for bilge water and for other signs of potential problems. Monitor for the scent of fuel fumes.
- Test the automatic and manual bilge pump switches to make sure the system is working properly.
- Have a tool kit and spare parts onboard.

#### The kit should include basic tools:

- Spark Plug Wrench
- Hammer
- Spark Plug Gap Gauge
- Electrician’s Tape
- Screwdrivers
- Lubricating Oil
- Pliers
- Jackknife
- Adjustable Wrench
- Vise Grip Pliers
- Needle Nose Pliers
- Wire Crimping Tool
- End Wrench Set
- Wire Connector Set

#### The spare parts kit should include:

- Extra Light Bulbs
  - Spark Plugs
  - Fuses and Circuit Breakers
  - Flashlight and Batteries
  - Drain Plugs
  - Engine Oil
  - Propellers
  - Fuel Filters
  - Propeller Nuts
  - Fuel Hose and Clamps
- Make sure all fire extinguishers are in position and in good operating condition.
  - Make sure the shift control is in NEUTRAL.
  - Make sure the emergency engine stop lanyard is attached to the operator and the stop switch.

### 10.5 Operating your Boat

The operator must be seated, and ready with the controls (steering/throttle) when the engine is started or running.

#### After Starting the Engines:

- Check engine gauges. Make sure all are reading normally.
- Visibly check engines to be sure there are no apparent water, fuel or oil leaks.
- Check operation of engine cooling systems.
- Check controls and steering for smooth and proper operation.
- Allow engines to warm up for 10 to 15 minutes before operating them above idle speeds.
- Make sure all lines, cables, anchors, etc. for securing the boat are onboard and in good condition. All lines should be coiled, secured and off the decks when underway.
- Have a safe cruise and enjoy yourself.

#### REMEMBER:

When operating a boat, you accept the responsibility for the boat, safety of passengers and others out enjoying the water.

- Alcohol and any mind altering chemicals can severely reduce your reaction time and affect your better judgment.
- Alcohol reduces the ability to react.
- Alcohol makes it difficult to judge speed and distance or track moving objects.
- Alcohol reduces night vision and ability to distinguish red from green.

STAY ALERT. The use of alcohol or any other mind altering chemicals that impair judgment, pose a serious threat to you and others. The boat operator is responsible for their consequences and behavior of passengers.

**⚠ WARNING**

**IMPAIRED OPERATION HAZARD**  
**Operating any boat while intoxicated or under the influence of other drugs can cause death or serious injury. DO NOT operate any boat under the influence of any mind-altering chemical.**

Avoid sea conditions that are beyond the skill and experience of you and your crew.

Make sure at least one other person onboard is instructed in the operation of the boat and it is operated in compliance with all state and local laws.

DO NOT operate the boat unless it is completely assembled. Make sure all fasteners are tight and adjustments are to specifications.

Before operating the boat for the first time, read the engine break-in procedures. Refer to the engine owner's manual. Since different types of engines are used, have your dealer describe the operating procedures for your boat. For more instructions on "How to Operate the Boat," read the instructions given to you for your engines.

For more instructions on safety, equipment and boat handling, enroll in one of the several free boating courses offered. For information on the courses offered in your area, call the "Boating Safety Hotline," 800-368-5647.

If the drive unit hits an underwater object, stop the engine. Inspect drive unit for damage. If damaged contact your dealer for a complete inspection and repair of the unit.

### Stopping the Boat

- Allow engines to drop to the idle speed.
- Shift controls to NEUTRAL.

If the engines have been run at high speed for a long period of time, allow engines to cool by running at idle for 3 to 5 minutes.

- Turn the ignition keys "OFF."
- Raise the trim tabs to full "UP" position.

**⚠ CAUTION**

**Turn off engines at idle speed. Racing the engine before switching it off can draw water into the engine through the exhaust, resulting in internal damage.**

### After operation:

- If operated in saltwater, wash the boat and all equipment with soap and water. Flush the engines using fresh water. Refer to the engine owner's manual for instructions on flushing.
- Check the bilge area for debris and excess water.
- Fill the fuel tanks to near full to reduce condensation. Allow room in the tanks for the fuel to expand without being forced out the vent.
- Turn off all electrical equipment except the automatic bilge pumps.
- If you are going to leave the boat unattended for a long period of time, put the battery main switches to "OFF" and close all seacocks.
- Make sure the boat is securely moored.

 **CAUTION**

To prevent damage, close all sea-cocks before leaving the boat.

## 10.6 Fishing

Fishing can be very exciting and distracting for the operator of the boat when the action gets intense. Be conscious that your primary responsibility is operating the boat safely to protect yourself, your passengers and other boats around you. Make sure the helm is properly manned and is never left unattended while trolling.

If you are fishing in an area that is crowded with other fishing boats, it may be difficult to follow the rules of the road. This situation can become especially difficult when most boats are trolling. Be courteous and exercise good common sense. Avoid trying to assert your right of way and stay clear to preventing tangled or cut lines and other unpleasant encounters. Also, keep in mind that fishing line wrapped around a propeller shaft can cause damage to the lower unit seal.

## 10.7 Tower Operation (Dealer Installation)

### Operation of the Tower Controls

Start engines at the lower helm. Monitor gauges to make sure all systems are normal and engines are warmed up before proceeding to the tower helm. The ignition or restart switches on the tower are only used to restart an engine in the event it should stall. The shift controls must be in neutral for the restart switches to be functional.

### Safety precautions for tower operation:

- Do not operate boat from tower in rough sea conditions. Motions of the boat are exaggerated in the tower and may become excessive in rough seas.
- Be careful when using the trim tabs from the tower. The reaction of the trim tabs will be exaggerated in the tower. Use small tab corrections and wait ten (10) seconds for the tabs to react. Keep making small corrections until the hull is at the desired attitude.
- Do not overload the tower. Most towers are designed for two average-sized people and weight in the tower affects the center of gravity and motion of the boat is greatly exaggerated for the people in a tower, too much weight can make the boat unstable.
- Do not operate the boat in tight quarters, such as marinas, from the tower. The operator is isolated from the boat while in the tower and will not be able to assist in docking procedures.
- Avoid using the tower in wet or rough weather, your grip and footing on the tower ladders is reduced.
- Operating the boat from the tower in unfamiliar waters or where running aground, can eject the operator or passengers.
- Be alert for waves and boat wakes; the motion of the boat is exaggerated in the tower.
- Exercise good common sense and judgment when operating a boat from the tower.
- If the engine alarm sounds, put the boat in NEUTRAL and shut "OFF" the engine immediately until the problem is found.
- Always put the boat in NEUTRAL before moving to and from the tower helm and cockpit.

Use common sense, judgment and exercise caution when operating the boat with someone in the tower. DO NOT allow anyone in the tower when the water is rough or when operating in unfamiliar waters where running aground is a possibility. Remember, weight in the tower affects center of gravity and motion of the boat is greatly exaggerated for people in the tower.



## 10.8 Docking, Anchoring and Mooring

### Docking and Docklines

Maneuvering a boat near a dock and securing it requires skill and techniques that are unique to water and wind conditions, and the dock layout. If possible, position a crew member at the bow and stern to assist with the lines and docking. While maneuvering close to the dock, compensate for wind and current, and anticipate how you can use them to help docking. Practice in open water using an imaginary dock to develop a sense for how the boat handles in different scenarios. You must be able to understand docking techniques before problems occur.

Approaching a dock or backing into a slip in high winds or strong currents requires skill. If you are new to handling a boat, take lessons from an experienced pilot and learn to maneuver in tight quarters in less than ideal conditions. Also, practice away from the dock during windy conditions.

Dock lines are generally twisted or braided nylon. Nylon is strong and stretches to absorb shock. Nylon also has a long life and is soft and easy on the hands. The size of the line, will vary with the size of the boat. Typically a 30 to 40 foot boat will use 5/8-inch line and a 20 to 30 foot boat will use 1/2-inch line. The number of lines and their configuration will vary depending on the dock, the range of the tide, and other factors. Usually a combination of bow, stern and spring lines is used to secure the boat.

### Maneuvering to the Dock

Approach the dock slowly at a 30 to 40 degree angle. When possible, approach against the wind or current. Turn the engines straight and shift to neutral when you feel you have enough momentum to reach the dock. Use reverse to slow the boat and pull the stern toward the dock as the boat approaches. If you approached properly, the boat will lightly touch the pilings at the same time forward momentum is stopped. Have the dock lines ready and secure the boat as

soon as it stops. Use fenders to protect the boat while it is docked. Keep the engines running until the lines are secured.

### Backing into a Slip

Approach the slip with the stern against the wind or current and the engines straight ahead. Use the engines and turn the steering wheel to maneuver the boat into alignment with the slip. Reverse the engines and slowly back into the slip. Shift from reverse to neutral frequently at idle to prevent the boat from gaining too much speed. Move the stern right and left by shifting the engines in and out of gear or turning the wheel. When nearly in the slip all the way, straighten the engines and shift to forward to stop. Keep the engines running until the lines are secured.

### Securing Docklines

Securing a boat along side the dock typically requires a bow and stern line and two spring lines. The bow and stern lines are usually secured to the dock at a 40 degree angle aft of the stern cleat and forward of the bow cleat. The after bow spring line is secured to the dock at a 40 degree angle aft of the after bow spring cleat. The forward quarter spring is secured to the dock at a 40 degree angle forward of the stern cleat. The spring lines keep the boat square to the dock and reduce fore and aft movement while allowing the boat to move up and down with the tide.

Securing a boat in a slip is somewhat different. It typically requires two bow lines secured to pilings on each side of the bow, two stern lines secured to the dock and two spring lines that prevent the boat from hitting the dock. The bow lines are typically secured with enough slack to allow the boat to ride the tide. The stern lines are crossed. One line runs from the port aft boat cleat to the starboard dock cleat and the other line runs from the starboard aft boat cleat to the port cleat on the dock. The stern lines center the boat, control the forward motion and allow the boat to ride the tide. Two forward quarter spring lines typically are secured to the stern cleats and to mid ship pilings or

cleats. The spring lines keep the boat from backing into the dock while allowing it to ride the tide.

### Leaving the Dock

Start the engines and let them warm up for 10 to 15 minutes before releasing the lines. Boats steer from the stern and it is important you achieve enough clearance at the stern to maneuver the boat as quickly as possible. Push the stern off and maneuver to gain stern clearance quickly. Proceed slowly until the boat has cleared the dock and other boats.

### Mooring

Approach the mooring buoy heading into the wind or current. Shift to neutral when you have just enough headway to reach the buoy. Position a crew member on the bow to retrieve the buoy with a boat hook and secure the line. Keep the engines running, until the line is secure.

### Leaving a Mooring

Start the engines and let them warm up before releasing the mooring line. The boat will already be headed into the wind, so move it forward enough to loosen the line and untie it. Back the boat away until you can see the buoy and slowly move away.

### Anchoring

Make sure the bitter end of the anchor rode is attached to the boat before dropping the anchor. Bring the bow into the wind or current and put the engine in neutral. When the boat comes to a stop, lower the anchor over the bow. Allow enough rode so that it is at least 5 to 7 times the depth of the water and secure the line to a cleat. Use caution to avoid getting your feet or hands tangled in the line. Additional scope of 10 times the depth may be required for storm conditions. Check landmarks on shore to make sure the anchor is not dragging. If it is dragging, start over. It is prudent to use two anchors if you are anchoring overnight or in rough weather.

## WARNING

**SINKING OR DROWNING HAZARD**  
Anchoring at the stern can pull a boat under water. **DO NOT** anchor at the stern.

### Releasing the Anchor

Release the anchor by traversing to the point where the anchor line becomes vertical. It should release when you pass that point. If the anchor does not release, stop the boat directly above the anchor and tie the line to a cleat as tight as possible. The up and down movement of the boat will usually loosen the anchor. Make sure the anchor is secured and stowed before getting underway.

## 10.9 Controls, Steering or Propulsion System Failure

## WARNING

**MOVING PARTS HAZARD**  
Contact with moving parts can entangle, cut and cause death or serious injury. **DO NOT** come close enough to make contact with any running machinery moving parts, i.e., engine or propeller. Contact can result in loss of body parts, strangulation, burns and/or severe loss of blood resulting in serious injury or death.

The engine covers are machinery guards and must be in place whenever the engines are running. **DO NOT** operate the boat without the covers in place unless you are performing a check or maintenance.

If the propulsion, control or steering system fails while you are operating the boat, bring both throttles to idle and shift to neutral. Determine if the boat should be anchored to prevent the boat from drifting or to hold the bow into the seas. Investigate and correct the problem if possible. Make sure the engines are off before investigating the prob-

lem. If you are unable to correct the problem, call for help.

If only one engine has failed, you can operate on one engine. Do not to apply too much power to the running engine. When running one engine to power a twin engine boat, the engine is “over propped” and can be overloaded if too much throttle is applied. Contact your dealer or the engine manufacturer for the maximum power settings when running on one engine.

## 10.10 Collision

If your boat is involved in a collision with another boat, dock, piling or a sandbar, your first priority is to check passengers for injuries and administer first aid if necessary. Once all passengers' situations are stabilized, thoroughly inspect the boat for damage. Check below decks for leaks and all control systems for proper operation. Plug all leaks or make the necessary repairs to the control systems before proceeding. Operate slowly and carefully, but take all necessary precautions to be safe. Request assistance if necessary. Haul the boat and make a thorough inspection of the hull, lower unit and control system for damage.

## 10.11 Grounding, Towing and Rendering Assistance

The law requires the owner or operator of a vessel to render assistance to any individual or vessel in distress, as long as his vessel is not endangered in the process.

If the boat should become disabled, or if another craft that is disabled requires assistance, be careful. The stress applied to a boat during towing can become excessive. Excessive stress can damage the structure and create a safety hazard for all onboard.

Freeing a grounded vessel, or towing a disabled boat requires specialized equipment and knowledge. Line failure and structural damage caused by improper towing have resulted in fatal injuries. To safely accomplish the towing task, we recommend this to be reserved for those with the right equip-

ment and knowledge, e.g., the U.S. Coast Guard or a commercial towing company.

The mooring cleats or bow/stern eyes on Pursuit boats are not designed or intended to be used for towing or lifting. These cleats are designed as mooring cleats for securing the boat to a dock, pier, etc. only. DO NOT use these fittings for towing, lifting or attempting to free a grounded vessel.

When towing operations are underway, have everyone on both vessels stay clear of the tow line and surrounding area. DO NOT allow anyone to be in line with the tow rope; a dangerous, recoil can occur if the rope should break or pull free.

Running aground can cause serious injury to passengers and damage the boat and its underwater gear.

If your boat runs aground, evaluate the damage, then proceed at low speed to the nearest service facility and have an immediate inspection made before further use. A damaged boat can also take on water; keep all life saving devices close while heading to a dock area. If the boat cannot be immediately removed from the water, thoroughly inspect the bilge area for leaks.

## 10.12 Flooding or Capsizing

Boats can become unstable if they become flooded or completely swamped. Always be aware of the position of the boat to the seas and the amount of water in the bilge. Water entering the boat over the transom can usually be corrected by turning the boat into the waves. If the bilge is flooding because of a hole in the hull, the engine bracket or a defective hose, you may be able to plug it with rags, close the thru-hull valve or assist the pumps by bailing with buckets. Put a mayday call into the Coast Guard or nearby boats and distribute life jackets as soon as you discover your boat is in trouble.

If the boat becomes swamped and capsizes, you and your passengers should stay with the boat as long as you can. It is much easier for the Coast Guard, aircraft, or other boats to spot, than people in the water.

### 10.13 Transporting your Boat

Your Pursuit boat is a large boat and should only be trailered by professionals with the right equipment and knowledge to transport large boats without causing damage. Contact your dealer or the Pursuit Customer Relations Department if you are planning to transport your boat and have any questions in regard to the proper equipment and support for the hull.

Damaged from trailers can occur if the boat hull is not supported properly. Make sure the trailer bunks and pads are adjusted so they provide enough support for the hull and are not putting excessive pressure on the lifting strakes. Hull damage resulting from improper trailer support is not covered by the Pursuit warranty.

### 10.14 Trailering your Boat

The boat trailer is an important part of your boating package. The trailer must be matched to the weight of the boat. A trailer with a capacity too low will be unsafe on the road and cause abnormal wear. A trailer with a capacity too high, can damage the boat. Contact your dealer to evaluate your towing vehicle and hitch, and to make sure you have the correct trailer for your boat.

#### IMPORTANT

**Your Pursuit is heavy and the selection of your trailer is very important. We recommend using a bunk style trailer that incorporates a combination of heavy duty rollers to support the keel and long bunks running under and parallel to the stringers to support the hull. Trailers without bunks can cause damage and have a tendency to put extreme pressure points on the hull, especially on the lifting strakes. The situation worsens when launching or retrieving. Damage resulting from improper trailer support or the use a full roller trailer will not be covered by the Pursuit Warranty.**

If you trailer your boat, make sure your tow vehicle is capable of towing the weight of the trailer, boat and equipment and the weight of the passengers and equipment inside the vehicle. This may require the tow vehicle to be specially equipped with a larger engine, transmission, brakes and trailer tow package.

The following safety tips and a book titled "Sportfish, Cruisers, Yachts - Owner's Manual," included in your literature packet, provide additional information you should know before trailering your boat.

**DO NOT** use bow or stern eyes, cleats or any other hardware for the purpose of towing, being towed or lifting, they are not designed for that purpose.

Contact your dealer to evaluate your towing vehicle and hitch, and to make sure you have the correct trailer for your boat.

- Make sure the trailer is a match for the weight and hull design of the boat. More damage can occur by the stresses of road travel than by normal water operation. A boat hull is designed to be supported evenly by water. So, when it is transported on a trailer it should be supported as evenly across the hull as possible allowing for even distribution of the weight of the hull, engine and equipment.
- Make sure the trailer bunks and rollers properly support the hull and do not put pressure on the lifting strakes. The rollers and bunks must be kept in good condition to prevent scratching and gouging of the hull.
- The capacity rating of the trailer should be greater, but not to an extreme, than the combined weight of the boat, motor, and equipment. The gross vehicle weight rating must be shown on the trailer. Make sure the weight of the boat, engine, gear and trailer is not more than the gross vehicle weight rating.
- **DO NOT** use your boat and trailer as a means for hauling excess gear.
- Make sure the boat is securely fastened on the trailer to prevent movement between the boat and trailer. The bow

rope, chain or turnbuckle in addition to the winch cable. Additional straps may be required across the beam of the boat. If these types of straps are used, protect your boat from chaffing or from the straps “slapping” the gelcoat. Cover area where straps are secured and twisting the straps before they are secured will help reduce the “slapping” affect. Your dealer can provide instructions on how to load, fasten and launch your boat.

## Before Going out on the Highway

- **Canvas Enclosures** - must be removed when trailering. Canvas enclosures will be damaged, they are not designed to withstand the extreme wind pressure encountered while trailering. Remove and properly store enclosures before trailering.
- **Tow Ball And Trailer Coupler** - make sure they are the same size and bolts and nuts are tightly secured.

The coupler **MUST BE** completely over the ball and the latching mechanism **LOCKED DOWN**.

- **Load Trailer Evenly** - make sure load is evenly distributed from front to rear, as well as side to side and has the correct distribution of weight on the hitch. Too much weight on the hitch will cause the rear of the tow vehicle to drag and may make steering more difficult. Too little weight on the hitch will cause the rig to fishtail and will make controlling the tow vehicle difficult. Contact your Pursuit dealer or the trailer manufacturer for the correct weight on the hitch for your trailer.
- **Safety Chains** - attach crisscrossing under the coupler to the frame of the tow vehicle. If the ball breaks, the trailer would follow in a straight line and prevent the coupler from dragging on the road. Make sure the trailer emergency brake cable or chain is also installed to the tow vehicle frame.
- **Lights** - make sure they are functioning properly.
- **Brakes** – check on a level parking area; roll forward and apply the brakes several

times at increasing speeds to determine if the brakes on the tow vehicle and trailer are working properly.

- **Side View Mirrors** - make sure the tow vehicle mirrors are large enough to provide an unobstructed rear view on both sides of the vehicle.
- **Tires and Wheel Bearings** – check before getting on the road.

Make sure your tow vehicle and trailer are in compliance with all state and local laws for the area you will be trailering. Contact your state motor vehicle bureau for laws governing the towing of trailers.

## 10.15 Water Skiing

Your Pursuit can be equipped for water skiing. If you have never pulled skiers, you should observe, learn and practice from an experienced driver. If you are an experienced driver, become familiar with the boat and the way it handles before pulling a skier. The driver should also know the ability of the skiers and drive accordingly. The following safety precautions should be observed while towing water skiers.

- Water ski only in safe areas, away from other boats and swimmers, out of channels and in water free of underwater obstructions and water ski only during daylight hours.
- Make sure that anyone who skis can swim. DO NOT allow people who cannot swim to water ski.
- Make sure all skiers wear a proper life jacket. A water skier is considered onboard the boat and a Coast Guard approved life jacket is required. A skier should wear a flotation device designed to withstand the impact of hitting the water at high speed. A second person must be onboard to observe the skier so your attention can be directed to the safe operation of the boat.
- Approach a skier in the water from the downwind side and STOP THE ENGINE and forward motion of the boat before coming in close proximity to the skier.
- Give immediate attention to a fallen skier. A fallen skier is very hard to see by other boats and is extremely vulnerable.

When a skier falls, be prepared to turn the boat immediately and return to the skier. Never leave a fallen skier alone in the water for any reason.

For additional information on water skiing, including hand signals and water skiing manuals, contact the American Water Skiing Association - 863-324-4341 or visit their Web Site at [www.usawaterski.org](http://www.usawaterski.org).

### DANGER

**CARBON MONOXIDE POISONING AND/OR ROTATING PARTS HAZARD**  
**Poisonous CO gases are present at the rear of the boat when an engine is running. A rotating propeller can cut or entangle swimmers, both of these hazards will cause death or serious injury. DO NOT use the swim/boarding platform when the engine is running.**

Remove and store the ladder properly before starting the engines.

## 10.16 Man Overboard

If someone falls overboard, be prepared to react quickly, especially when you are offshore. The following procedures will help you in recovering a person that has fallen overboard.

- Immediately stop the boat and sound a man overboard alarm and have all passengers point to the person in the water.
- Circle around quickly and throw a throwable PFD, cushion or life jacket to the person and if possible, another to use as a marker.
- Keep the person on the driver side of the boat to keep them in sight.
- Approach the person from the downwind side and maneuver the boat so the propellers are well clear of the person in the water.
- Turn off the engines when person is alongside and use a ring buoy or a boat cushion with a line attached, a paddle or boathook to assist person to the boat;

make sure you do not hit them with the ring buoy or the boat.

- Pull person to the boat and assist onboard.
- Check person for injuries and administer first aid if necessary, if the injuries are serious, call for help immediately.

Refer to Safety Equipment for more information on first aid and requesting emergency medical assistance.

## 10.17 Trash Disposal

The discharge of plastic trash or trash mixed with plastic is illegal anywhere in the marine environment. It is also illegal to discharge garbage in the navigable waters of the United States including the great lakes.

Regional, State, and local restrictions on garbage discharges also may apply. Vessels of 26 feet or longer must display in a prominent location, a durable placard at least 4 by 9 inches notifying the crew and passengers of the discharge restrictions.

Responsible boaters store refuse in bags and disposed of it properly on shore. Make sure your passengers are aware of the local waste laws and the trash management procedure on your boat.

## Routine Maintenance

### 11.1 General

#### **WARNING**

##### **FIRE/EXPLOSION/ASPHYXIATION HAZARD**

Cleaning agents and paint ingredients can be flammable and/or explosive, or dangerous to inhale. Make sure ventilation is adequate, wear proper personal protection and dispose of rags properly ashore.

Vapors from flammable solvents can cause fire, explosion or asphyxiation resulting in death or serious injury. Keep open flame or spark away from work area. **DO NOT** paint unless in a well-ventilated area.

Before using a cleaning product, refer to the product directions and specifications.

If urethane foam is used in the construction of your boat, be careful with high temperatures or flames in these areas. Urethane foam can ignite. **DO NOT** smoke, weld or burn. Avoid the use of space heaters and lights in areas where urethane foam is present. If ignited, urethane foam burns rapidly, produces extreme heat, releases hazardous gases and consumes much oxygen.

### 11.2 Exterior Hull and Deck

#### Hull Cleaning - Below the Waterline

When the boat is removed from the water, clean the outer bottom surface immediately. Algae, grass, dirt and other marine growth can be removed easier while the hull is still wet. Use a pressure cleaner or a hard bristle brush to clean the surface.

#### Bottom Painting

If the boat is to be left in saltwater for extended periods, protect it from marine growth by applying an antifouling paint. Because of variations in water temperature,

marine growth and pollution in different regions, your dealer and/or a qualified boat yard in your area should be consulted when deciding what bottom paint system to apply to your hull, because pollution and marine growth can damage fiberglass hulls.

Sanding or sandblasting the hull bottom will damage the fiberglass. Only use standard antifouling paints and fiberglass wax removers and primers recommended by the antifouling paint manufacturer when preparing the hull for bottom paint. Sanding or sandblasting and the use of a coating other than standard antifouling paint or epoxy barrier coatings are not recommended and will void the hull blister warranty.

**DO NOT** allow antifouling paint to contact the outboard engine. Most antifouling paints contain copper which will cause severe galvanic damage to the motor. Leave a 1/2" (12.7 mm) barrier between the hull bottom paint and outboard engine.

Most bottom paints require maintenance, especially when the boat is in saltwater or not used for extended periods, or after dry storage. If the hull bottom has been painted with antifouling paint, contact your dealer for the recommended maintenance procedures.

#### Sacrificial Anodes

Sacrificial zinc anodes are installed on the trim tabs, transom and outboard engines. The transom anode is connected to the bonding system and protects the underwater hardware that is bonded.

The anodes are less noble than copper based alloys and aluminum and will deteriorate first, protecting the more noble underwater hardware against galvanic corrosion. Anodes should be checked monthly and changed when they are 75% of their original size. When replacing the anodes, make sure the contact surfaces are clean, shiny metal and free of paint and corrosion. Never paint over the anode or protect it.

Boats stored in saltwater will require anodes to be replaced at least every 6 months to one year. Anodes requiring replacement

more frequently may indicate a stray current problem within the boat or at the slip or marina. Anodes that do not need to be replaced after one year may not be providing the proper protection. Loose or low quality anodes could be the problem. Contact your dealer for the proper size and type of anodes to be used and the specific installation procedure.

### Fiberglass Gelcoat Surfaces

Normal maintenance requires only washing with mild soap and water. A stiff brush can be used on the nonskid areas. Kerosene or commercially prepared products will remove oil and tar which could be a problem on trailered boats. DO NOT use harsh abrasive and chemical cleaners because they can damage or dull the gelcoat, reducing its life and making it more susceptible to stains. When the boat is used in saltwater, wash it thoroughly with soap and water after each use.

Sudden changes in temperature can affect gelcoat. When planning on moving your boat from outdoors to a heated location, allow the change of temperature to be gradual. Warm the location slowly after the boat is brought inside to allow the boat to change temperature slowly as the location is warmed. Or, if you are moving your boat from a warmer area to a colder one, wait for the temperature to be closer to the temperature of the warmer area or allow the warmer area and the boat to cool down.

At least once a season, wash and wax all exposed fiberglass surfaces. Use a high quality automotive or boat wax. Follow the procedure recommended by the wax manufacturer. Washing and waxing of your boat will have the same beneficial effects as they have on an automobile finish. The wax will fill minute scratches and pores which help prevent soiling and will extend the life of the gelcoat.

After the boat is exposed to the direct sunlight for a period of time, the color in the gelcoat tends to fade, dull or chalk from oxidation of the gel. This condition will be more apparent with dark colors, which

require more frequent maintenance. A heavier buffing is required to bring the gelcoat back to its original luster. For power cleaning use a light cleaner. To clean the boat by hand, use a heavier automotive cleaner. Before cleaning the surfaces, read the instructions given with the cleaner. After cleaning the surfaces, apply wax and polish all fiberglass surfaces except the nonskid areas.

If the fiberglass should become damaged and need repair, contact your dealer for an authorized repair person to make the repairs.

### WARNING

**SLIPPERY SURFACE HAZARD**  
Cleaning surfaces can generate slippery conditions which can result in death or serious injury. Use caution when cleaning with detergents. Rinse thoroughly.

Be careful when walking on wet gelcoat surfaces.

DO NOT wax nonskid surfaces, these could make them slippery and increase the possibility of injury.

### Stainless Steel Hardware

When using the boat in saltwater, wash hardware with soap and water after each use. When your boat is used in a higher corrosive environment, such as saltwater, water with a higher sulfur content or polluted water, stainless steel will periodically develop surface rust stains; this is normal under these conditions.

Clean and protect by using a high quality boat or automotive wax or a commercial metal cleaner and protectant.

DO NOT use citrus-based, abrasive materials such as sandpaper, bronze wool, or steel wool on stainless steel as damage will result.



## Anodized Aluminum Surfaces

Wash periodically with soap and water to keep it clean. If the boat is used in saltwater or polluted water, wash with soap and water after each use. Saltwater allowed to remain on anodized aluminum will penetrate the anodized coating and attack the aluminum.

Hardtops with aluminum frames, bimini tops and towers with canvas and/or fiberglass tops require special attention to the anodized aluminum just below the top. This area is subject to salt build-up from salty condensation and sea spray. It is often overlooked when the boat is washed and will not be rinsed by the rain. The aluminum just below the top is more likely to become pitted than the exposed aluminum on the structure. Make sure these areas are washed frequently with soap and water and rinsed thoroughly. Pay particular attention to places where the top material and lacing contact the frame. Coat the entire frame with a metal protector made for anodized aluminum once a month to protect against pitting and corrosion caused by the harsh effects of saltwater. The anodized aluminum used on your Pursuit was coated with a metal protector called Aluma Guard at the factory. Aluma Guard is a nonabrasive marine metal protector that protects anodized aluminum, stainless steel, brass and chrome. It also protects color anodizing from fading and discoloring due to harmful ultraviolet rays. Aluma Guard is available from your dealer or Rupp Marine Inc., 4761 Anchor Avenue, P.O. Drawer F, Port Salerno, FL 34992.

Aluma Guard and other metal protectors can make the metal slippery and should not be used on tower ladders, steering wheels and other areas for gripping or stepping.

Stains can be removed with a metal polish or fine polishing compound. To minimize corrosion, use a caulking compound to bed hardware and fasteners mounted to aluminum fabrications. If the anodized coating is badly scratched it can be touched up with paint. With proper care, anodized aluminum will provide many years of service.

Contact Pursuit Customer Relations before making any modifications to aluminum fabrications. Unauthorized modifications can void the warranty.

## Powder Coated (Painted) Aluminum Surfaces

Regular care is necessary to maintain the appearance of the powder coat finish. Build-up of salt and grime can hold moisture and damage powder coatings. This buildup can cause a corrosive condition that can damage the coating, especially in a salt air or coastal environment.

- Wash the finish regularly with warm water containing a pH neutral detergent (i.e. mild dish soap).
- Use a non-abrasive fiber cloth.
- Rinse thoroughly after cleaning.

## Chrome Hardware

Rinse with fresh water and wipe dry with towel or chamois after each use. Use a good chrome cleaner and polish on all chrome hardware. Clean and wax chrome prior to extended storage. In saltwater or other harsh environments, clean and wax more often.

## Acrylic Plastic

Acrylic plastic scratches easily. DO NOT use a dry cloth or glass cleaning solutions on acrylic. Use a soft cloth and mild soap and water for routine cleaning. Solvents and products containing ammonia can permanently damage acrylic plastic.

Fine scratches can be removed with a fine automotive clear coat polishing compound. A coat of automotive or boat wax is beneficial to protect the surface.

DO NOT use the following on acrylic plastic:

- Abrasive cleaners
- Acetone
- Solvents
- Alcohol
- Glass cleaners
- Cleaners containing ammonia

### Engines

Proper engine maintenance is essential to performance and reliability of your outboard engines. Maintenance schedules and procedures are outlined in your engine owner's manual, follow them exactly.

Flush the system when the boat is out of the water. If the boat is used in saltwater, flush daily.

The age of gasoline can affect engine performance. Chemical changes occur as the gasoline ages, causing deposits and varnish in the fuel system and reduces the octane rating of the fuel. Degraded fuel can damage the engine and boat fuel tank and lines. If your boat does not require at least one full tank of fresh fuel a month, add a fuel stabilizer to the gasoline to protect the fuel from degradation. Use only a fuel stabilizer recommended by your dealer or the engine manufacturer. Operate the boat at least 15 minutes after adding the stabilizer to allow the treated fuel to reach the engine. Your dealer or engine manufacturer can provide additional information on fuel degradation. For more recommendations for your specific area, check with your local Pursuit dealer.

Avoid using fuels with alcohol additives. Gasoline, extended with an alcohol blend, will absorb moisture from the air which can reach such concentrations that "phase separation" can occur where the water and alcohol mixture becomes heavy enough to settle out of the gasoline to the bottom of the tank. Since the fuel pick-up tube is near the bottom of the tank, phase separation can cause the engine to run poorly or not at all. This condition is more severe with methyl alcohol and will worsen as the alcohol content increases. Water or a jelly like substance in the fuel filters is an indication of possible

phase separation from the use of alcohol blended fuels.

Contact your Pursuit dealer or engine manufacturer for additional information regarding fuels and additives.

### Corian® Surfaces

Corian® is resistant to heat, but you should always use a hot pad or a trivet with rubber feet to protect Corian®. Avoid exposing Corian® to strong chemicals, such as paint removers, oven cleaners, etc. If contact occurs, flush the surface with water immediately. Soapy water or ammonia-based cleaners will remove most dirt and stains from all types of finishes.

DO NOT use the Corian® countertop as a cutting board.

Minor damage, scratches, general or chemical stains, scorching or burns and minor impact marks can be repaired on-site with a light abrasive cleanser and a product such as a Scotch-Brite® pad. For heavier damage, light sanding may be necessary. Heavy damage should be repaired by a Corian® licensed professional.

### Tempered Glass Sink

#### For best results:

- DO NOT use strong/abrasive cleaner. Test your cleaning solution on an unnoticeable area first, before applying to the entire surface.
- Wipe surfaces clean, immediately after applying cleaner.
- DO NOT allow cleaner to sit or soak on the surface.
- DO NOT use an abrasive brush or scouring pad to clean surfaces as damage will occur. Use only a soft, dampened sponge and cloth.
- Rinse and wipe the fixtures to prevent soap build-up.

## 11.3 Seats, Upholstery, Canvas and Enclosures

### Seat Slides and Swivel Bases

Perform the following periodically:

- Inspect and tighten mounting screws between seat slides and seat bottom.
- Inspect and tighten the mounting screws attaching seat bases to boat.
- Keep a light film of grease on manual seat slides.
- Keep a light film of grease on manual seat adjusting mechanism.
- Clean electric seat slides. DO NOT use harsh chemicals or abrasives. Lubrication is not required.

### Vinyl Upholstery

The vinyl upholstery used on the exterior seats and bolsters and headliner in the cabin should be cleaned with soap and water periodically. Stains, spills or soiling should be cleaned up immediately to prevent the possibility of permanent staining. When cleaning, rub gently. DO NOT use products containing ammonia, powdered abrasive cleaners, steel wool, strong solvents, acetone and lacquer solvents or other harsh chemicals as they can permanently damage or shorten the life of vinyl. Never use steam heat, heat guns or hair dryers.

Stronger cleaners, detergents and solvents may be effective in stain removal, but can cause either immediate damage or slow deterioration. Lotions, sun tan oil, waxes and polishes, etc., contain oils and dyes that can cause stiffening and staining of vinyls.

- Dry soil, dust and dirt - remove with a soft cloth.
- Dried on dirt - wash with a soft cloth dampened with water.
- Variations in surface gloss - wipe with a water-dampened soft cloth and allow to air dry.
- Stubborn dirt - wash with a soft cloth, dampened with Ivory Flakes® and water. Rinse with clean water.

- Stubborn spots and stains - spray with either Fantastik Cleaner® or Tannery Car Care Cleaner® and rub with a soft cloth. Rinse with clean water.
- Liquid spills - wipe with a clean absorbent cloth immediately. Rinse with clean water.
- Food grease and oily stains - spray with either Fantastik Cleaner® or Tannery Car Care Cleaner®, wiping with a soft cloth immediately. Be careful not to extend the area of contamination beyond its original boundary. Rinse with clean water.

### Canvas and Side Curtains

Acrylic canvas should be cleaned periodically by using a mild soap and water. Scrub lightly and rinse thoroughly to remove the soap. Do not use detergents. The top or accessories should never be folded or stored wet.

After several years, the acrylic canvas may lose some of its ability to shed water. If this occurs, wash the fabric and treat it with a commercially available water proofing designed for this purpose. Some leakage at the seams is normal and unavoidable with acrylic enclosures.

Side curtains and clear connectors can be cleaned with mild soap and water. Do not allow them to become badly soiled. Dirt, oil, mildew, and cleaning agents containing ammonia will shorten the life of the vinyl that is used for clear curtains. After cleaning the curtains and allowing them to dry, apply a non-lemon furniture polish or an acrylic plastic and clear plastic protector to extend the life of the curtains.

Vinyl curtains should be stored either rolled or flat, without folds or creases. Folding the curtains will make permanent creases that could cause the vinyl to crack.

DO NOT use any polish containing lemon or lemon scents; lemon juice attacks vinyl and shorten its life.

Lubricate snaps periodically with petroleum jelly or silicone grease. Lubricate zippers with silicone spray or paraffin.

Remove the bimini top, side curtains, clear connector, back drop and aft curtain when trailering. Canvas enclosures are not designed to withstand the extreme wind pressure encountered while trailering and will be damaged. Always remove and store properly before trailering.

### 11.4 Cabin Interior

Clean cabin interior just like you would clean a home interior.

- Teak woodwork - use teak oil.
- Carpeting - use a vacuum cleaner.
- Vinyl headliner - clean as previously explained.

Air and sunlight are very good cleansers. Periodically, place cushions, sleeping bags, etc. on deck, under the sun and fresh air to dry and air out. If cushions or equipment get wet with saltwater, remove and use clean, fresh water to rinse off the salt crystals. Salt retains moisture and will cause damage. Dry thoroughly and reinstall.

If you leave the boat for a long period of time, put all cushions on their sides, open all interior cabin and locker doors, and hang a commercially available mildew protector in the cabin.

Read the label carefully on mildew protectors and remove the protector and allow the cabin to ventilate completely before using the cabin.

### 11.5 Bilge

To keep the bilge clean and fresh, use a commercial bilge cleaner regularly. Follow the directions carefully. All exposed pumps and metal components should be sprayed with a protector periodically to reduce the corrosive effects of the high humidity present in these areas.

#### **WARNING**

##### **FIRE/EXPLOSION OR ASPHYXIATION HAZARD!**

**Fumes from flammable solvents can cause fire, explosion or asphyxiation resulting in death or serious injury. DO NOT use flammable solvents to clean the bilge.**

### 11.6 Generator (Optional)

The engine maintenance required on the generator is similar to an inboard engine. The engine incorporates a pressure-type lubrication system and a fresh water cooled engine block which is thermostatically controlled. The most important factors to the longevity of the generator is proper ventilation and maintenance of the fuel system, ignition system, cooling system, lubrication system and the AC alternator.

Maintenance schedules and procedures are outlined in the generator owner's manual; follow them exactly.

## Seasonal Maintenance

### 12.1 Storage and Lay-up

#### Before Hauling:

- Pump out the head. Flush the holding tank using clean soap, water, deodorizer and pump out cleaning solution.
- Leave the fuel tank nearly full to reduce condensation that can accumulate in the tank. Allow enough room for fuel to expand without leaking from the vents. Algae can grow in the accumulated water in diesel fuel tanks, especially in warm climates. Adding a high quality diesel fuel additive containing an algaecide may be required to control algae during storage in your area.
- Drain fresh water system.
- Refer to the engine owner's manual for detailed information on preparing the engines for storage.

#### Lifting

It is essential that care be used when lifting your boat. Make sure the spreader bar at each sling is at least as long as the distance across the widest point of the boat that the sling will surround. Put the slings in position. Refer to the drawing in the Schematics for the correct position of the lifting slings. The positions are marked with small labels on each side of the boat under the rubrails. Tie fore and aft slings together to prevent slings from sliding on the hull.

Elevating lifts are commonly used to store boats for extended periods. To provide proper support, the bunks that support the hull should be aligned with and run parallel to the hull stringers. The bow and stern eyes, if equipped should not be used as sole support for storage.

Your boat can be damaged from improper lifting and rough handling when being transported by lift trucks. Care and proper handling procedures must be used when using a lift truck to move your boat. DO NOT attempt to lift boat with a substantial amount of water in the bilge.

Severe gelcoat cracking or more serious hull damage can occur during hauling and launching if pressure is created on the gunwales (sheer) by the slings. Use flat, wide slings and spreaders long enough to keep pressure from the gunwales. DO NOT allow your boat to be hauled when the spreaders on the lift are not wide enough to take the pressure off the gunwales.

#### Supporting The Boat for Storage

A trailer, elevating lift or a well-made cradle is the best support for your boat during storage.

#### When storing the boat on a trailer for a long period:

- Make sure the rollers and pads support the hull of the boat and the trailer is on a level surface with the bow high enough so water will drain from the bilge and cockpit. The trailer must properly support the hull. The bunks and rollers should match the bottom of the hull and should not be putting pressure on the lifting strakes.
- Make sure the hitch is properly supported.
- Check the tires once each season. Add enough air for the correct amount of inflation for the tires.
- Make sure the engines are in the down position.

#### When storing the boat on a lift or cradle:

- The cradle must be specific for boat storage. Make sure lift or cradle is well supported with the bow high enough to provide proper drainage of the bilge. The cradle or lift must be in the proper fore and aft position to properly support the hull. When the cradle or lift is in the correct location, the bunks should match the bottom of hull and should not be putting pressure on the lifting strakes.
- Make sure the engines are in the down position.
- Make sure bunks and rollers are adjusted so they are not putting pressure on lifting strakes and are providing enough support for the hull. Hull damage

resulting from improper cradle or trailer support is not covered by the Pursuit warranty.

### Preparing The Boat For Storage:

- Remove the bilge drain plug(s), if installed.
- Thoroughly wash fiberglass exterior, especially the antifouling portion of the bottom. Remove as much marine growth as possible. Lightly wax the exterior fiberglass components.
- Remove all oxidation from the exterior hardware and apply a light film of moisture displacing lubricant.
- Remove propellers and grease the propeller shafts using light waterproof grease.
- Remove batteries and clean using clear, clean water. Make sure batteries have sufficient water and terminals are clean. Keep the batteries charged and stored in a cool, dry place and safe from freezing throughout the storage period.
- Refer to the Electrical System for information on the maintenance of the AC and DC electrical systems.
- Coat all faucets and exposed electrical components in the cabin and cockpit with a protecting oil.
- Clean, drain and completely dry the fish-boxes, sinks and livewells.
- Thoroughly clean the interior of the boat; vacuum all carpets and dry clean drapes and upholstery.
- Remove cushions, open the refrigerator/cooler door and as many locker doors as possible. Leaving as many of these areas open as possible will improve fresh air ventilation during the storage period.
- Place a mildew preventive system in the cabin area before it is closed for storage.
- Clean the exterior upholstery with a good vinyl cleaner and dry thoroughly. Spray the weather covers and boat upholstery with a spray disinfectant. Enclosed areas such as the refrigerator, shower basin, storage locker areas, etc. should also be sprayed with a disinfectant.

### 12.2 Winterizing

#### Fresh Water System

The entire fresh water system must be completely drained. Disconnect all hoses, check valves, etc. and blow all the water from the system. Make sure the water heater and fresh water tank are completely drained. Use very low air pressure only when blowing water from the system to prevent damage to components. The check valve mechanism built in the fresh water pump will not remove the water from the pump. Remove the outlet hose on the pump, turn it on and allow it to pump out any remaining water, approximately a cupful.

An alternate method is to use commercially available nontoxic, fresh water system antifreeze. After draining the potable water tank, lines and water heater, pour the antifreeze mixture into the fresh water tank, prime and operate the pump until the mixture flows from all fresh water faucets. Be sure to open ALL faucets, including the fresh water spray head in the stern bait station sink and the water supply valve for the head. Make sure antifreeze has flowed through all of the fresh water drains. Allow the antifreeze to fill the sink traps to trap odors from the waste tank.

The shower/cabin drain sump system must be winterized also. Clean debris from the drain and sump and flush for several minutes with fresh clean water. After the system is clean, pump the drain sump as dry as possible. Then pour a potable water antifreeze mixture into the shower drain until antifreeze has been pumped through the entire system and out of the thru-hull.

For additional information, refer to Plumbing Systems.

#### Raw Water System

Drain the raw water systems completely. Disconnect all hoses and blow the water from the system. Use very low air pressure only when blowing water from the system to prevent damage to components. The check valve mechanism built in the raw water

washdown pump, will not remove the water from the pump. Remove the outlet hose on the pump, turn it on and allow it to pump out any remaining water, approximately a cupful.

An alternate method is to use commercially available nontoxic, potable water system antifreeze. If antifreeze is used, pour the mixture into a pail and put the raw water intake lines into the solution. Run the pumps one at a time until the antifreeze solution is visible at all raw water faucets, discharge fittings and drains. Make sure antifreeze has flowed through all of the raw water drains.

Run the stern fishbox macerator pump until all the water is removed from the fishbox and the pump. To avoid damage to the pump, DO NOT run pump dry for more than ten seconds.

## Generator Raw Water Systems

Drain sea strainer, heat exchangers and raw water supply and discharge lines for the optional generator raw water supply pumps. Make sure all sea water has drained from the exhaust system. Some generator engine mufflers have a drain plug that must be removed to properly drain the muffler. Once this is accomplished, pour a nontoxic marine engine antifreeze mixture into a large pail and put the generator raw water intake lines into the solution. Run the generator until the antifreeze solution is visible at the exhaust port, then shut the engine off.

Winterize the generator engine and fuel system by following the generator manufacturer's winterizing procedures. Refer to generator's owner's manuals or contact a Pursuit dealer.

## Marine Toilet

Winterize the marine toilet following the manufacturer's winterizing procedures; follow the procedures exactly. Refer to the toilet owner's manual. Drain the intake and discharge hoses completely using low air pressure if necessary. The head holding tank and macerator discharge pump must be pumped dry and one gallon of potable water antifreeze poured into the tank

through the deck waste pumpout fitting. After the antifreeze has been added to the holding tank, open the overboard discharge valve and activate the macerator pump until the antifreeze solution is visible at the discharge thru-hull.

## Air Conditioner

Disconnect and drain the air conditioner intake and discharge hoses. Remove all water from the sea strainer and thru-hull fitting. Allow all water to drain from the system. An alternate method is the use of commercially available nontoxic, potable water system antifreeze. If antifreeze is used, drain the sea strainer and pour the mixture into a pail and put the raw water intake line into the solution. Run the air conditioner until the antifreeze solution is visible at the discharge fitting on the hull side.

Air conditioner components must be winterized also; follow winterizing procedure in the air conditioner owner's manual.

The air conditioning, engine control system, head, and steering systems have specific lay-up requirements. Refer to the owner's manuals for recommended winterizing procedures.

## Bilge

Coat all metal components, wire busses, connector plugs (in the bilge), all strainers, seacocks and steering components with a protecting oil. The bilge pumps and bilge pump lines must be completely free of water and dried out when the boat is laid up for the winter in climates where freezing occurs. Compartments in the bilge that will not drain completely should be pumped out and then sponged until completely free of water. Dry the hull bilge and self-bailing cockpit troughs. Water freezing in these areas could cause damage.

## Hardtop

Makes sure all drain holes in the legs are open and legs are completely free of water. Remove the canvas and thoroughly clean

and store in a safe, dry place. Remove all electronics. Coat all wire connectors and bus bars in the helm compartment with a protecting oil.

Clean the aluminum frame with soap and water and dry thoroughly. Apply an aluminum metal protector to the entire frame to reduce corrosion and pitting.

### NOTICE

**Make sure the leg drain holes are clear when the boat is laid up for the winter. Water trapped inside the hardtop, tower or radar arch legs can freeze and cause the legs to split.**

#### Tower (if installed)

Make sure all holes in the tower and hardtop legs are open and completely free of water. Check and clear tower basket drains of debris. Remove the tower sun shade, if installed, the belly band or other upholstery, thoroughly clean and store in a safe, dry place. Remove all electronics. Coat all wire connectors and bus bars in the helm compartment with a protecting oil. Cover the tower basket with a tarp and secure it properly.

Clean the aluminum frame with soap and water and dry thoroughly. Apply an aluminum metal protector to the entire frame to reduce corrosion and pitting.

#### Covering for Winter Storage

Proper storage is very important to prevent serious damage to the boat. If the boat is stored outside, support and secure a storage cover properly over the boat. It is best to have a frame built over the boat to support the canvas. It should be a few inches wider than the boat so the canvas will clear the rails and allow passage of air. If this cover is fastened too tightly there will be inadequate ventilation and can lead to mildew, moisture accumulation, etc. Fasten the canvas down securely so wind cannot remove it or cause chafing of the hull superstructure. DO NOT

store the boat in a damp storage enclosure. Excessive dampness can cause electrical problems, corrosion, and excessive mildew.

DO NOT use the bimini top or convertible top canvas in place of the winter storage cover. The life of these tops can be shortened if exposed to harsh weather elements for long periods.

DO NOT use an electric or fuel burning heating unit in the bilge area.

If the boat is to be stored indoors, make sure the building has enough ventilation and there is enough ventilation both inside the boat and around the boat. If the boat is to be stored indoors or outdoors, open all drawers, clothes lockers, cabinets, and doors a little. If possible, remove the upholstery, mattresses, clothing, and rugs.

### 12.3 Recommissioning

DO NOT operate the boat unless it is completely assembled. Keep all fasteners tight. Keep adjustments according to specifications.

Before launching the boat, make sure to install hull drain plug(s).

#### Reactivating The Boat After Storage

- Charge and install the batteries.
- Install hull drain plug(s).
- Check the engines and generator for damage and follow the manufacturer's instructions for recommissioning.
- Check the mounting bolts of engines to make sure they are tight.
- Perform all routine maintenance.
- Check all hose clamps for tightness.
- Pump antifreeze from any systems winterized with antifreeze and flush several times with fresh water. Make sure all antifreeze is flushed from the water heater and it is filled with fresh water before it is activated.
- Check and lubricate the steering system.
- Clean and wash the boat.
- Install all upholstery, cushions and canvas.



## After Launching:

- Check all water systems and the engine mounting bolts for leaks. Operate each system one at a time and check for leaks and proper operation.
- Check the bilge pump, manual and automatic switches.
- When the engines start, check the cooling system port below the engine cowling for a strong stream of water to ensure cooling pump is operating.
- Carefully monitor the gauges and check for leakage and abnormal noises.
- Operate boat at slow speeds until engine temperature stabilizes and all systems are operating normally.



## Glossary of Terms

**Aft:** In, near, or toward the stern of a boat.

**Aground:** A boat stuck on the bottom.

**Amidships:** In or toward the part of a boat midway between the bow and stern.

**Anchor:** A specially shaped heavy metal device designed to dig efficiently into the bottom under a body of water and hold a boat in place.

**Anchorage:** An area specifically designated by governmental authorities in which boats may anchor.

**Ashore:** On shore.

**Astern:** Behind the boat, to move backwards.

**Athwartship:** At right angles to the center line of the boat.

**Barnacles:** Small, hard-shelled marine animals which are found in salt water attached to pilings, docks and bottoms of boats.

**Beam:** The breadth of a boat usually measured at its widest part.

**Bearing:** The direction of an object from the boat, either relative to the boat's direction or to compass degrees.

**Berth:** A bunk or a bed on a boat.

**Bilge:** The bottom of the boat below the flooring.

**Bilge Pump:** A pump that removes water that collects in the bilge.

**Boarding:** Entering or climbing into a boat.

**Boarding Ladder:** Set of steps temporarily fitted over the side of a boat to assist persons coming aboard.

**Boat Hook:** Short shaft of wood or metal with a hook fitting at one end shaped to aid in extending one's reach from the side of the boat.

**Bow:** The front end of a boat's hull.

**Bow Line:** A line that leads forward from the bow of the boat.

**Bow Rail:** Knee high rails of solid tubing to aid in preventing people from falling overboard.

**Bridge:** The area from which a boat is steered and controlled.

**Bridge Deck:** A deck forward and usually above the cockpit deck.

**Broach:** When the boat is sideways to the seas and in danger of capsizing; a very dangerous situation that should be avoided.

**Bulkhead:** Vertical partition or wall separating compartments of a boat.

**Cabin:** Enclosed superstructure above the main deck level.

**Capsize:** When a boat lays on its side or turns over.

**Chock:** A deck fitting, usually of metal, with inward curving arms through which mooring or anchor lines are passed so as to lead them in the proper direction both onboard and off the boat.

**Cleat:** A deck fitting, usually of metal with projecting arms used for securing anchor and mooring lines.

**Closed Cooling System:** A separate supply of fresh water that is used to cool the engine and circulates only within the engine.

**Coaming:** A vertical piece around the edges of cockpit, hatches, etc. to stop water on deck from running below.

**Cockpit:** An open space, usually in the aft deck, outside of the cabin.

**Companionway:** Opening in the deck of a boat to provide access below.

**Compartment:** The interior of a boat divided off by bulkheads.

**Cradle:** A framework designed to support a boat as she is hauled out or stored.

**Cutlass Bearing:** A rubber bearing in the strut that supports the propeller shaft.

**Deck:** The floor-like platform of a boat that covers the hull.

**Displacement:** The volume of water displaced by the hull. The displacement weight is the weight of this volume of water.

**Draft:** The depth of water a boat needs to float.

**Dry Rot:** A fungus attack on wood areas.

**Dry-dock:** A dock that can be pumped dry during boat construction or repair.

**Electrical Ground:** A connection between an electrical connector and the earth.

**Engine Beds:** Sturdy structural members running fore and aft on which the inboard engines are mounted.

**EPIRB:** Emergency Position Indicating Radio Beacon. Operates as a part of a worldwide satellite distress system.

**Even Keel:** When a boat floats properly as designed.

**Fathom:** A measure of depth. One Fathom = 6 feet.

**Fender:** A soft object of rubber or plastic used to protect the topsides from scarring and rubbing against a dock or another vessel.

**Fend off:** To push or hold the boat off from the dock or another boat.

**Flying Bridge:** A control station above the level of the deck or cabin.

**Flukes:** The broad portions of an anchor which dig into the ground.

**Following Sea:** A sea that comes up from the stern and runs in the same direction that the boat is going.

**Fore:** Applies to the forward portions of a boat near the bow.

**Foundering:** When a boat fills with water and sinks.

**Freeboard:** The height from the waterline to the lowest part of the deck.

**Galley:** The kitchen of a boat.

**Grab Rail:** Hand-hold fittings mounted on cabin tops or sides for personal safety when moving around the boat, both on deck and below.

**Ground Tackle:** A general term including anchors, lines, and other gear used in anchoring.

**Grounds:** A boat touches the bottom.

**Gunwale:** The upper edge of a boat's side.

**Hand Rail:** Rail mounted on the boat, for grabbing with your hand, to steady you while walking about the boat.

**Harbor:** An anchorage which provides reasonably good protection for a boat, with shelter from wind and sea.

**Hatch:** An opening in the deck with a door or lid to allow for access down into a compartment of a boat.

**Head:** A toilet on a boat.

**Heat Exchanger:** Used to transfer the heat that is picked up by the closed cooling system to the raw cooling water.

**Helm:** The steering and control area of a boat.

**Hull:** The part of the boat from the deck down.

**Inboard:** A boat with the engine mounted within the hull of the boat. Also refers to the center of the boat away from the sides.

**Inboard/outboard:** Also stern drive or I/O. A boat with an inboard engine attached to an outboard drive unit.

**Keel:** A plate or timber plate running lengthwise along the center of the bottom of a boat.

**Knot:** Unit of speed indicating nautical miles per hour. 1 knot = 1 nautical mile per hour (1.15 miles per hour). A nautical mile is equal to one minute of latitude: 6076 feet. Knots times 1.15 equals miles per hour. Miles per hour times .87 equals knots.

**Lay-up:** To decommission a boat for the winter (usually in northern climates).

**Leeward:** The direction toward which the wind is blowing.

**Length On The Waterline (l.w.l.):** A length measurement of a boat at the waterline from the stern to where the hull breaks the water near the bow.

**Limber Hole:** A passage cut into the lower edges of floors and frames next to the keel to allow bilge water to flow to the lowest point of the hull where it can be pumped overboard.

**Line:** The term used to describe a rope when it is on a boat.

**Lists:** A boat that inclines to port or starboard while afloat.

**L.O.A.:** Boat length overall.

**Locker:** A closet, chest or box aboard a boat.

**Loran:** An electronic navigational instrument which monitors the boat's position using signals emitted from pairs of transmitting stations.

**Lunch hook:** A small light weight anchor typically used instead of the working anchor. Normally used in calm waters with the boat attended.

**Midships:** The center of the boat.

**Marina:** A protected facility primarily for recreational small craft.

**Marine Ways or Railways:** Inclined planes at the water's edge onto which boats are hauled.

**Moored:** A boat secured with cables, lines or anchors.

**Mooring:** An anchor permanently embedded in the bottom of a harbor that is used to secure a boat.

**Nautical Mile:** A unit of measure equal to one minute of latitude. (6076 feet)

**Nun Buoy:** A red or red-striped buoy of conical shape.

**Outboard:** A boat designed for an engine to be mounted on the transom. Also a term that refers to objects away from the center line or beyond the hull sides of a boat.

**Pad Eye:** A deck fitting consisting of a metal eye permanently secured to the boat.

**Pier:** A structure which projects out from the shoreline.

**Pile or Piling:** A long column driven into the bottom to which a boat can be tied.

**Pitching:** The fore and aft rocking motion of a boat as the bow rises and falls.

**Pitch:** The measure of the angle of a propeller blade. Refers to the theoretical distance the boat travels with each revolution of the propeller.

**P.F.D:** Personal Flotation Device.

**Port:** The left side of the boat when facing the bow.

**Porthole (port):** The opening in the side of a boat to allow the admittance of light and air.

**Propeller:** A device having two or more blades that is attached to the engine and used for propelling a boat.

**Propeller Shaft:** Shaft which runs from the back of the engine gear box, aft, through the stuffing box, shaft log, struts, and onto which the propeller is attached.

**Pyrotechnic Distress Signals:** Distress signals that resemble the brilliant display of flares or fireworks.

**Raw Water Cooled:** Refers to an engine cooling system that draws sea water in through a hull fitting or engine drive unit, circulates the water in the engine, and then discharges it overboard.

**Reduction Gear:** Often combined with the reverse gear so that the propeller turns at a slower rate than the engine.

**Reverse Gear:** Changes the direction of rotation of the propeller to provide thrust in the opposite direction for stopping the boat or giving it sternway.

**Roll:** A boat's sideways rotational motion in rough water.

**Rope Locker:** A locker, usually located in the bow of a boat, used for stowing the anchor line or chain.

**Rubrail:** Railing (often rubber or hard plastic) that runs along the boat's sheer to protect the hull when coming alongside docks, piers, or other boats.

**Rudder:** A moveable flat surface that is attached vertically at or near the stern for steering.

**Sea anchor:** An anchor that does not touch the bottom. Provides drag to hold the bow in the most favorable position in heavy seas.

**Scupper:** An opening in the hull side or transom of the boat through which water on deck or in the cockpit is drained overboard.

**Seacock:** Safety valves installed just inside the thru-hull fittings and ahead of the piping or hose running from the fittings.

**Shaft Log:** Pipe through which the propeller shaft passes.

**Sheer:** The uppermost edge of the hull.

**Sling:** A strap which will hold the boat securely while being lifted, lowered, or carried.

**Slip:** A boat's berth between two pilings or piers.

**Sole:** The deck of a cockpit or interior cabin.

**Spring Line:** A line that leads from the bow aft or from the stern forward to prevent the boat from moving ahead or astern.

**Starboard:** The right side of a boat when facing the bow.

**Steerageway:** Sufficient speed to keep the boat responding to the rudder or drive unit.

**Stem:** The vertical portion of the hull at the bow.

**Stern:** The rear end of a boat.

**Stow:** To pack away neatly.

**Stringer:** Longitudinal members fastened inside the hull for additional structural strength.

**Strut:** Mounted to the hull which supports the propeller shaft in place.

**Strut Bearing:** See “cutlass bearing.”

**Stuffing Box:** Prevents water from entering at the point where the propeller shaft passes through the shaft log.

**Superstructure:** Something built above the main deck level.

**Swamps:** When a boat fills with water from over the side.

**Swimming Ladder:** Much the same as the boarding ladder except that it extends down into the water.

**Taffrail:** Rail around the rear of the cockpit.

**Thru-hull:** A fitting used to pass fluids (usually water) through the hull surface, either above or below the waterline.

**Topsides:** The side skin of a boat between the waterline or chine and deck.

**Transom:** A flat stern at right angles to the keel.

**Travel Lift:** A machine used at boat yards to hoist boats out of and back into the water.

**Trim:** Refers to the boat's angle or the way it is balanced.

**Trough:** The area of water between the crests of waves and parallel to them.

**Twin-Screw Craft:** A boat with two propellers on two separate shafts.

**Underway:** When a boat moves through the water.

**Wake:** Disrupted water that a boat leaves astern as a result of its motion.

**Wash:** The flow of water that results from the action of the propeller or propellers.

**Waterline:** The plane of a boat where the surface of the water touches the hull when it is afloat on even keel.

**Watertight Bulkhead:** Bulkheads secured so tightly so as not to let water pass.

**Wharf:** A structure generally parallel to the shore.

**Working Anchor:** An anchor carried on a boat for most normal uses. Refers to the anchor used in typical anchoring situations.

**Windlass:** A winch used to raise and lower the anchor.

**Windward:** Toward the direction from which the wind is coming.

**Yacht Basin:** A protected facility primarily for recreational small craft.

**Yaw:** When a boat runs off her course to either side.





## Maintenance Schedule

Maintenance	Each Use	Weekly	Monthly	Semi-Annually	Yearly	As Nedeed
Clean hull below the waterline				X		
Bottom paint					X	X
Check sacrificial anodes			X			
Replace sacrificial anodes					X	
Wash boat canvas& hardware	X		X			
Wax exterior gelcoat				X		X
Clean & protect hardware						X
Polish & protect plastic glass					X	X
Clean exterior upholstery	X					X
Clean cabin & interior upholstery						X
Flush engine with fresh water	X					
Spray metal components in bilge with a protector			X			
Clean bilge				X		X
Check bilge for leaks	X		X			
Inspect & operate thru-hull valves			X			
Inspect steering & control systems	X					
Service steering & control systems				X		
Inspect fuel system for leaks	X					
Inspect & service fuel system				X		
Inspect fuel tank vents & screens					X	
Replace fuel filters					X	
Lubricate fuel fill O-rings			X			
Inspect fire extinguisher			X			
Test bilge pump auto switches	X					
Inspect & protect electrical components, wire & battery connections				X		
Check battery electrolyte & service			X			
Test and inspect AC electrical system & shore power cord				X		
Inspect water systems for leaks				X		
Check neutral safety switch	X					
Check trim tab fluid level			X			

**Maintenance Log**

Date	Hours	Dealer	Service/Repairs





## Boating Accident Report

DEPARTMENT OF TRANSPORTATION U.S. COAST GUARD C.G. 1865 (REV. 1/88)		<b>BOATING ACCIDENT REPORT</b>			FORM APPROVED OMB NO. 211-0010	
The operator/owner of a vessel used for recreational purposes is required to file a report in writing whenever an accident results in: loss of life or disappearance from a vessel, or an injury which requires medical treatment beyond first aid; or property damage in excess of \$200 or complete loss of the vessel. Reports in death and injury cases must be submitted within 48 hours. Reports in other cases must be submitted within 10 days. Reports must be submitted to reporting authority in the state where the accident occurred. This form is provided to assist the operator in filing the required written report.						
<b>COMPLETE ALL BLOCKS (indicate those not applicable by "NA")</b>						
NAME AND ADDRESS OF OPERATOR		AGE OF OPERATOR DATE OF BIRTH		OPERATOR'S EXPERIENCE This type of boat      Other boat operating Exp. <input type="checkbox"/> Under 20 Hours <input type="checkbox"/> Under 20 Hours <input type="checkbox"/> 20 to 100 Hours <input type="checkbox"/> 20 to 100 Hours <input type="checkbox"/> 100 to 500 Hours <input type="checkbox"/> 100 to 500 Hours <input type="checkbox"/> Over 500 Hours <input type="checkbox"/> Over 500 Hours		
OPERATOR TELEPHONE NUMBER		OWNER TELEPHONE NO.				
NAME AND ADDRESS OF OWNER		RENTED BOAT <input type="checkbox"/> YES <input type="checkbox"/> NO		NUMBER OF PERSONS ON BOARD		
				FORMAL INSTRUCTION IN BOATING SAFETY <input type="checkbox"/> None <input type="checkbox"/> State <input type="checkbox"/> U.S. Power Squadrons <input type="checkbox"/> USCG Auxiliary <input type="checkbox"/> American Red Cross <input type="checkbox"/> Other (Specify) _____		
<b>VESSEL NO.</b> (this vessel)						
BOAT REGISTER NO.	BOAT NAME	BOAT MAKE	BOAT MODEL	MFR HULL IDENTIFICATION NO.		
TYPE OF BOAT <input type="checkbox"/> Open Motorboat <input type="checkbox"/> Cabin Motorboat <input type="checkbox"/> Auxiliary Sail <input type="checkbox"/> Sail (only) <input type="checkbox"/> Rowboat <input type="checkbox"/> Canoe <input type="checkbox"/> Other (Specify)		HULL MATERIAL <input type="checkbox"/> Wood <input type="checkbox"/> Aluminum <input type="checkbox"/> Steel <input type="checkbox"/> Fiberglass <input type="checkbox"/> Rubber/vinyl <input type="checkbox"/> Other (Specify)		ENGINE <input type="checkbox"/> Outboard <input type="checkbox"/> Inboard gasoline <input type="checkbox"/> Inboard diesel <input type="checkbox"/> Inboard-outdrive <input type="checkbox"/> Jet <input type="checkbox"/> Other (Specify)		
		PROPULSION No. of engines _____ Horse Power (total) _____ Type of fuel _____		CONSTRUCTION Length _____ Year built (boat) _____		
		Has boat had a Safety Examination? For current year? <input type="checkbox"/> YES <input type="checkbox"/> NO      Year _____ Indicate whether <input type="checkbox"/> USCG Auxiliary Courtesy Marine Exam <input type="checkbox"/> State/local examination <input type="checkbox"/> Other				
<b>ACCIDENT DATA</b>						
DATE OF ACCIDENT		TIME am pm	NAME OF BODY OF WATER		LOCATION (Give location precisely)      Lat      Long	
STATE		NEAREST CITY OR TOWN			COUNTY	
WEATHER <input type="checkbox"/> Clear <input type="checkbox"/> Rain <input type="checkbox"/> Cloudy <input type="checkbox"/> Snow <input type="checkbox"/> Fog <input type="checkbox"/> Hazy		WATER CONDITIONS <input type="checkbox"/> Calm (waves less than 6") <input type="checkbox"/> Choppy (waves 6" to 2') <input type="checkbox"/> Rough (greater than 6") <input type="checkbox"/> Strong Current		TEMPERATURE (Estimate) Air _____ F° Water _____ F°		
		WIND <input type="checkbox"/> None <input type="checkbox"/> Light (0 - 6mph) <input type="checkbox"/> Moderate (7 - 14 mph) <input type="checkbox"/> Strong (15 - 25 mph) <input type="checkbox"/> Storm (Over 25 mph)		VISIBILITY DAY      NIGHT <input type="checkbox"/> Good <input type="checkbox"/> <input type="checkbox"/> Fair <input type="checkbox"/> <input type="checkbox"/> Poor <input type="checkbox"/>		
OPERATION AT TIME OF ACCIDENT (Check all applicable) <input type="checkbox"/> Commercial Activity <input type="checkbox"/> Drifting <input type="checkbox"/> Cruising <input type="checkbox"/> At Anchor <input type="checkbox"/> Maneuvering <input type="checkbox"/> Tied to Dock <input type="checkbox"/> Approaching Dock <input type="checkbox"/> Fueling <input type="checkbox"/> Leaving Dock <input type="checkbox"/> Fishing <input type="checkbox"/> Water Skiing <input type="checkbox"/> Hunting <input type="checkbox"/> Racing <input type="checkbox"/> Skin Diving/ <input type="checkbox"/> Towing <input type="checkbox"/> Swimming <input type="checkbox"/> Other (Specify) <input type="checkbox"/> Being Towed		TYPE OF ACCIDENT (Check all applicable) <input type="checkbox"/> Grounding <input type="checkbox"/> Collision with Fixed Object <input type="checkbox"/> Capsizing <input type="checkbox"/> Collision with Floating Object <input type="checkbox"/> Flooding <input type="checkbox"/> Falls Overboard <input type="checkbox"/> Sinking <input type="checkbox"/> Falls in boat <input type="checkbox"/> Fire or explosion (fuel) <input type="checkbox"/> Hit by Boat or Propeller <input type="checkbox"/> Fire or explosion (Other than fuel) <input type="checkbox"/> Fallen Skier <input type="checkbox"/> Collision with Vessel <input type="checkbox"/> Other (Specify)		WHAT IN YOUR OPINION CONTRIBUTED TO THE ACCIDENT (Check all applicable) <input type="checkbox"/> Weather <input type="checkbox"/> Alcohol use <input type="checkbox"/> Excessive speed <input type="checkbox"/> Drug use <input type="checkbox"/> No Proper Lookout <input type="checkbox"/> Fault of Hull <input type="checkbox"/> Restricted Vision <input type="checkbox"/> Fault of Machinery <input type="checkbox"/> Overloading <input type="checkbox"/> Fault of Equipment <input type="checkbox"/> Improper Loading <input type="checkbox"/> Hunting <input type="checkbox"/> Racing <input type="checkbox"/> Operator Inexperience <input type="checkbox"/> Hazardous Waters <input type="checkbox"/> Operator Inattention <input type="checkbox"/> Other (Specify)		
<b>PERSONAL FLOTATION DEVICES (PFD'S)</b>			<b>PROPERTY DAMAGE</b>		<b>FIRE EXTINGUISHERS</b>	
Was the boat adequately equipped with COAST GUARD APPROVED FLOTATION DEVICES? <input type="checkbox"/> Yes <input type="checkbox"/> No Were they accessible? <input type="checkbox"/> Yes <input type="checkbox"/> No Were they serviceable? <input type="checkbox"/> Yes <input type="checkbox"/> No Were they used by survivors? <input type="checkbox"/> Yes <input type="checkbox"/> No What type? <input type="checkbox"/> I, <input type="checkbox"/> II, <input type="checkbox"/> III, <input type="checkbox"/> IV, <input type="checkbox"/> V (specify) _____ Were PFD's properly used? Adjusted <input type="checkbox"/> Yes <input type="checkbox"/> No Sized <input type="checkbox"/> Yes <input type="checkbox"/> No			Was the vessel carrying <u>NON</u> approved flotation devices? <input type="checkbox"/> Yes <input type="checkbox"/> No Were they accessible? <input type="checkbox"/> Yes <input type="checkbox"/> No Were they used? <input type="checkbox"/> Yes <input type="checkbox"/> No If Yes, indicate kind.		Estimated amount This boat \$ _____ Other boat \$ _____ Other Property \$ _____	Were they used? (If yes, list Type(s) and number used.) <input type="checkbox"/> Yes <input type="checkbox"/> No <input type="checkbox"/> NA Types: _____
			DESCRIBE PROPERTY DAMAGE			
			NAME AND ADDRESS OF OWNER OF DAMAGED PROPERTY			
Include any comments of PFD's under ACCIDENT DESCRIPTION on other side of form						

If more than 3 fatalities and/or injuries, attach additional form(s)					
<b>DECEASED</b>					
NAME	ADDRESS	DATE OF BIRTH	WAS VICTIM? <input type="checkbox"/> Swimmer <input type="checkbox"/> Non Swimmer	DEATH CAUSED BY <input type="checkbox"/> Drowning <input type="checkbox"/> Other <input type="checkbox"/> DISAPPEARANCE	WAS PFD WORN? <input type="checkbox"/> Yes <input type="checkbox"/> No What Type?
NAME	ADDRESS	DATE OF BIRTH	WAS VICTIM? <input type="checkbox"/> Swimmer <input type="checkbox"/> Non Swimmer	DEATH CAUSED BY <input type="checkbox"/> Drowning <input type="checkbox"/> Other <input type="checkbox"/> DISAPPEARANCE	WAS PFD WORN? <input type="checkbox"/> Yes <input type="checkbox"/> No What Type?
NAME	ADDRESS	DATE OF BIRTH	WAS VICTIM? <input type="checkbox"/> Swimmer <input type="checkbox"/> Non Swimmer	DEATH CAUSED BY <input type="checkbox"/> Drowning <input type="checkbox"/> Other <input type="checkbox"/> DISAPPEARANCE	WAS PFD WORN? <input type="checkbox"/> Yes <input type="checkbox"/> No What Type?
<b>INJURED</b>					
NAME	ADDRESS	DATE OF BIRTH	NATURE OF INJURY	MEDICAL TREATMENT	
NAME	ADDRESS	DATE OF BIRTH	NATURE OF INJURY	MEDICAL TREATMENT	
NAME	ADDRESS	DATE OF BIRTH	NATURE OF INJURY	MEDICAL TREATMENT	
<b>ACCIDENT DESCRIPTION</b>					
DESCRIBE WHAT HAPPENED (Sequence of events. Include Failure of Equipment. If diagram is needed, attach separately. Continue on additional sheets if necessary. Include any information regarding the involvement of alcohol and/or drugs in causing or contributing to the accident. Include any descriptive information about the use of PFD's.)					
<b>VESSEL NO. 2 (if more than 2 vessels, attach additional form (s))</b>					
Name of Operator	Address			Boat Number	
Telephone Number				Boat Name	
Name of Owner	Address				
<b>WITNESSES</b>					
Name	Address			Telephone Number	
Name	Address			Telephone Number	
Name	Address			Telephone Number	
<b>WITNESSES</b>					
SIGNATURE	Address			Telephone Number	
QUALIFICATION (Check One) <input type="checkbox"/> Operator <input type="checkbox"/> Owner <input type="checkbox"/> Investigator <input type="checkbox"/> Other					Date Submitted
(do not use) - FOR REPORTING AUTHORITY REVIEW (use agency date stamp)					
Causes based on (check one) <input type="checkbox"/> This report <input type="checkbox"/> Investigation and this report <input type="checkbox"/> Investigation <input type="checkbox"/> Could not be determined		Name of Reviewing Office		Date Received	
Primary Cause of Accident		Secondary Cause of Accident		Reviewed By	

Float Plan

Pursuit recommends filling out a float plan each time you use your boat for an offshore day trip or a long cruise. Leave this information with a responsible person ashore, like a close friend or relative that you know well.

1. Name of person reporting and telephone number.  
\_\_\_\_\_

2. Description of boat.  
 Type \_\_\_\_\_ Color \_\_\_\_\_ Trim \_\_\_\_\_  
 Registration No. \_\_\_\_\_ Length \_\_\_\_\_  
 Name \_\_\_\_\_ Make \_\_\_\_\_ Other Info \_\_\_\_\_

3. Engine type \_\_\_\_\_ H.P. \_\_\_\_\_  
 No. of Engines \_\_\_\_\_ Fuel Capacity \_\_\_\_\_

4. Survival equipment: (Check as appropriate)

<input type="checkbox"/> PFDS	<input type="checkbox"/> Flares	<input type="checkbox"/> Mirror
<input type="checkbox"/> Smoke Signals	<input type="checkbox"/> Flashlight	<input type="checkbox"/> Food
<input type="checkbox"/> Paddles	<input type="checkbox"/> Water	<input type="checkbox"/> Others
<input type="checkbox"/> Anchor	<input type="checkbox"/> Raft or Dinghy	<input type="checkbox"/> EPIRB

5. Radio  Yes  No Type \_\_\_\_\_

6. Automobile license \_\_\_\_\_  
 Type \_\_\_\_\_ Trailer License \_\_\_\_\_  
 Color \_\_\_\_\_ and make of auto \_\_\_\_\_

7. Persons aboard \_\_\_\_\_  
 Name \_\_\_\_\_ Age \_\_\_\_\_ Address & telephone No. \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_

8. Do any of the persons aboard have a medical problem?  
 Yes  No If yes, what? \_\_\_\_\_

9. Trip Expectations: Leave at \_\_\_\_\_  
 From \_\_\_\_\_ Going to \_\_\_\_\_  
 Expect to return by \_\_\_\_\_ (time)  
 and no later than \_\_\_\_\_

10. Any other pertinent info. \_\_\_\_\_

11. If not returned by \_\_\_\_\_ (time)  
 call the COAST GUARD, or (Local authority) \_\_\_\_\_

12. Telephone Numbers.  
 \_\_\_\_\_  
 \_\_\_\_\_  
 \_\_\_\_\_





## Troubleshooting Guide

Problem	Cause and Solution
<b>Control Systems</b>	
<p><b>Hydraulic Steering is slow to respond and erratic.</b></p>	<ul style="list-style-type: none"> <li>• Steering system is low on fluid. Fill and bleed system.</li> <li>• Steering system has air in it. Fill and bleed system.</li> <li>• A component in the steering system is binding. Check and adjust or repair binding component.</li> <li>• Engine steering cylinder is binding. Grease spindle.</li> </ul>
<p><b>The boat wanders and will not hold a course at cruise speeds.</b></p>	<ul style="list-style-type: none"> <li>• There could be air in the steering system. Fill &amp; bleed the system.</li> <li>• The engine steering tab is corroded or out of adjustment. Replace or adjust steering tab.</li> <li>• Engine steering cylinder is binding. Grease spindle.</li> </ul>
<p><b>The engine will not start with the shift control lever in neutral.</b></p>	<ul style="list-style-type: none"> <li>• The control cable is out of adjustment &amp; not activating the neutral safety cut out switch.</li> <li>• The shift control lever is not in the neutral detent. Try moving the shift lever slightly.</li> <li>• There is a loose wire on the neutral safety switch on the transmission. Inspect wires and repair loose connections.</li> <li>• The starter or ignition switch is bad.</li> </ul>
<b>Performance Problems</b>	
<p><b>Boat is sluggish and has lost speed and RPM.</b></p>	<ul style="list-style-type: none"> <li>• The boat may be need to have marine growth cleaned from hull and running gear.</li> <li>• Propeller may be damaged &amp; need repair.</li> <li>• Weeds or line around the propeller. Clean propeller.</li> <li>• Boat is overloaded. Reduce load.</li> <li>• Check for excessive water in the bilge. Pump out bilge &amp; find &amp; correct the problem.</li> <li>• The throttle adjustments has changed and the engine is not getting full throttle. Adjust the throttle cable.</li> </ul>


Problem	Cause and Solution
<p><b>The boat vibrates at cruising speeds.</b></p>	<ul style="list-style-type: none"> <li>• Propeller may be damaged and need repair.</li> <li>• The propeller or propeller shaft is bent. Repair or replace damaged components.</li> <li>• The running gear is fouled by marine growth or rope. Clean running gear.</li> <li>• The engine is not trimmed properly. Trim the engine.</li> </ul>
<p><b>Engine Problems</b></p>	
<p><b>The engine is running too hot.</b></p>	<ul style="list-style-type: none"> <li>• The engine raw water pick-up strainer up is clogged with marine growth. Clean pick-up.</li> <li>• The engine raw water pump impeller is worn or damaged. Repair the pump.</li> <li>• The engine thermostat is faulty and needs to be replaced.</li> </ul>
<p><b>The engine alternator is not charging properly.</b></p>	<ul style="list-style-type: none"> <li>• The battery cable is loose or corroded. Clean and tighten battery cables.</li> <li>• The alternator is not charging and must be replaced.</li> <li>• The engine battery isolator in the charging system is not working properly. Replace the isolator.</li> <li>• The battery is defective. Replace the battery.</li> </ul>
<p><b>The engine suddenly will not operate over 2000 RPM.</b></p>	<ul style="list-style-type: none"> <li>• The engine emergency system has been activated. The onboard computer has sensed a problem and has limited the RPM to protect the engine. Find &amp; correct the problem.</li> <li>• The tachometer is bad and needs to be replaced.</li> </ul>

Problem	Cause and Solution
<p><b>The engine is loosing RPM. The boat is not overloaded and the hull bottom and running gear are clean and in good condition.</b></p>	<ul style="list-style-type: none"> <li>• The engine may be having a problem with a sticky anti-siphon valve, located in the fuel line near the fuel tank, that is restricting the fuel flow. Remove &amp; clean or replace the anti-siphon valve.</li> <li>• The remote gasoline fuel filter could be dirty. Inspect and replace the fuel filter.</li> <li>• The primary fuel filter on the engine may be dirty. Inspect and replace the fuel filter.</li> <li>• The electronic engine control system on the engine is malfunctioning. Repair the engine control system.</li> <li>• The fuel injection system on the engine is malfunctioning. Repair the fuel injection system.</li> </ul>
<p><b>Accessory Problems</b></p>	
<p><b>The livewell pump runs, but does not pump water.</b></p>	<ul style="list-style-type: none"> <li>• The strainer on the intake scoop is clogged preventing the water from getting to the pump. Put the boat in reverse to clean the strainer.</li> <li>• There is an air lock in the system. Run the boat above 15 m.p.h. and the pick-up scoop will force the air lock past the pump and prime the system.</li> <li>• The thru-hull valve is not open. Open valve.</li> <li>• The valve in the livewell is not open. Open the valve in the livewell.</li> </ul>
<p><b>The automatic float switch on the bilge pump raises but does not activate the pump.</b></p>	<ul style="list-style-type: none"> <li>• The in-line fuse near the battery switch has blown. Replace the fuse.</li> <li>• The pump impeller is jammed by debris. Clean pump impeller housing.</li> <li>• The pump is defective. Replace pump.</li> </ul>




Schematics


SC365i 240/120V MAIN DISTRIBUTION PANEL 3309330

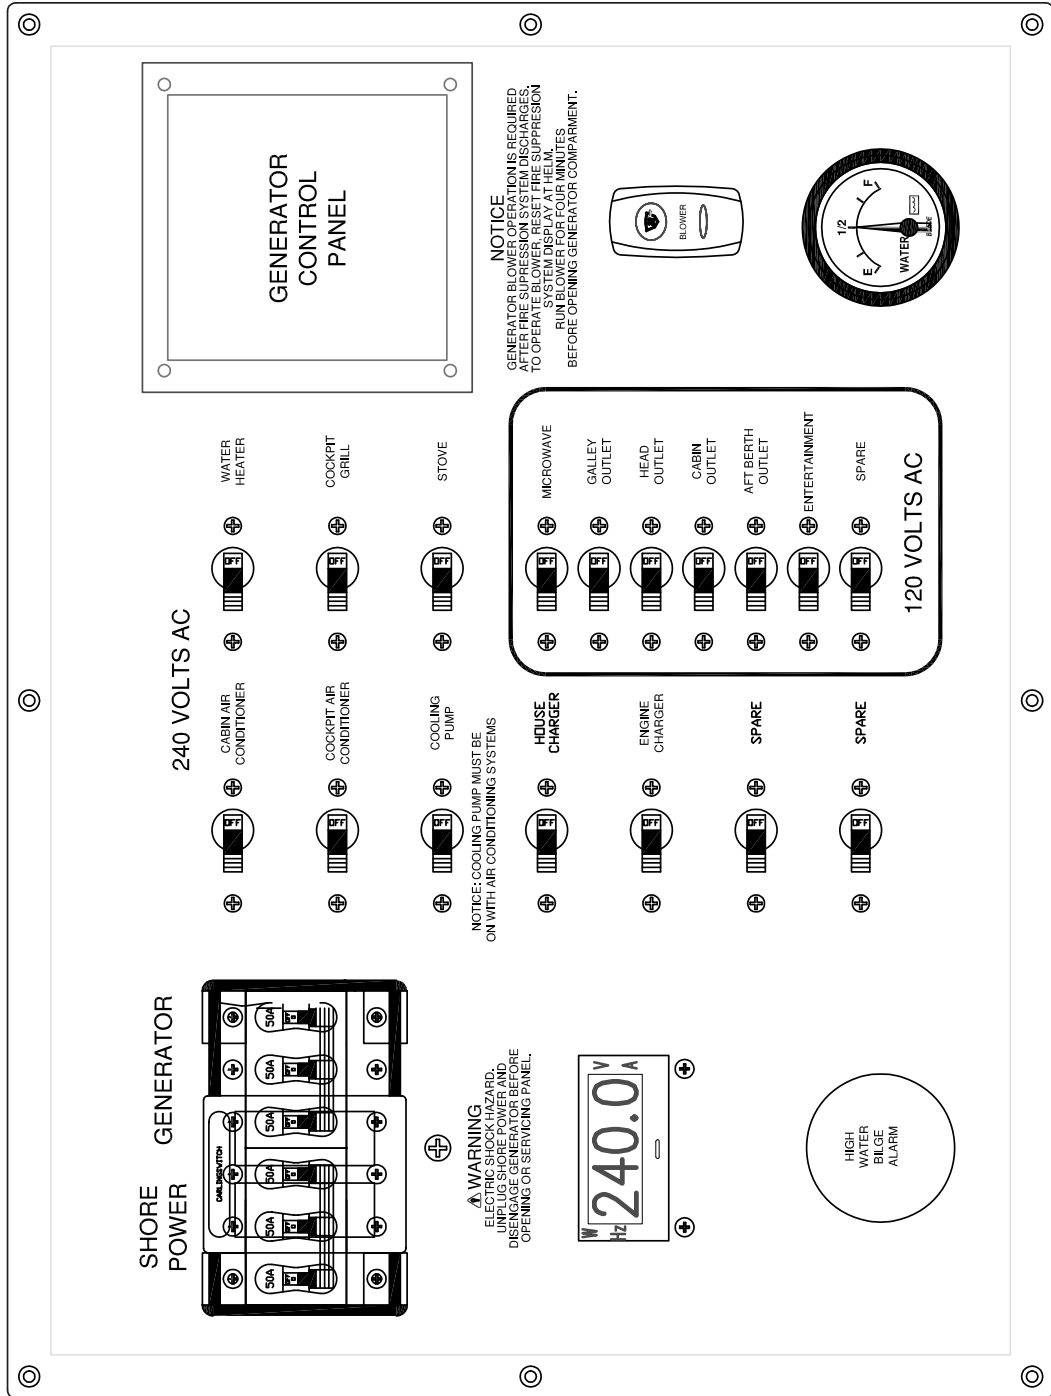


SC365i 240/120V MAIN DISTRIBUTION PANEL 3309330

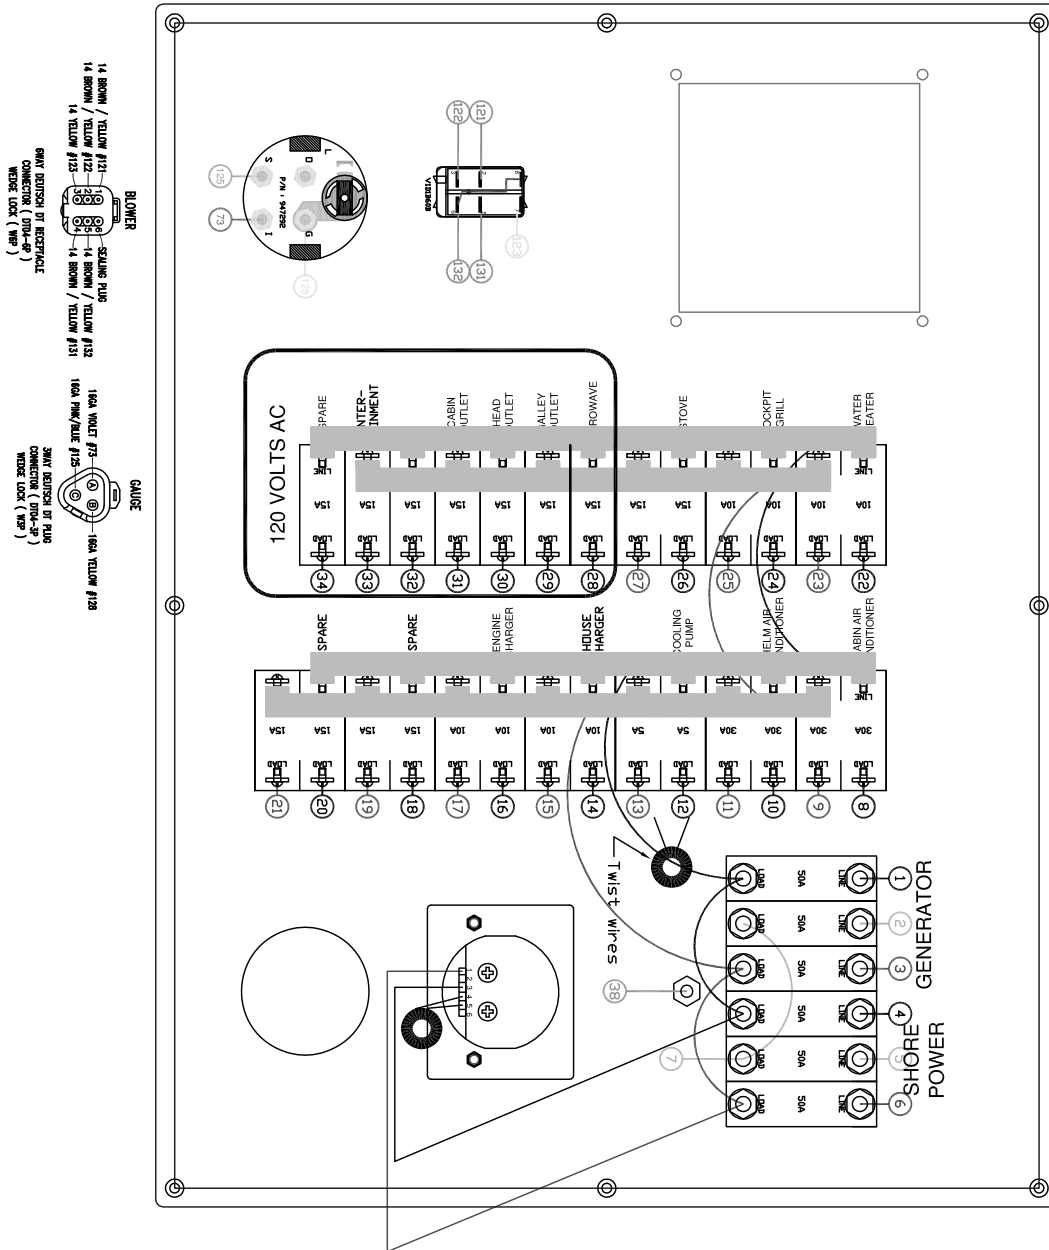

SC365i 240/120V MAIN DISTRIBUTION PANEL 3309330

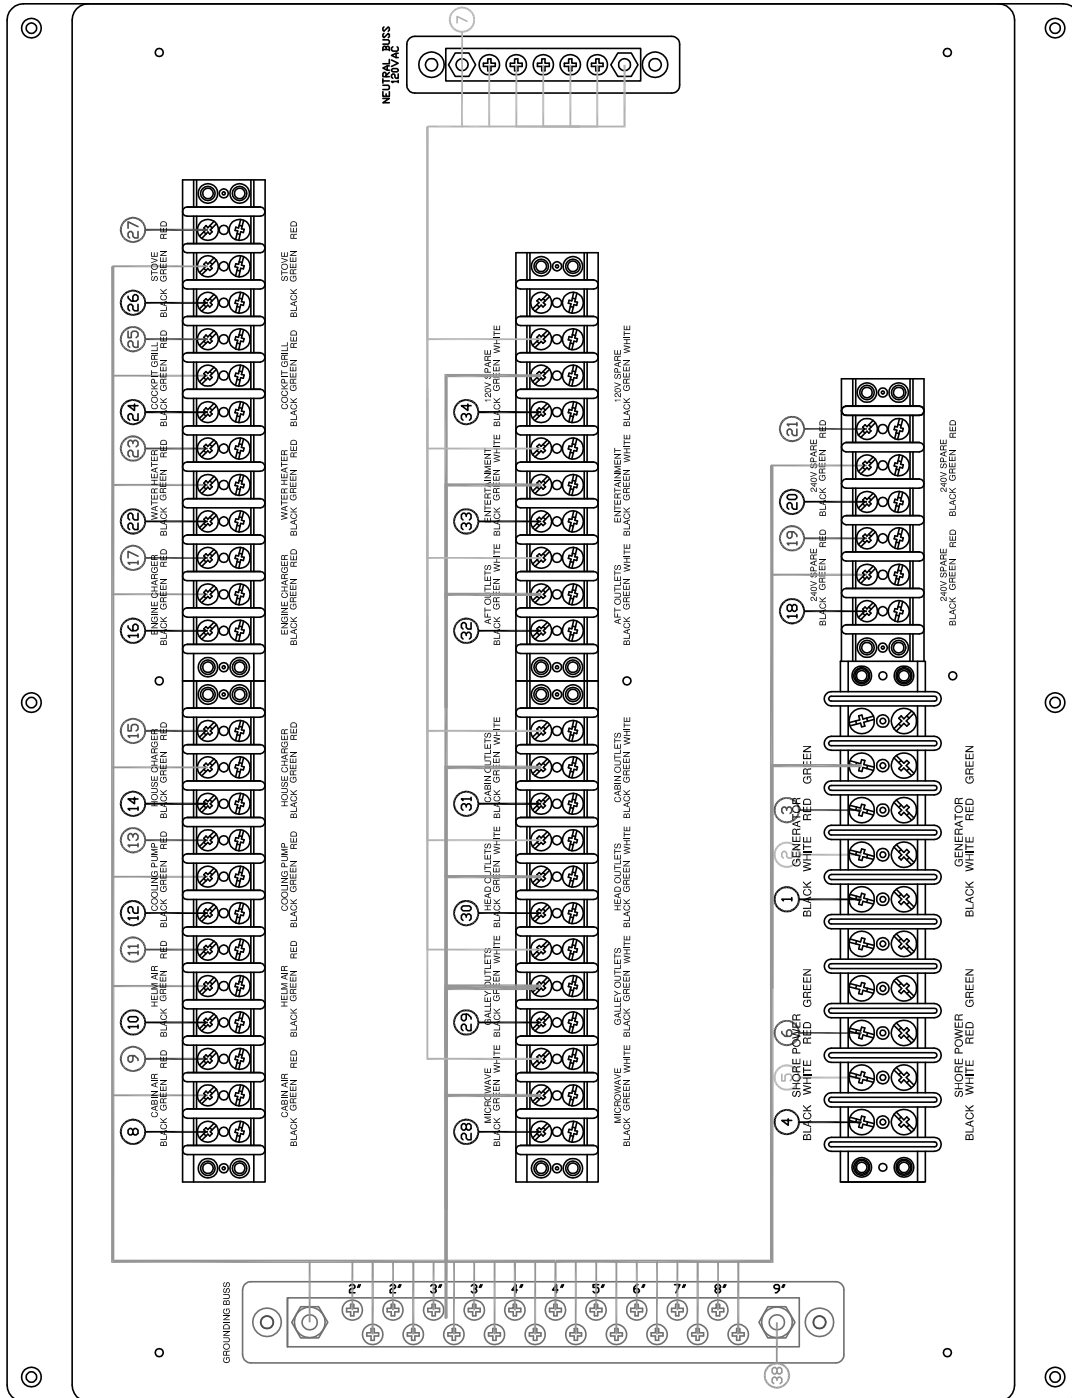


## SC365i 12V DC MAIN DISTRIBUTION PANEL 3309320

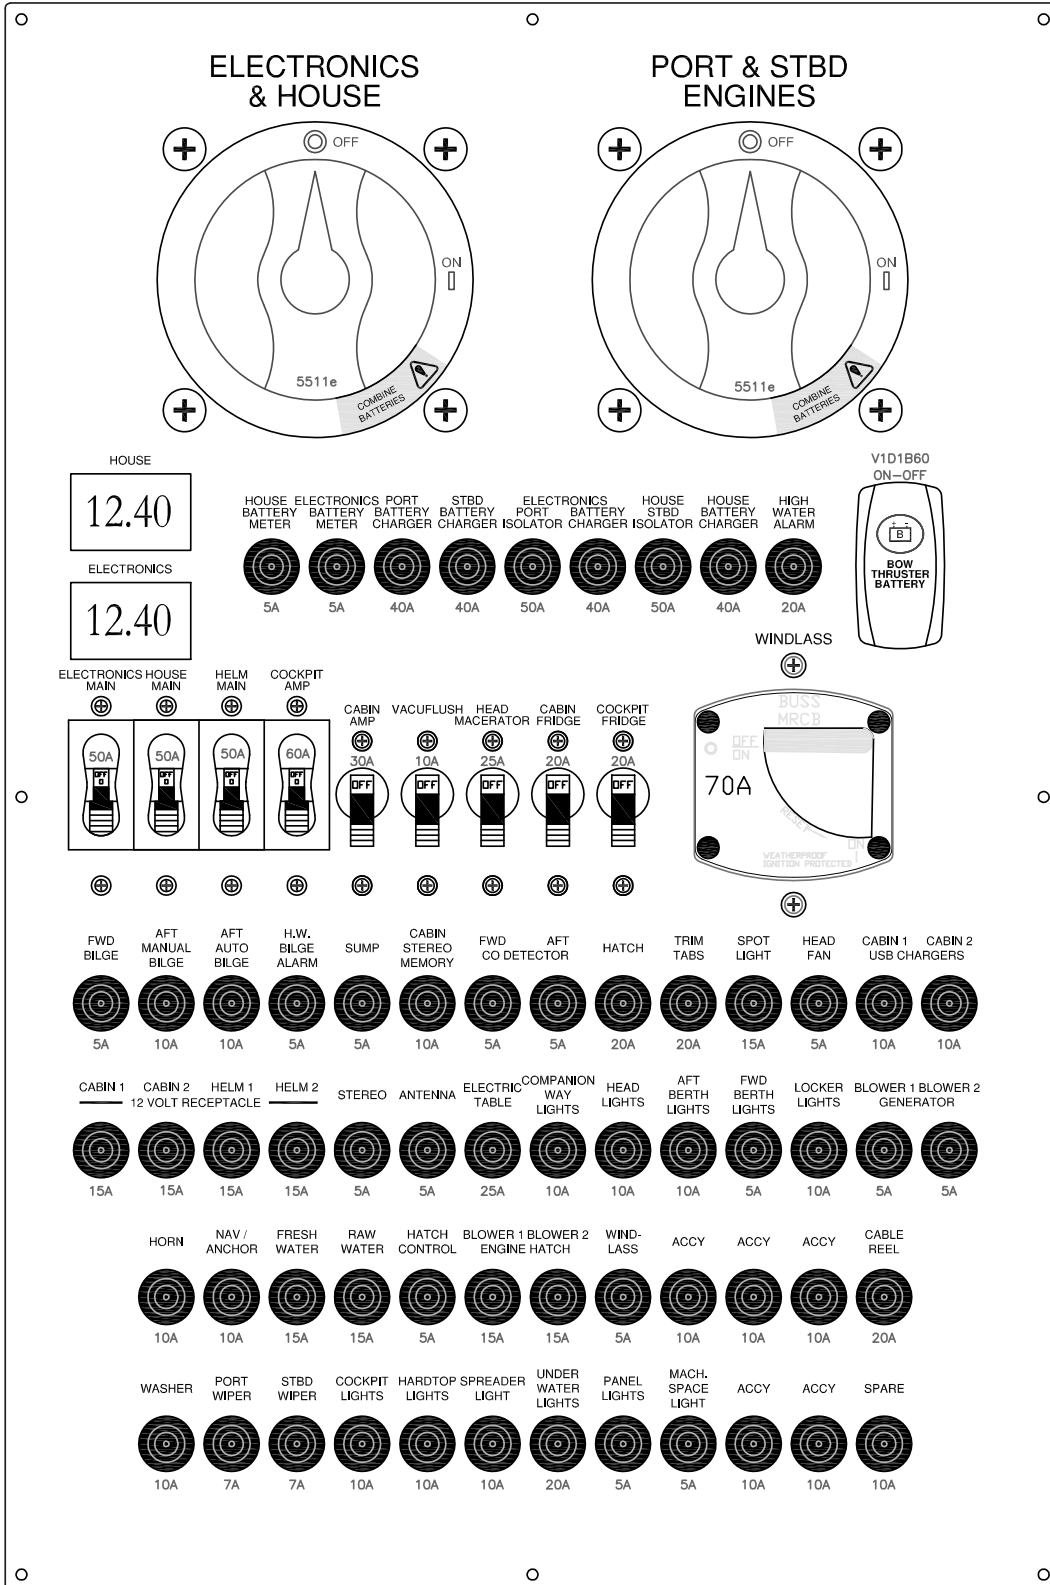





SC365i 12V DC MAIN DISTRIBUTION PANEL 3309320

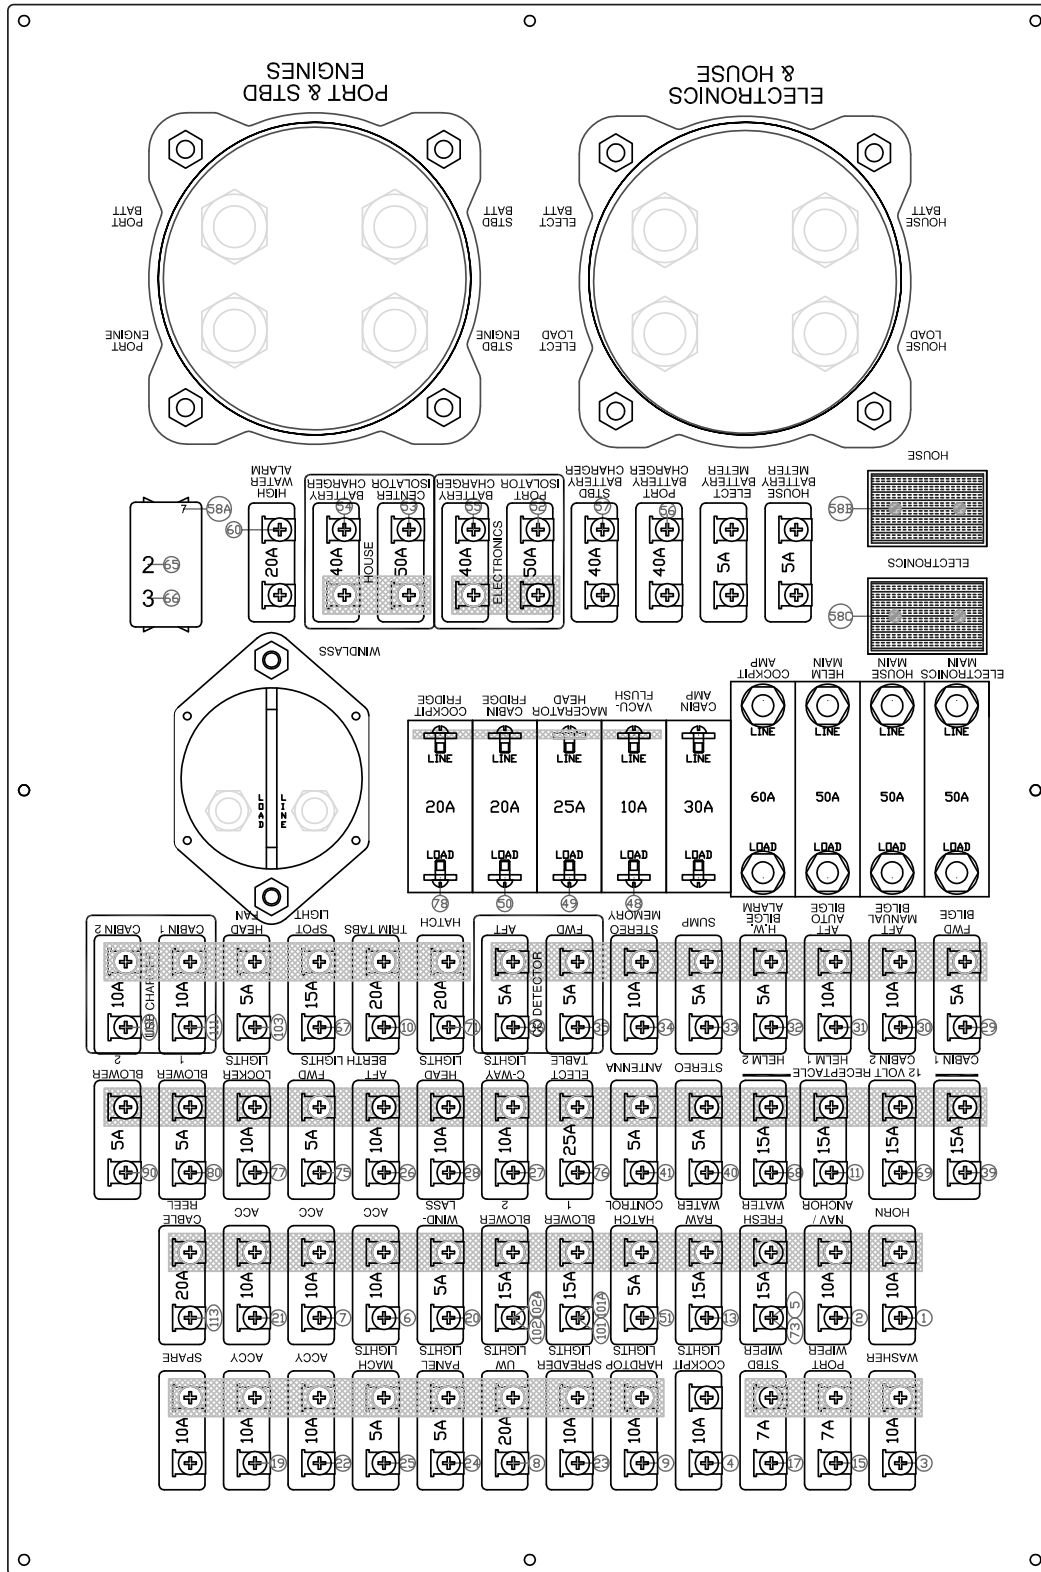


SC365i 12V DC MAIN DISTRIBUTION PANEL 3309320

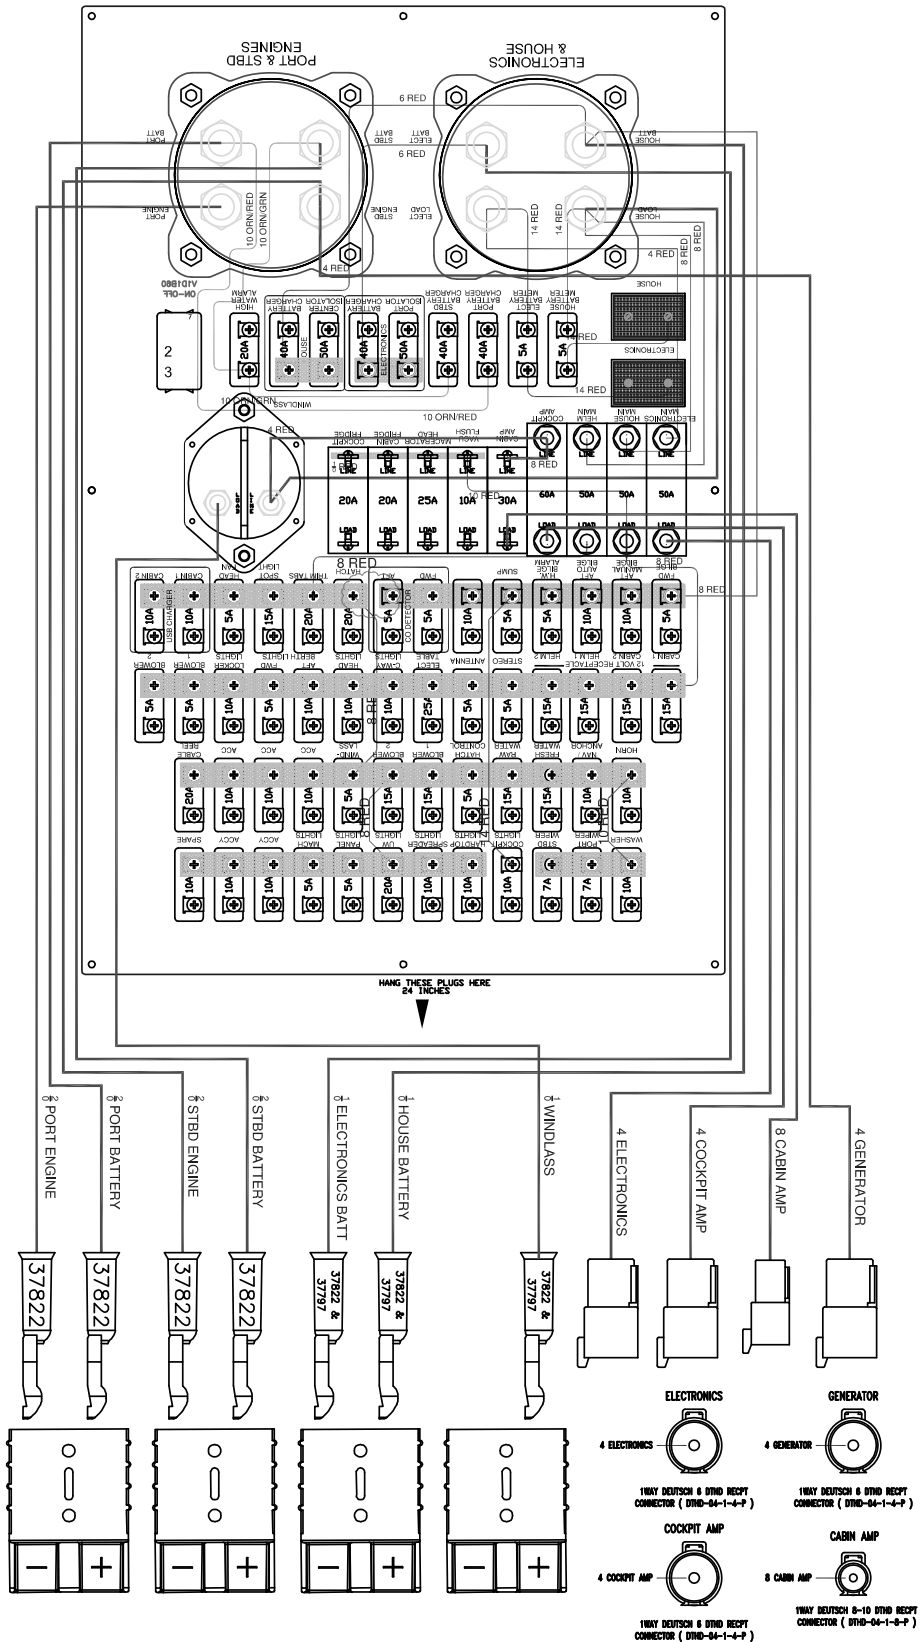


## SC365i 12V DC MAIN DISTRIBUTION PANEL 3309320

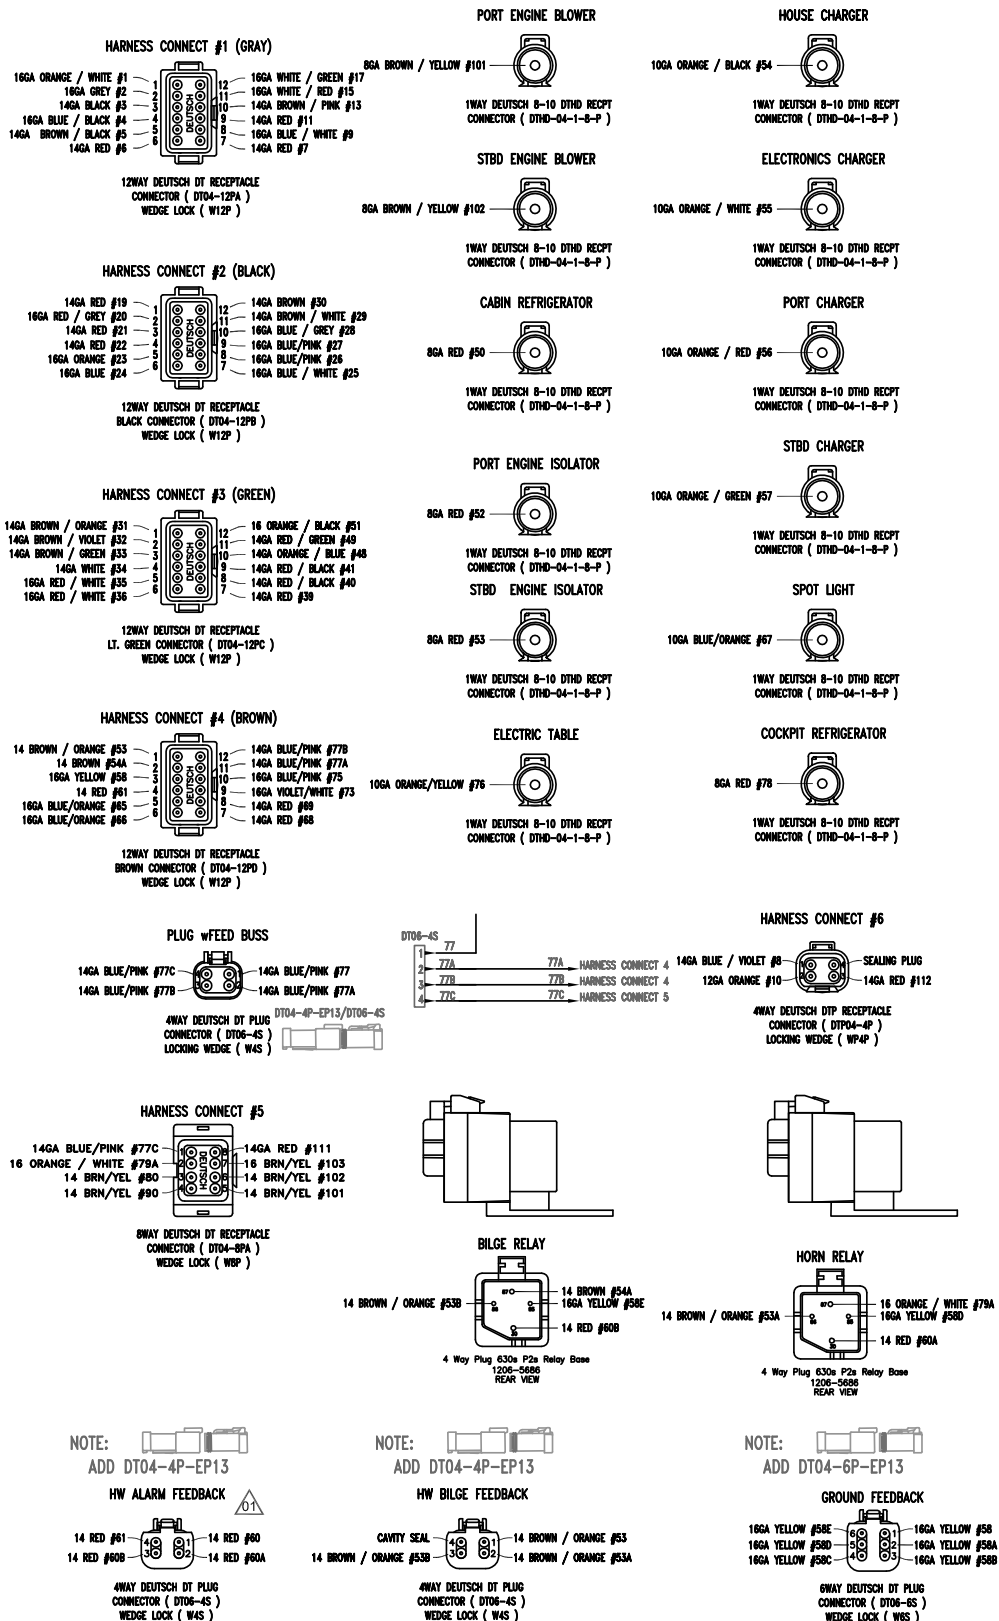

SC365i HELM PANEL 3309340

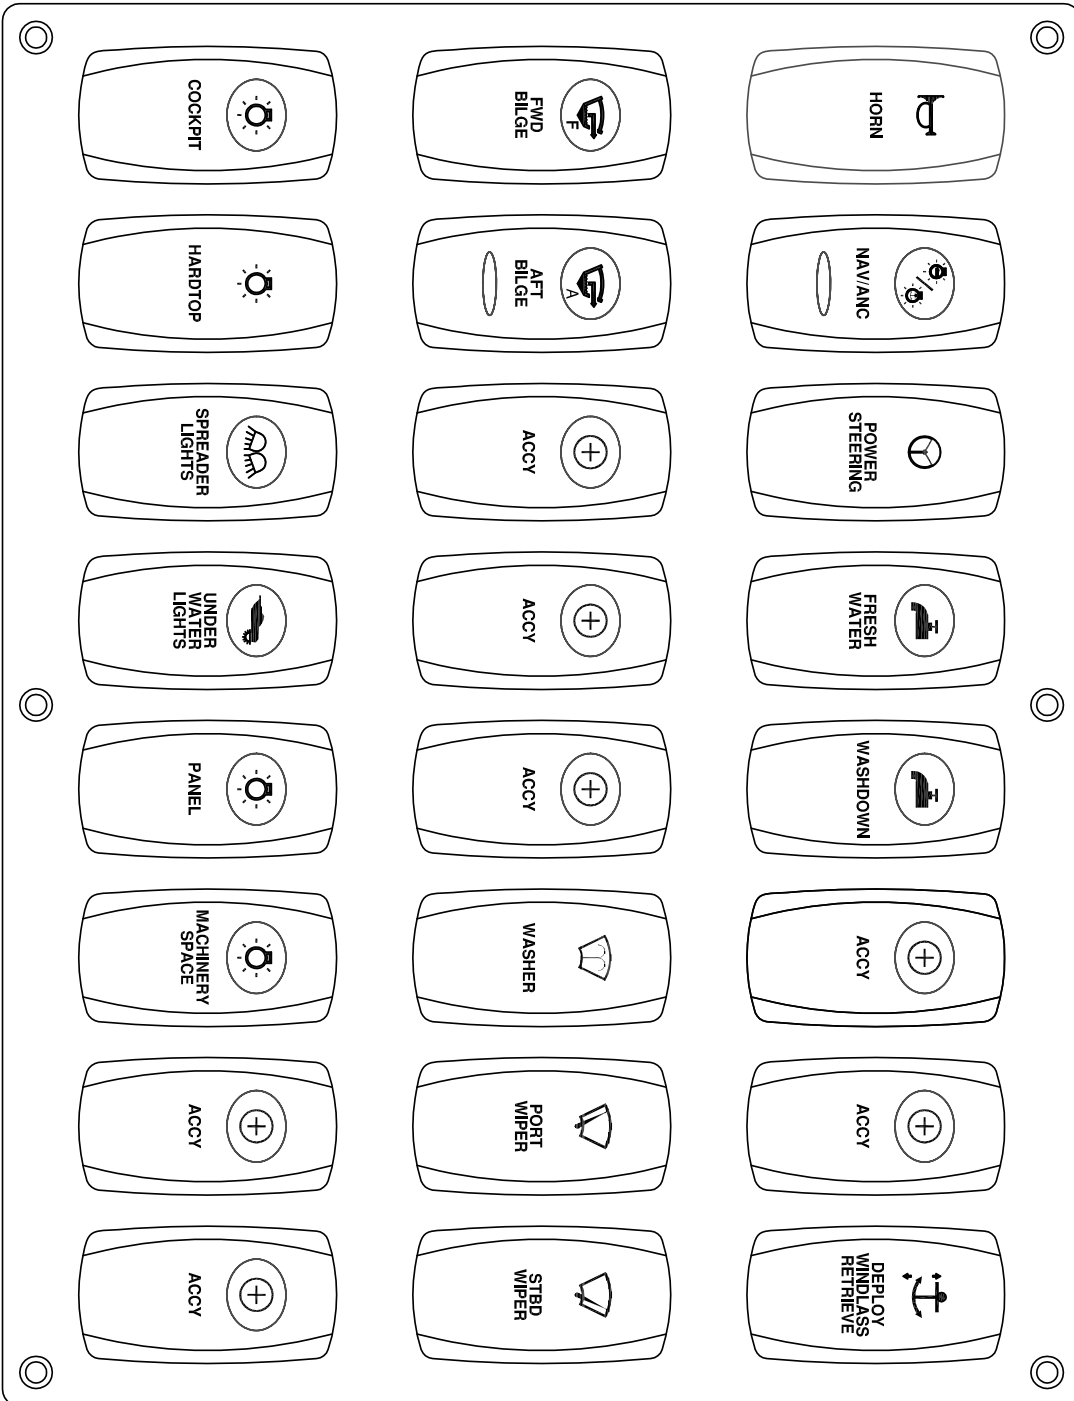

## SC365i HELM PANEL 3309340

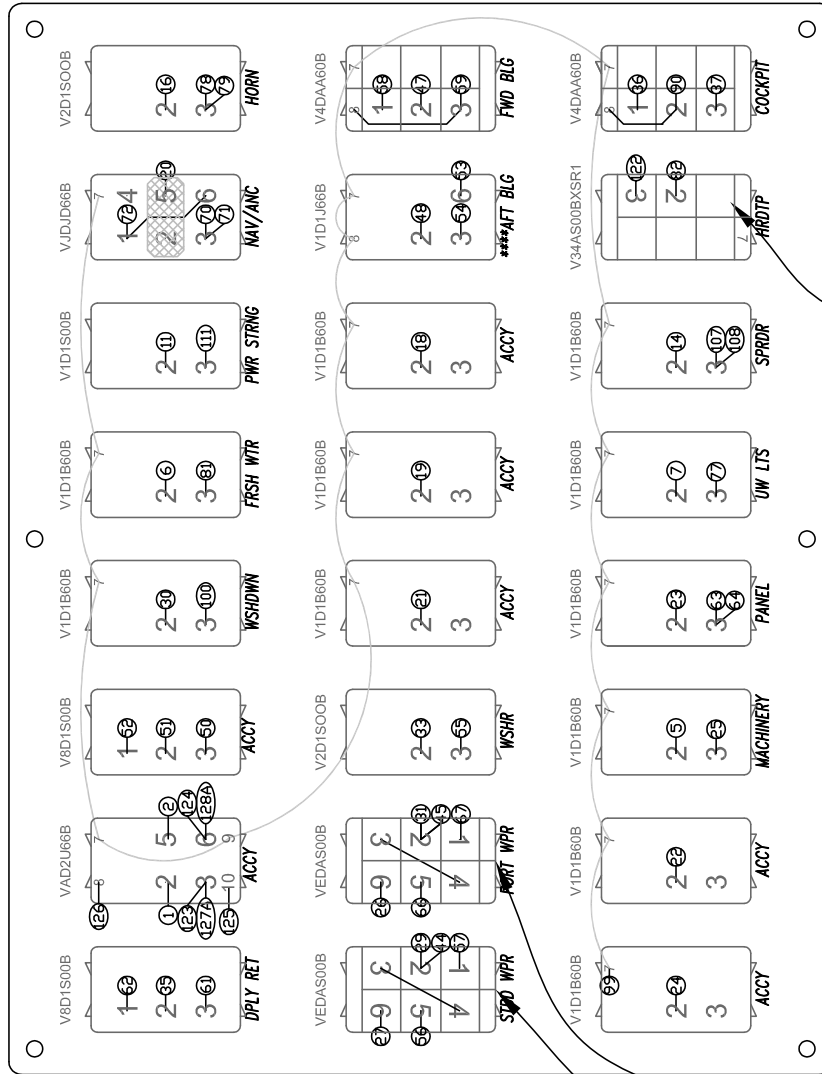


**NOTE:**  
 INSTALL V34A SWITCH  
 UPSIDE DOWN, THIS WILL  
 ALLOW THE ACTUATOR TO SIT  
 IN THE NORMAL POSITION


**NOTE:**  
 INSTALL VEDA SWITCH  
 UPSIDE DOWN

\*\*\*\*AFT BLG "REPLACEMENT SW WIRING"  
 VAD2


## SC365i HELM PANEL 3309340

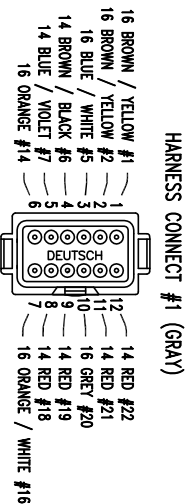

12WAY DEUTSCH DT RECEPTACLE  
CONNECTOR ( DT04-12PA )  
WEDGE LOCK ( W12P )

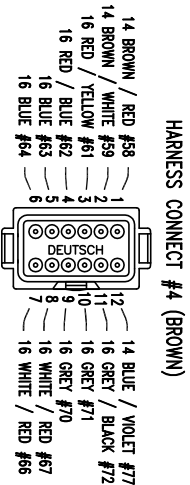

12WAY DEUTSCH DT RECEPTACLE  
BROWN CONNECTOR ( DT04-12PB )  
WEDGE LOCK ( W12P )

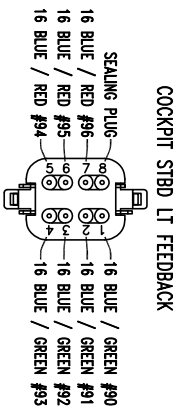


8WAY DEUTSCH DT PLUG  
CONNECTOR ( DT06-8SA )  
WEDGE LOCK ( W8S )


POWER STEERING




2WAY DEUTSCH DT RECEPTACLE  
CONNECTOR ( DT04-2P )  
WEDGE LOCK ( W2P )

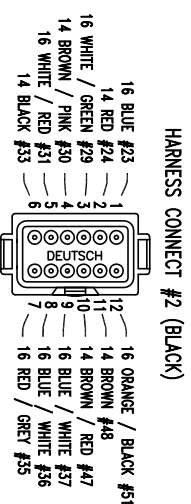


12WAY DEUTSCH DT RECEPTACLE  
BLACK CONNECTOR ( DT04-12PB )  
WEDGE LOCK ( W12P )

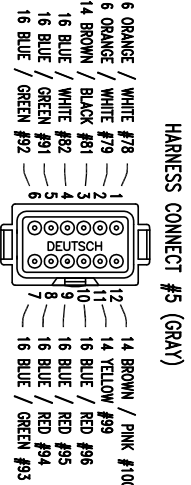

 
12WAY DEUTSCH DT RECEPTACLE  
CONNECTOR ( DT04-12PA )  
WEDGE LOCK ( W12P )




2WAY DEUTSCH DT PLUG  
CONNECTOR ( DT06-2S )  
LOOKING WEDGE ( W2S )

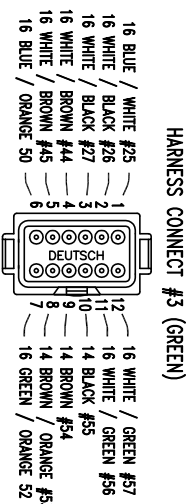

12WAY DEUTSCH DT RECEPTACLE  
LT. GREEN CONNECTOR ( DT04-12PC )  
WEDGE LOCK ( W12P )



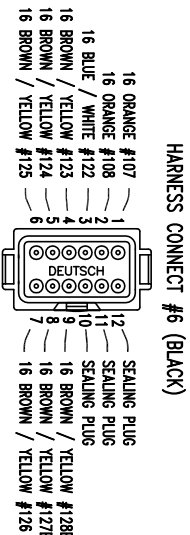


12WAY DEUTSCH DT RECEPTACLE  
BLACK CONNECTOR ( DT04-12PB )  
WEDGE LOCK ( W12P )



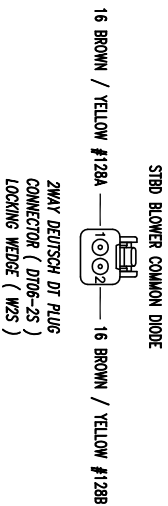


2WAY DEUTSCH DT PLUG  
CONNECTOR ( DT06-2S )  
LOOKING WEDGE ( W2S )

SC365i COMPANIONWAY PANEL 33093350

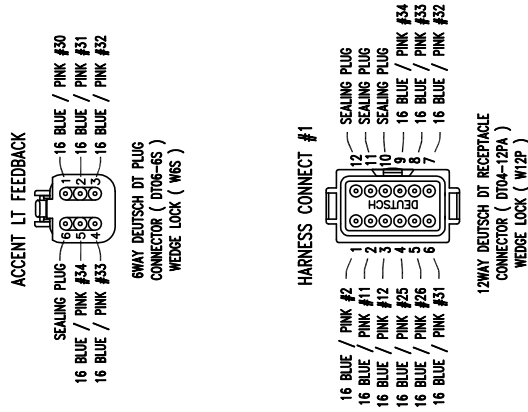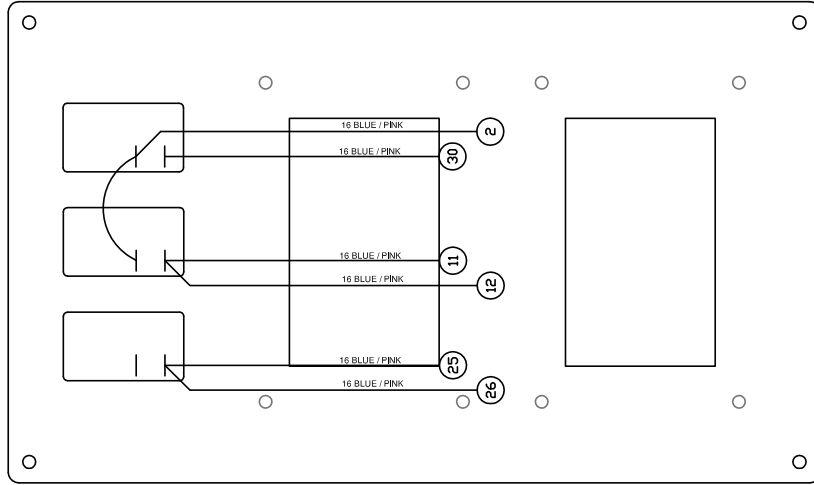
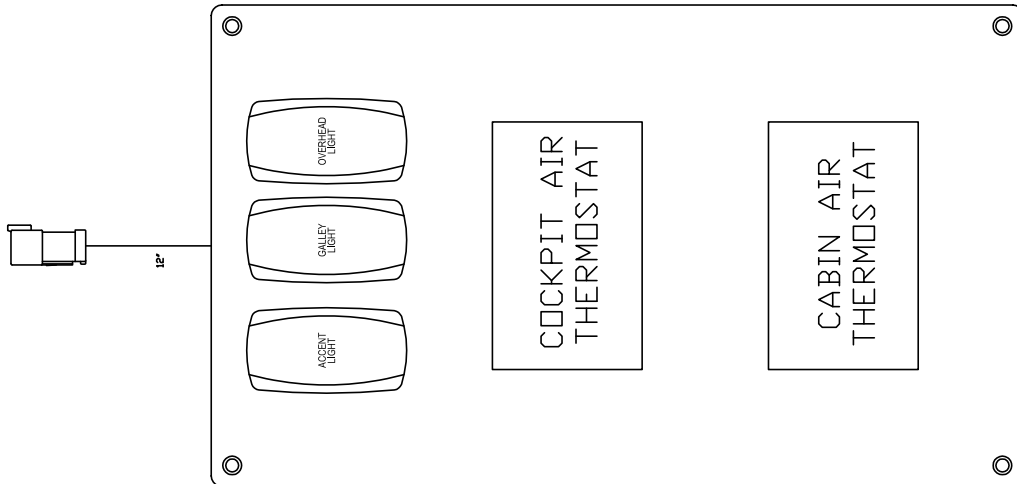


SC365i HEAD LIGHT PANEL 3309360

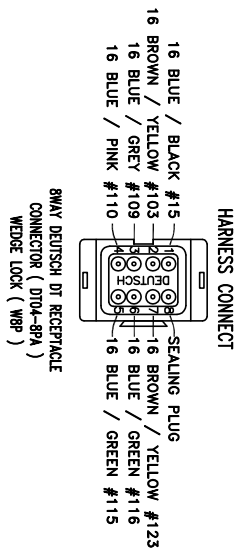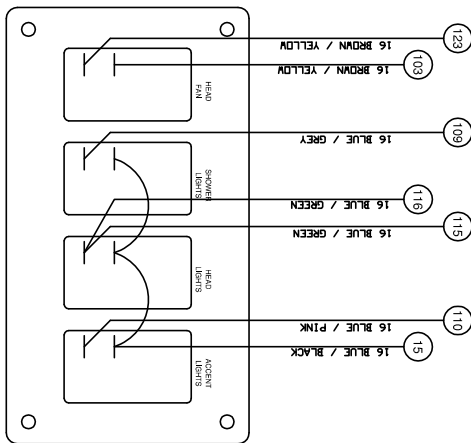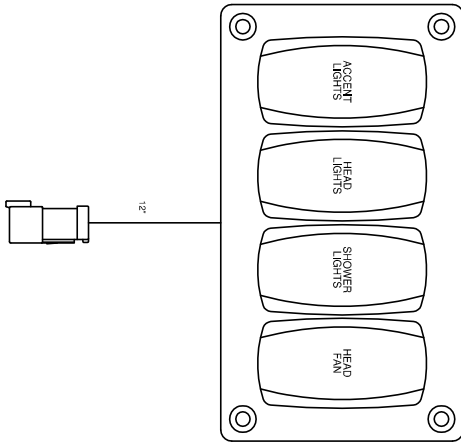



SC365I FORWARD BERTH PANEL 3309380

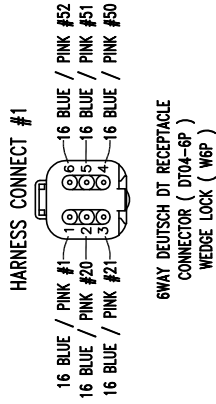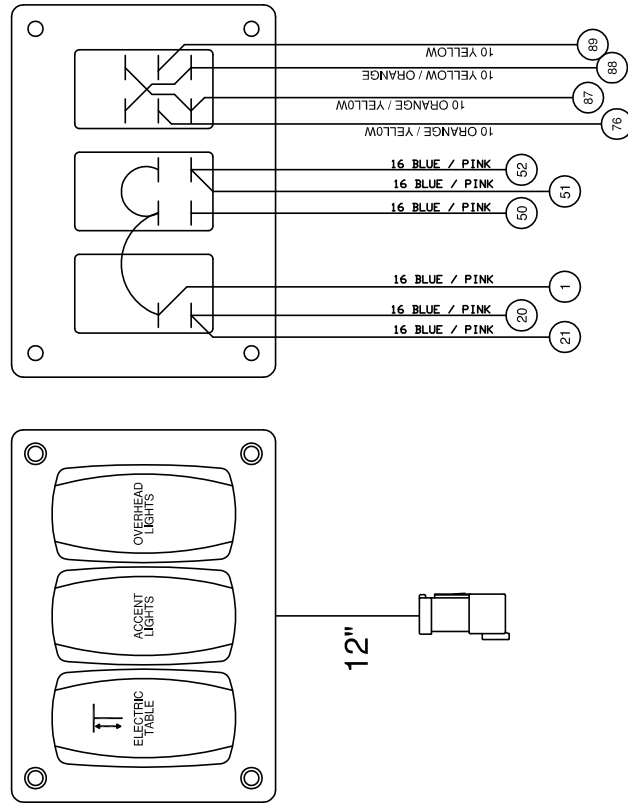

ELECTRIC TABLE



10GA ORANGE/YELLOW #76

1WAY DEUTSCH 8-10 DTHD RECPT  
CONNECTOR ( DTHD-04-1-8-P )

ELECTRIC TABLE



10GA YELLOW/ORANGE #88

1WAY DEUTSCH 8-10 DTHD PLUG  
CONNECTOR ( DTHD-06-1-8-S )

ELECTRIC TABLE



10GA ORANGE/YELLOW #76

1WAY DEUTSCH 8-10 DTHD RECPT  
CONNECTOR ( DTHD-04-1-8-P )




ELECTRIC TABLE




10GA YELLOW #89

1WAY DEUTSCH 8-10 DTHD RECPT  
CONNECTOR ( DTHD-04-1-8-P )

SC365i AFT BERTH LIGHT PANEL 3309370

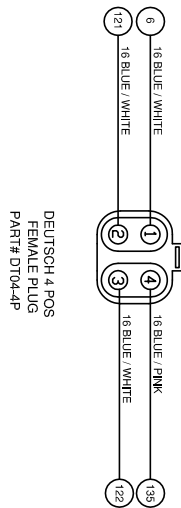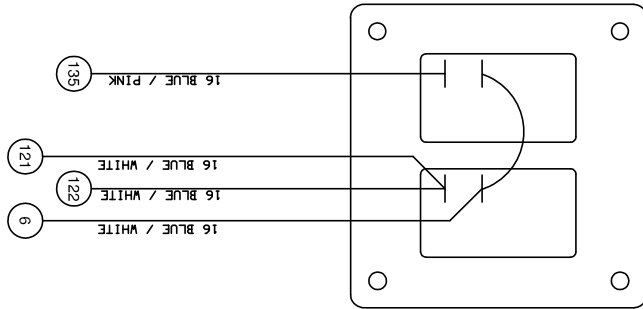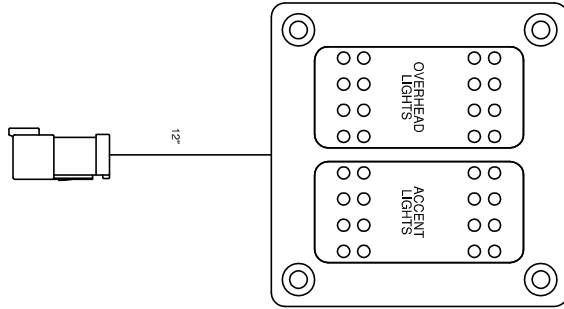

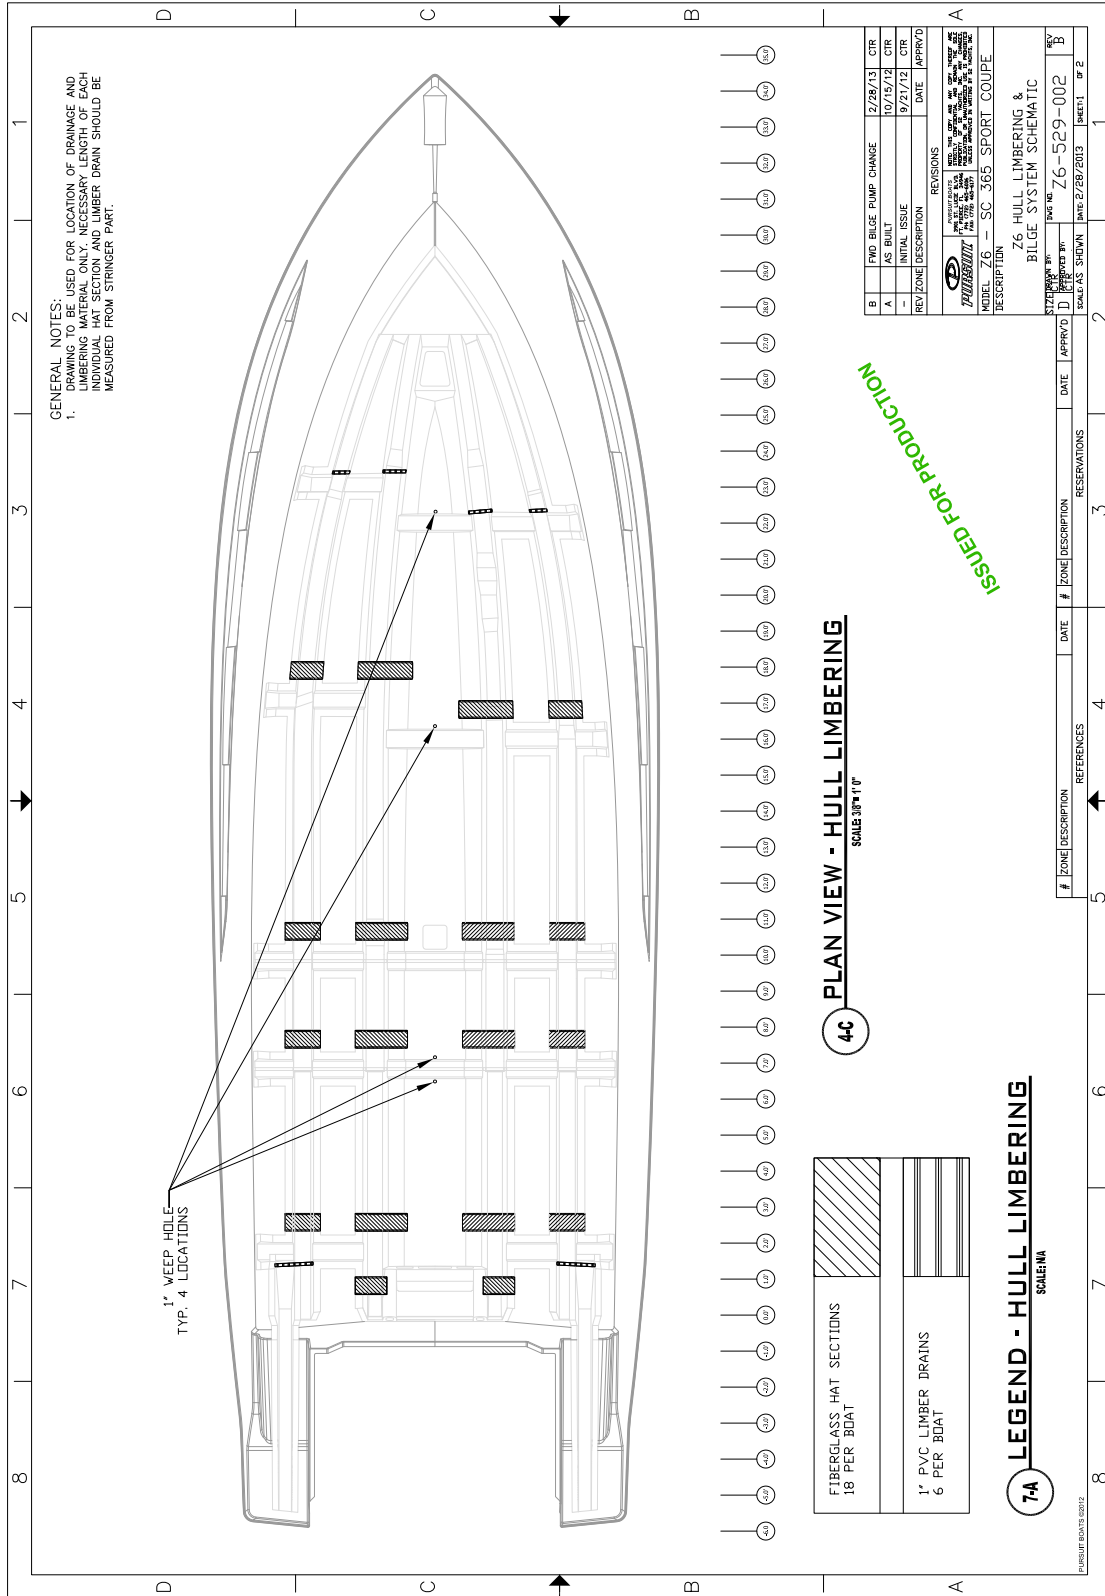

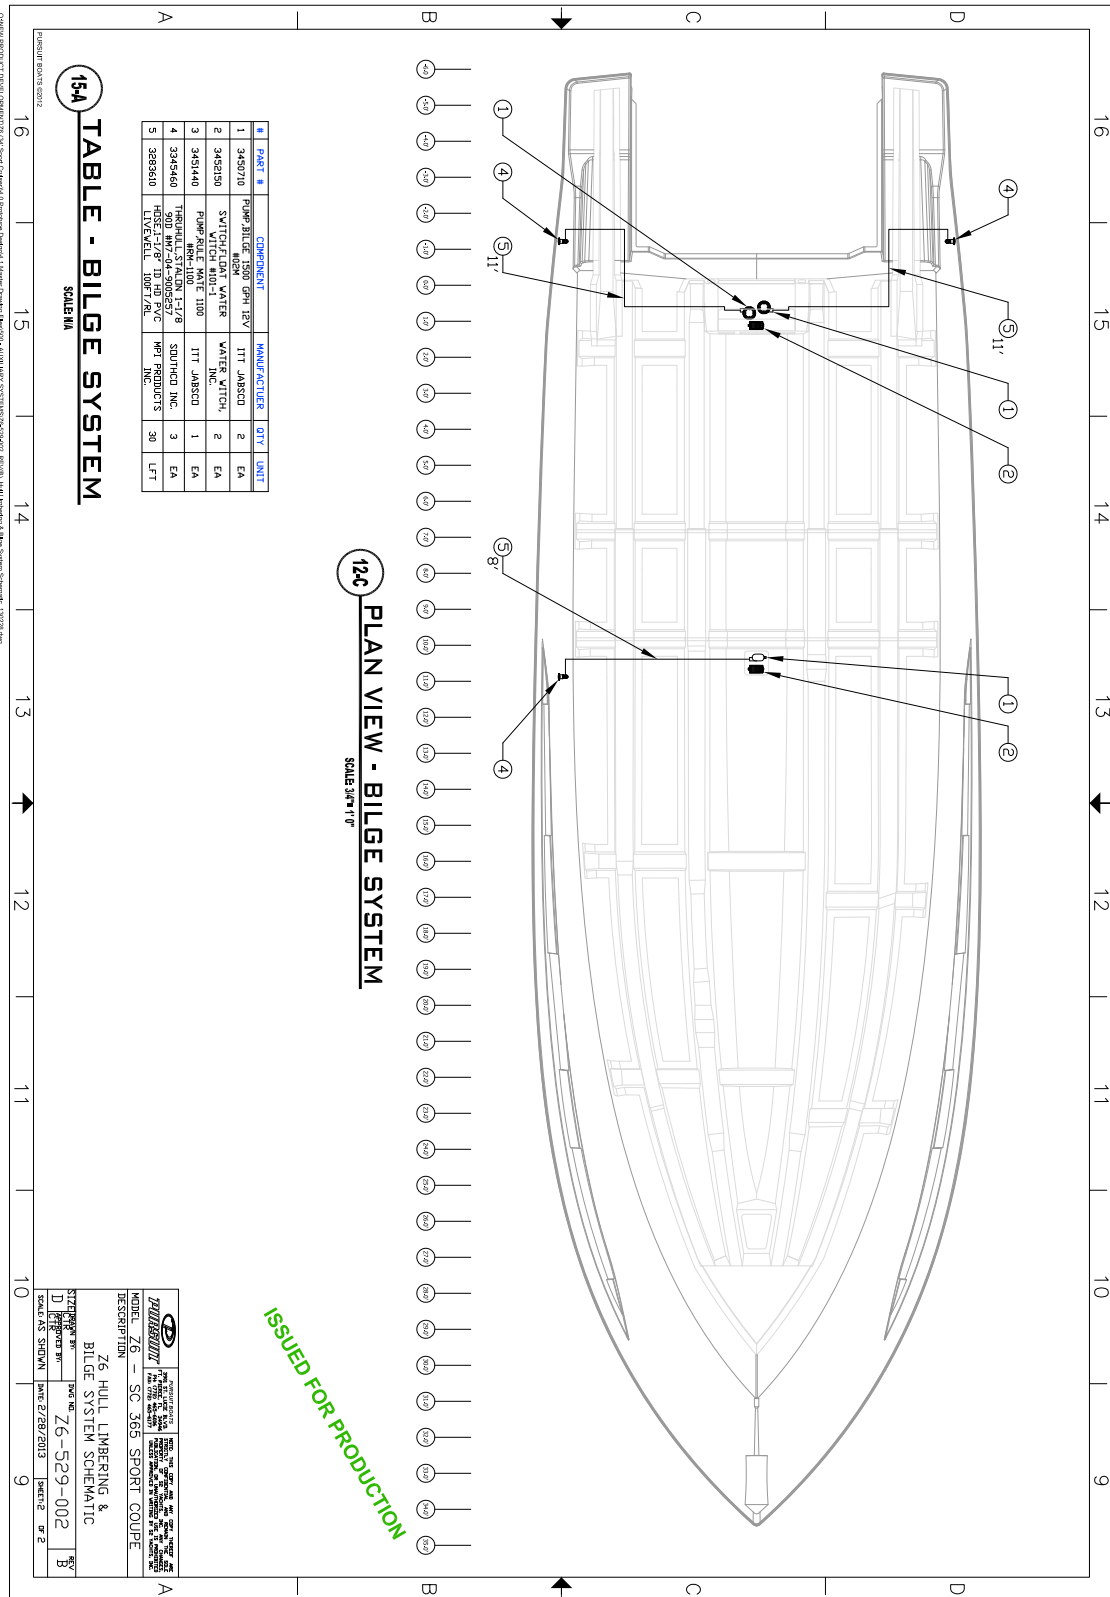



TABLE 1	COMPONENT	MANUFACTURER	QTY	UNIT
1	PUMP/BILGE 1500 GPH 12V	ITT JABSCO	2	EA
2	SWITCH/FLOAT WATER	WATER MATH, INC.	2	EA
3	PUMP/SOLE MATE 1100	ITT JABSCO	1	EA
4	TRANSOM BRACKET 1-1/2\"/>			


**154** TABLE - BILGE SYSTEM  
SCALE: 3/8\"/>

**12c** PLAN VIEW - BILGE SYSTEM  
SCALE: 3/8\"/>

ISSUED FOR PRODUCTION

MODEL: Z6 DESCRIPTION: Z6 HULL LAMBERING & BILGE SYSTEM SCHEMATIC	PART NO: Z6-529-002 DATE: 2/28/2013 SHEET: 2 OF 2

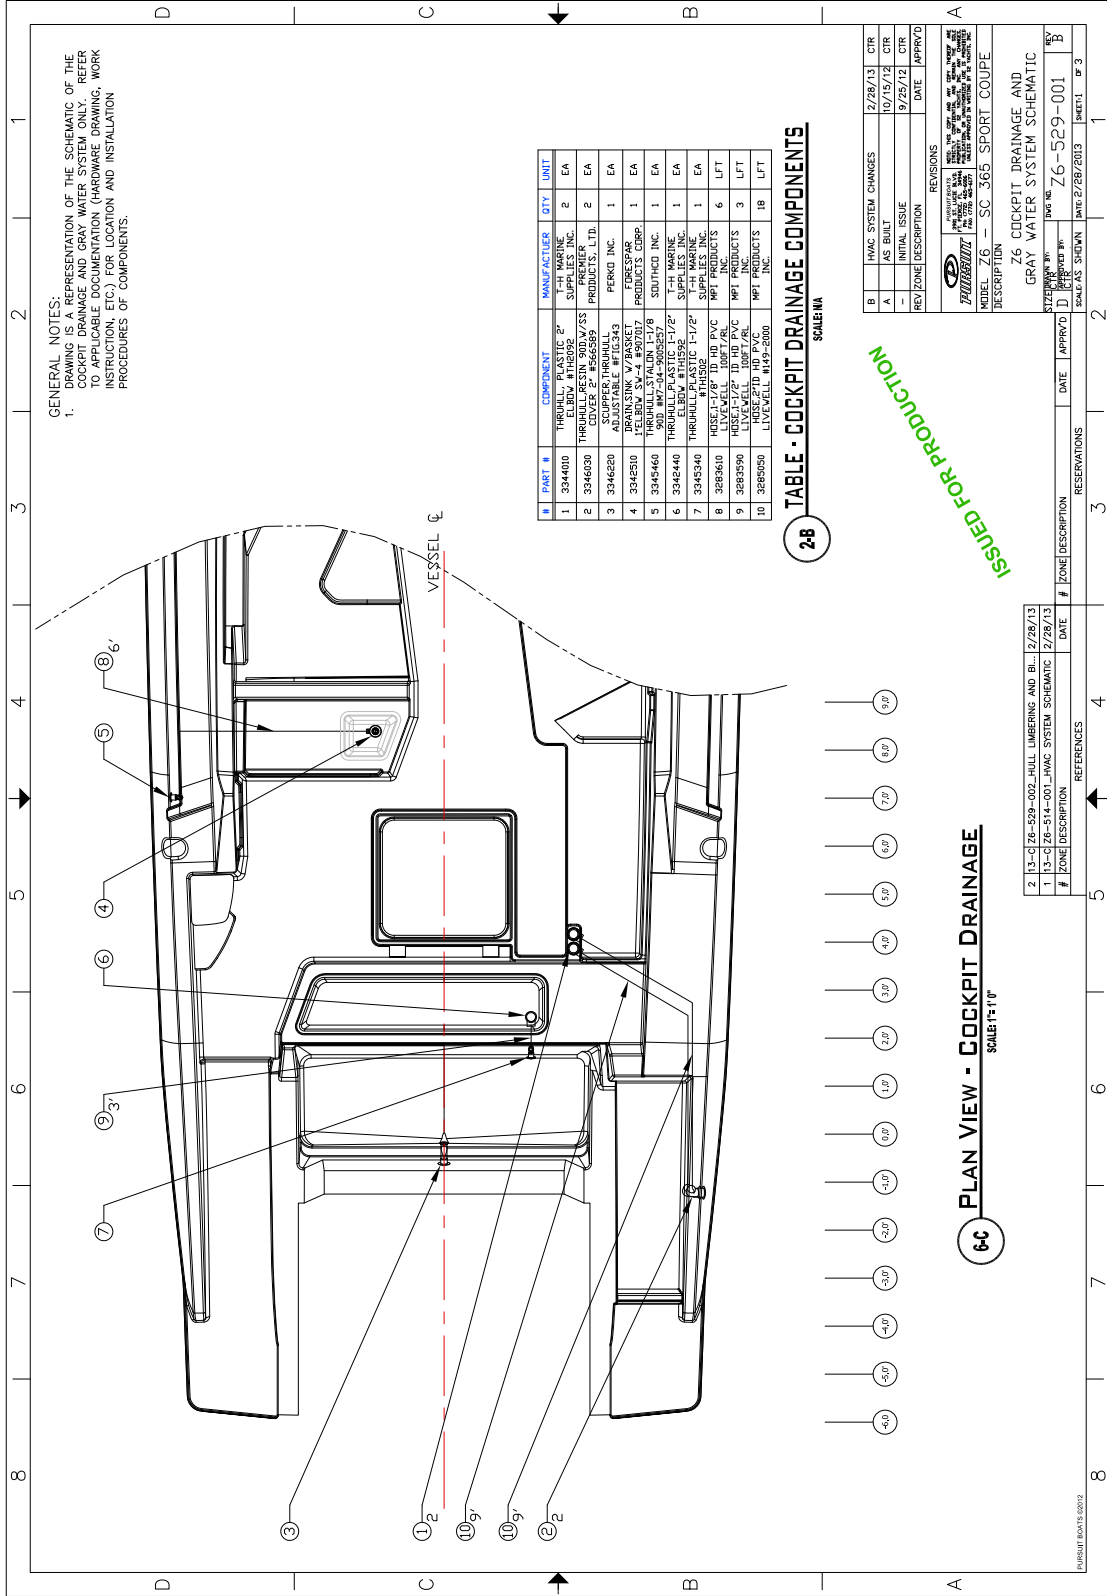

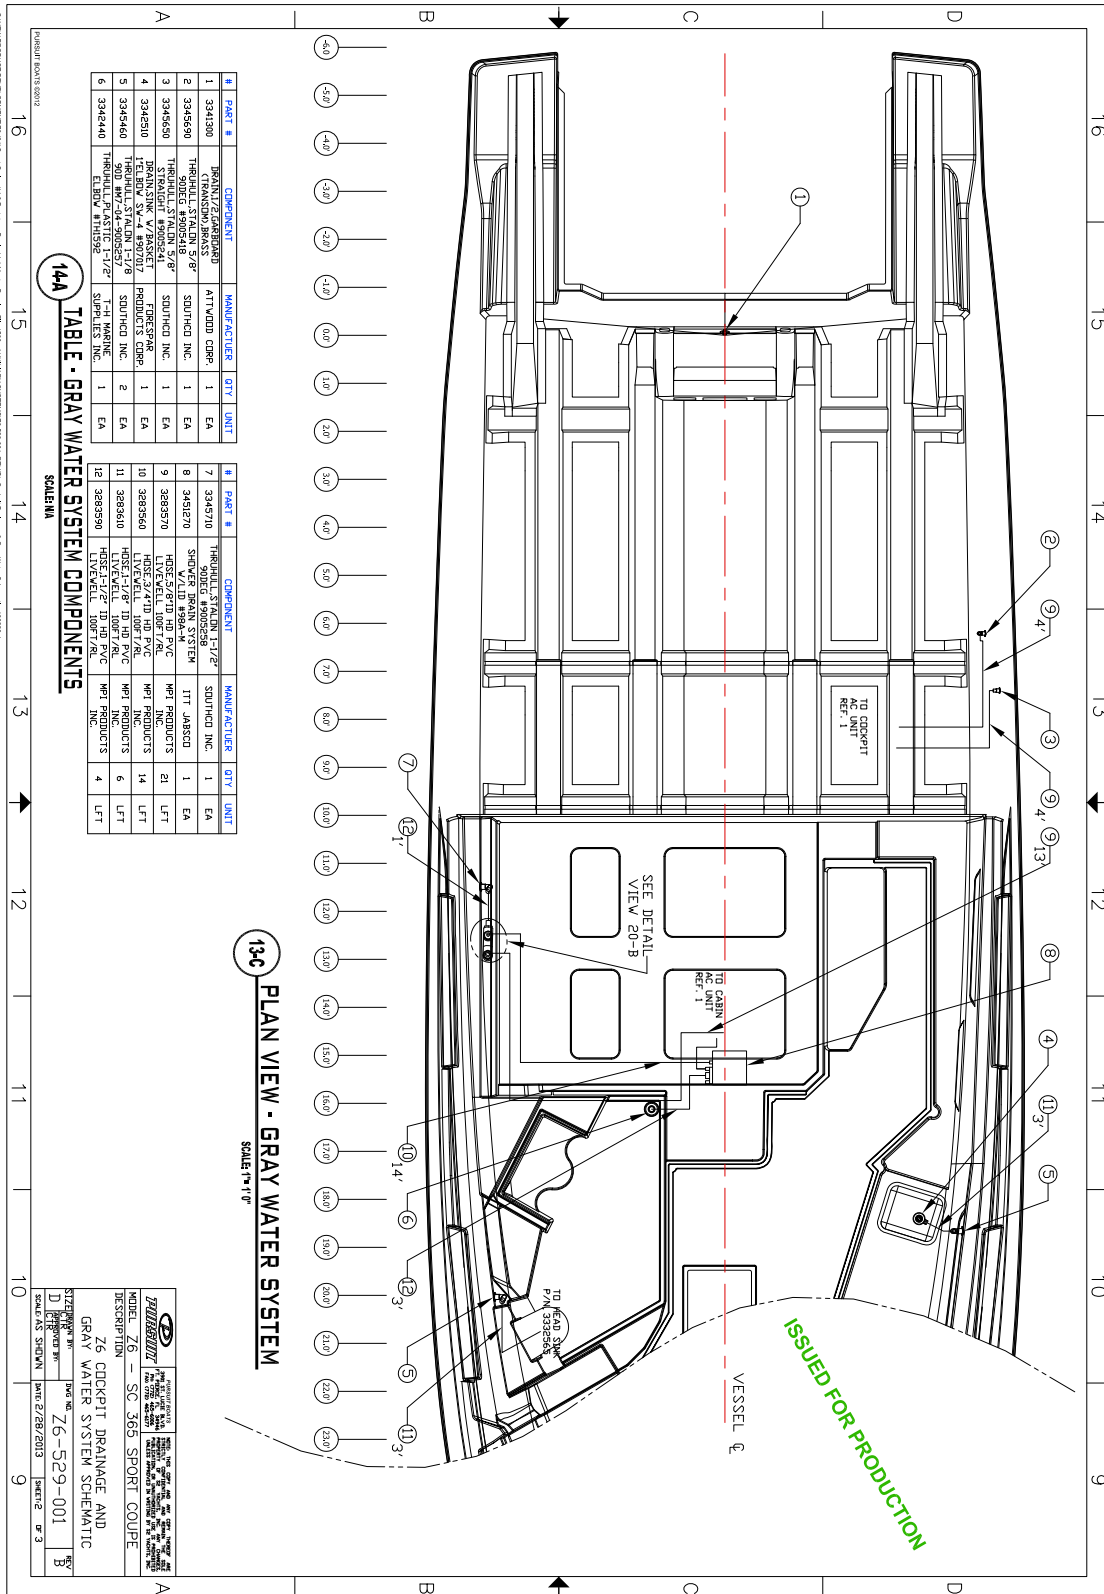


PART #	COMPONENT	MANUFACTURER	QTY	UNIT
1	BRASS/2" DRAINER	ATWOOD CORP.	1	EA
2	THRIFULL STAIN 1 1/2" SORB. #905-518	SOUTHCO INC.	1	EA
3	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	FORESPAR PRODUCTS CORP.	1	EA
4	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	SOUTHCO INC.	1	EA
5	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	SOUTHCO INC.	1	EA
6	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	SOUTHCO INC.	1	EA

PART #	COMPONENT	MANUFACTURER	QTY	UNIT
7	THRIFULL STAIN 1 1/2" SORB. #905-518	SOUTHCO INC.	1	EA
8	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	ITT JAMESON	1	EA
9	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	ITT JAMESON	1	EA
10	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	ITT JAMESON	1	EA
11	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	ITT JAMESON	1	EA
12	THRIFULL STAIN 3/4" BRASS/SINK V/BASKET	ITT JAMESON	1	EA

**144A TABLE - GRAY WATER SYSTEM COMPONENTS**

**130 PLAN VIEW - GRAY WATER SYSTEM**

**YALOWITZ**  
 26 COCKPIT DRAINAGE AND GRAY WATER SYSTEM SCHEMATIC  
 DATE: 2/28/2013  
 SHEET: 3 OF 3

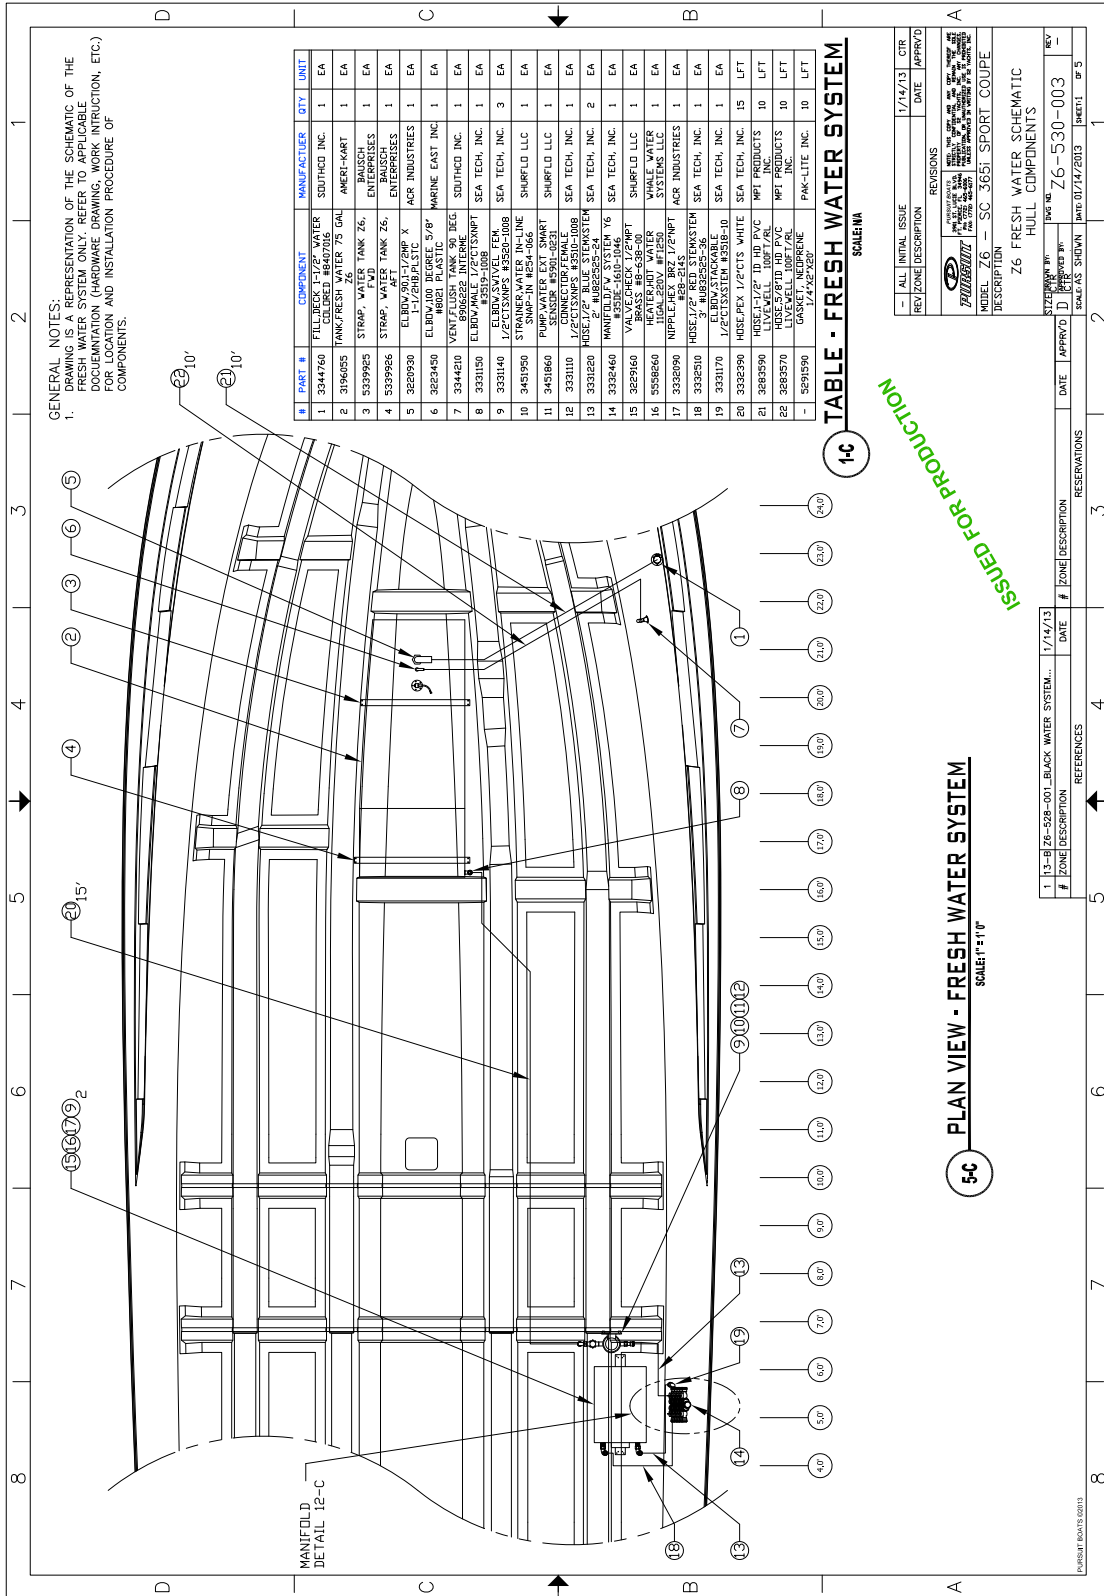

ISSUED FOR PRODUCTION

**5-C** PLAN VIEW - FRESH WATER SYSTEM  
SCALE: 1" = 1'-0"

**1-C** TABLE - FRESH WATER SYSTEM  
SCALE: N/A

REV	ZONE	DESCRIPTION	DATE	APP'D	CR'D
-	ALL	INITIAL ISSUE	1/14/13		

REVISIONS

DATE: 07/14/2013


PROJECT: SC 365i SPORT COUPE

DESCRIPTION: Z6 FRESH WATER SCHEMATIC HULL COMPONENTS


SCALE: AS SHOWN

DATE: 07/14/2013

SHEET: 05 OF 5

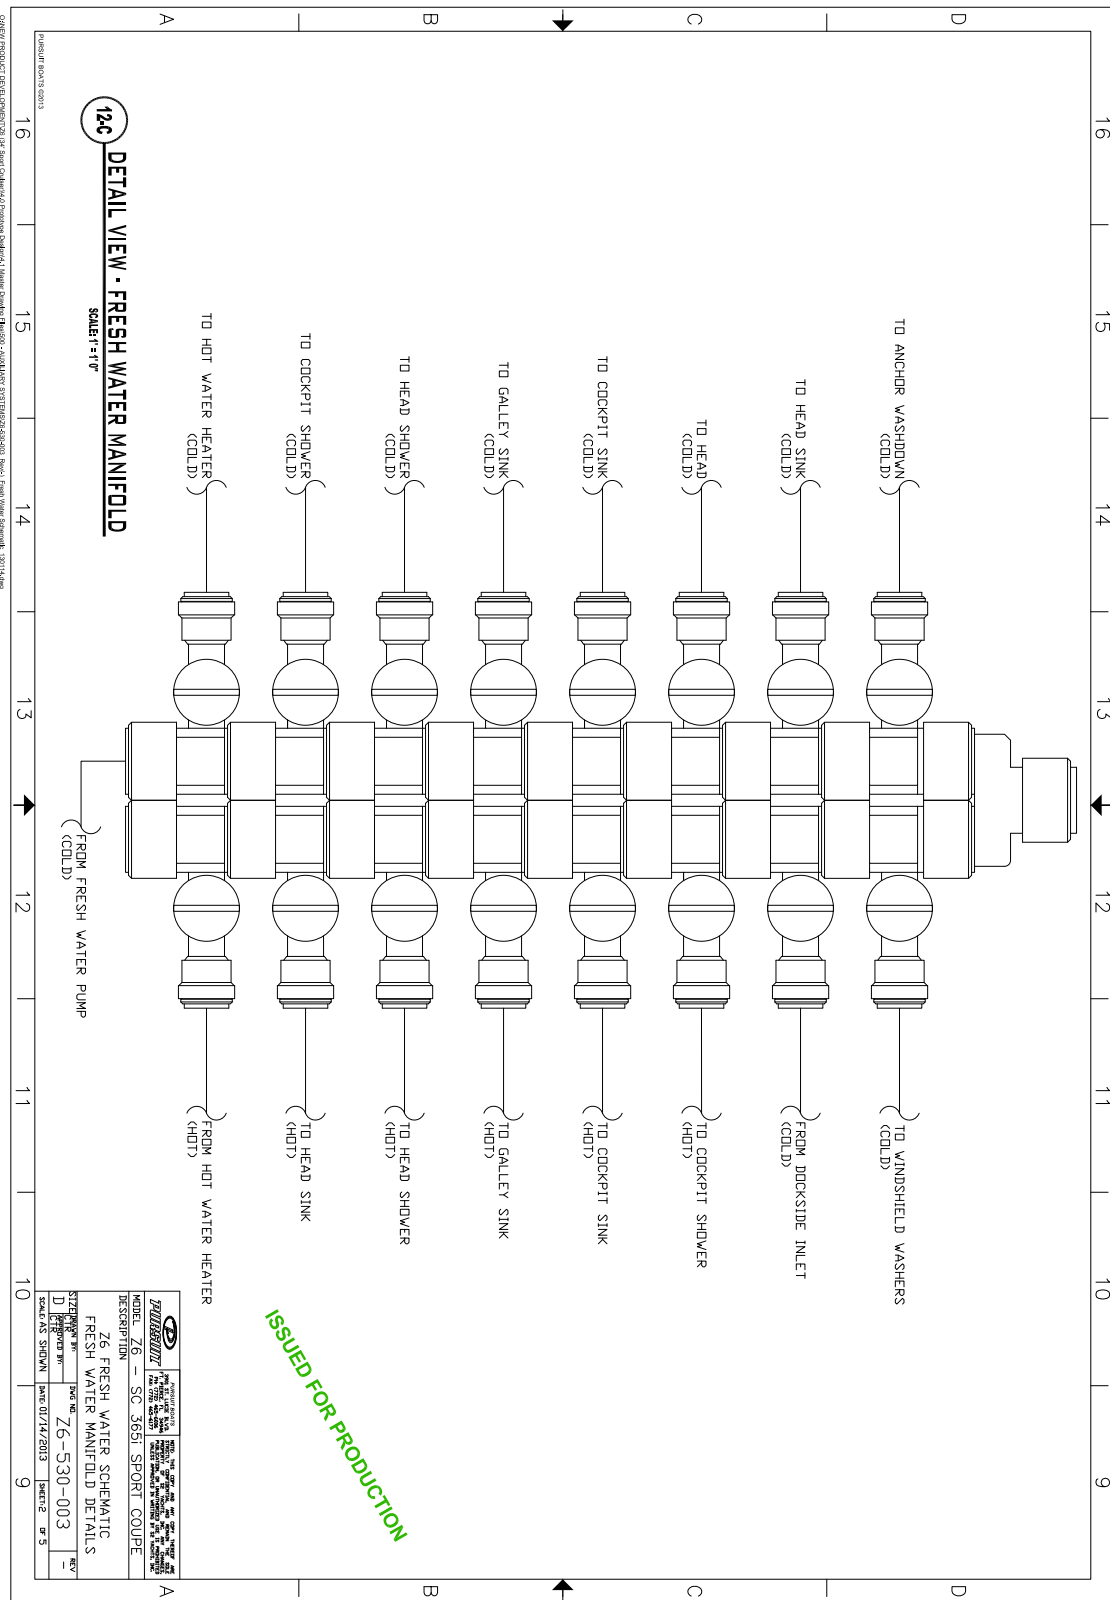




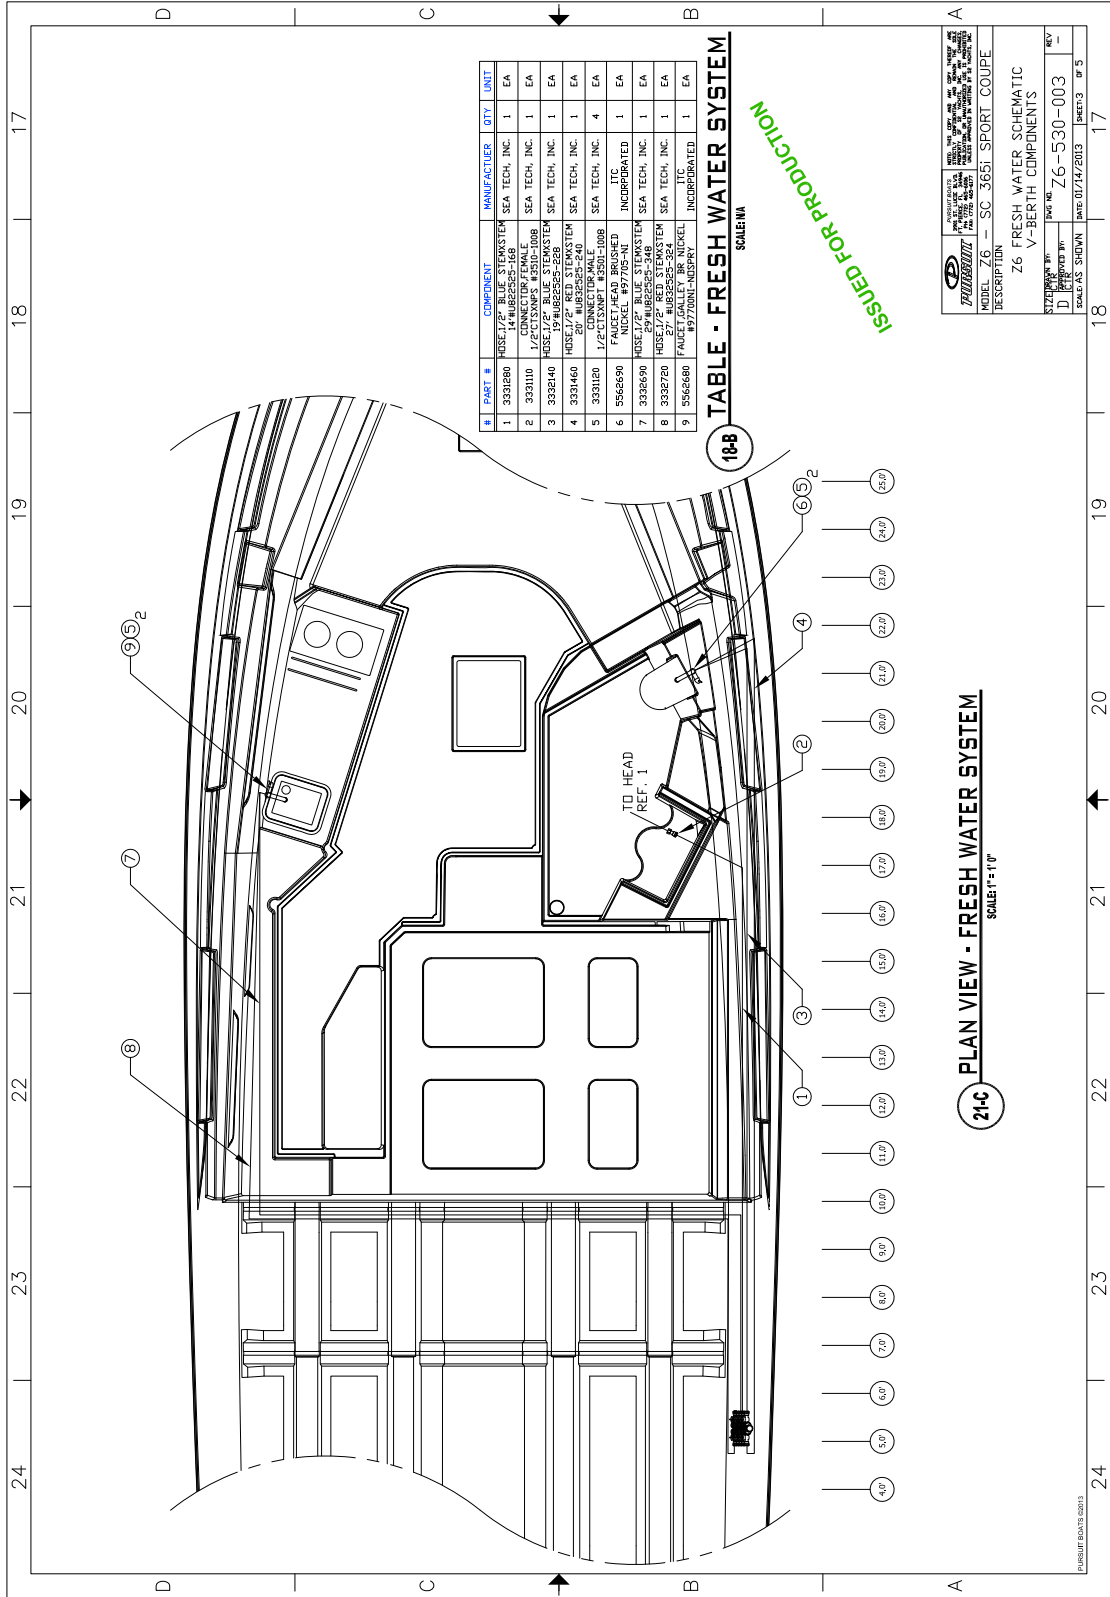

**PURSUITS**  
MARINE EQUIPMENT

MODEL: Z6 - SC 365i SPORT COUPE  
DESCRIPTION: Z6 FRESH WATER SCHEMATIC V-BERTH COMPONENTS

STATEWORK BY: [ ]  
DRAWN BY: [ ]  
SCALE: AS SHOWN DATE: 01/14/2013 SHEET: 3 OF 5

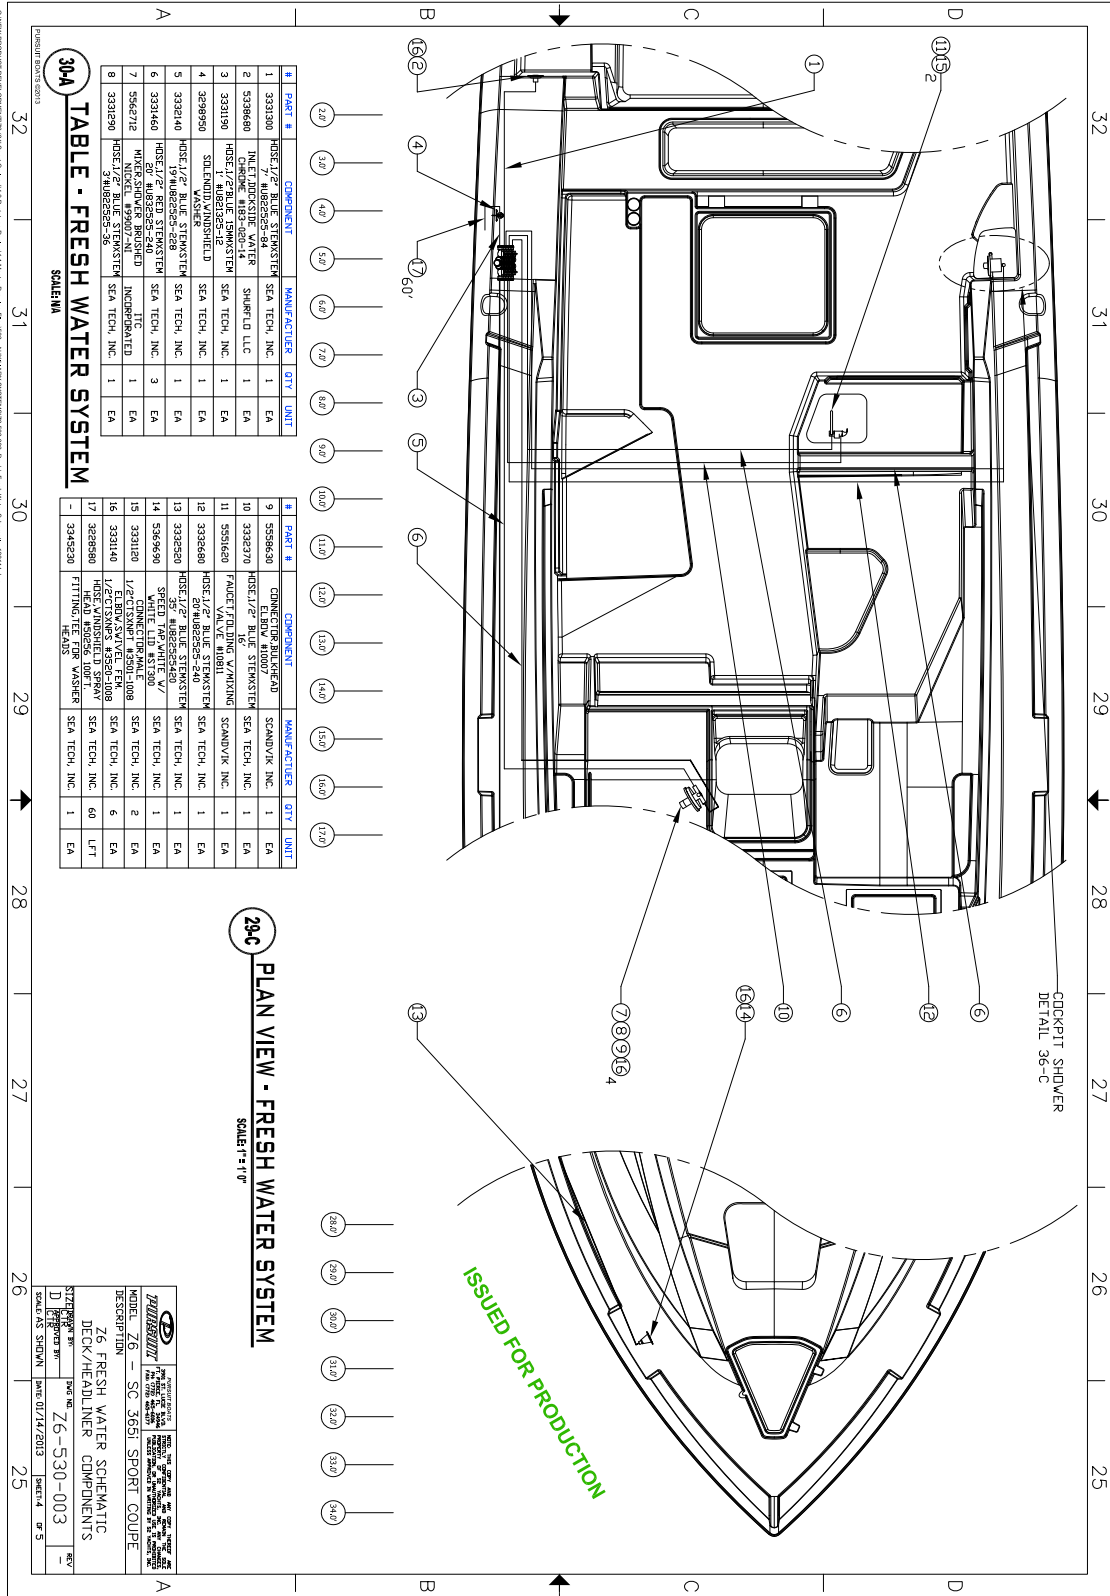

PART #	COMPONENT	MANUFACTURER	QTY	UNIT
1	HOSE 1/2" HOSE 3/4"	SEA TECH, INC.	1	EA
2	INLET RODKISSIE WATER	SUNRISE LLC	1	EA
3	HOSE 1/2" HOSE 3/4"	SEA TECH, INC.	1	EA
4	SOL ENDO VINSFIELD	SEA TECH, INC.	1	EA
5	HOSE 1/2" BLUE STEEMSTER	SEA TECH, INC.	1	EA
6	HOSE 1/2" RED STEEMSTER	SEA TECH, INC.	3	EA
7	HINER 3/4" INER 3/4" INER 3/4"	INDEPENDENT TIC	1	EA
8	HOSE 1/2" HOSE 3/4"	SEA TECH, INC.	1	EA

PART #	COMPONENT	MANUFACTURER	QTY	UNIT
9	CONNECTION HEAD	SCANDVIK, INC.	1	EA
10	HOSE 1/2" BLUE STEEMSTER	SEA TECH, INC.	1	EA
11	FAUCET FOR WASHING	SCANDVIK, INC.	1	EA
12	HOSE 1/2" BLUE STEEMSTER	SEA TECH, INC.	1	EA
13	HOSE 1/2" BLUE STEEMSTER	SEA TECH, INC.	1	EA
14	SPRINKLER VALVE	SEA TECH, INC.	1	EA
15	CONNECTION MALE	SEA TECH, INC.	2	EA
16	HOSE 1/2" BLUE STEEMSTER	SEA TECH, INC.	6	EA
17	HOSE 1/2" BLUE STEEMSTER	SEA TECH, INC.	60	LFT
-	FITTING FOR WASHING HEADS	SEA TECH, INC.	1	EA

**29-C**

**PLAN VIEW - FRESH WATER SYSTEM**

SCALE 1"=1'-0"

**PURSUIT**


MODEL: Z6 - SC 365i SPORT COUPE

DESCRIPTION: Z6 FRESH WATER SCHEMATIC DECK/HEADLINER COMPONENTS

DATE: 01/14/2013

SCALE: AS SHOWN

SHEET 4 OF 5

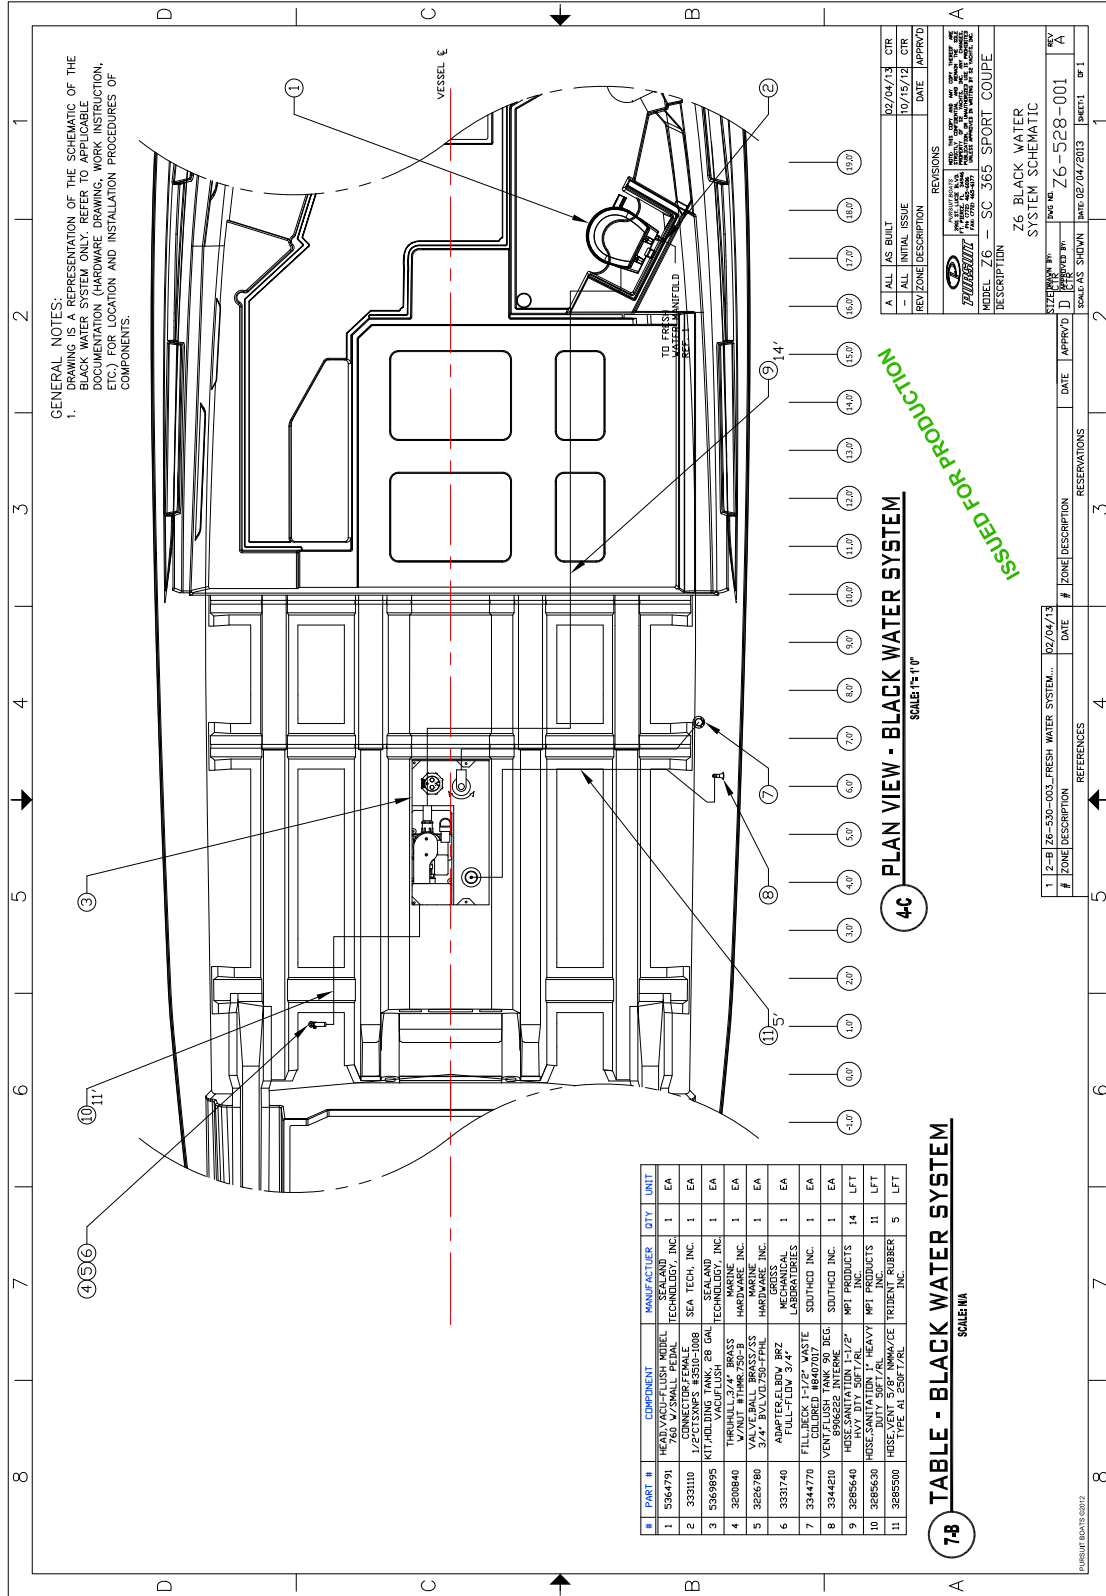

GENERAL NOTES:  
 1. DRAWING IS A REPRESENTATION OF THE SCHEMATIC OF THE BLACK WATER SYSTEM ONLY. REFER TO APPLICABLE DOCUMENTATION (HARDWARE DRAWING, WORK INSTRUCTION, INSTALLATION AND INSTALLATION PROCEDURES OF COMPONENTS).

REV	DESCRIPTION	DATE	APPROV'D
A	ALL AS BUILT	02/04/13	CTR
-	INITIAL ISSUE	10/15/12	CTR

**REVISIONS**  
 DATE: 02/04/13  
 BY: [Signature]  
 CHECKED BY: [Signature]  
 APPROVED BY: [Signature]

MODEL: Z6 - SC 365 SPORT COUPE  
 DESCRIPTION: Z6 BLACK WATER SYSTEM SCHEMATIC  
 SIZE: 11.00 x 17.00  
 SHEET NO: Z6-528-001  
 SCALE: AS SHOWN  
 DATE: 02/04/2013  
 SHEET: 01 OF 1


**4C PLAN VIEW - BLACK WATER SYSTEM**  
 SCALE: 1/4" = 1'


**7B TABLE - BLACK WATER SYSTEM**  
 SCALE: N/A

NO.	PART #	COMPONENT	MANUFACTURER	QTY	UNIT
1	5364791	HEAD/VACUUM-FLUSH MODEL SEALAND	TECHNICOLOTT, INC.	1	EA
2	353110	1/2" CONNECTIONS #5310-1008	SEA TECH, INC.	1	EA
3	53469895	KIT/HOLDING TANK, 28 GAL TECHNICAL	SEA TECH, INC.	1	EA
4	3208840	THRU-HULL 3/4" BRASS W/UNIT # THRU-250-B	MARINE INC.	1	EA
5	3226780	3/4" BULKHEAD 250-FRHS	HARDWARE INC.	1	EA
6	3331740	ADAPTER/ELBOW BRZ FULL-FLOW 3/4"	GRESS LABORATORIES	1	EA
7	3344770	FILL/DECK 1-1/2" WASTE SOUTHCO INC.	SOUTHCO INC.	1	EA
8	3344820	VENT/FLUSH TANK 50 DEG SOUTHCO INC.	SOUTHCO INC.	1	EA
9	3285640	8906222 INTERNE HWY DTY 3/8" / 2"	MPT PRODUCTS	14	LFT
10	3285630	HOSE/SANITATION 1/2" HEAVY MPT PRODUCTS	MPT PRODUCTS	11	LFT
11	3285600	HOSE/VENT 5/8" 10MM/4GE TRIENT RUBBER TYPE AT 250FT/RL	TRIENT RUBBER INC.	5	LFT

REF	ZONE DESCRIPTION	DATE	RESERVATIONS
1	2-B Z6-530-003-FRESH WATER SYSTEM...	02/04/13	

ISSUED FOR PRODUCTION

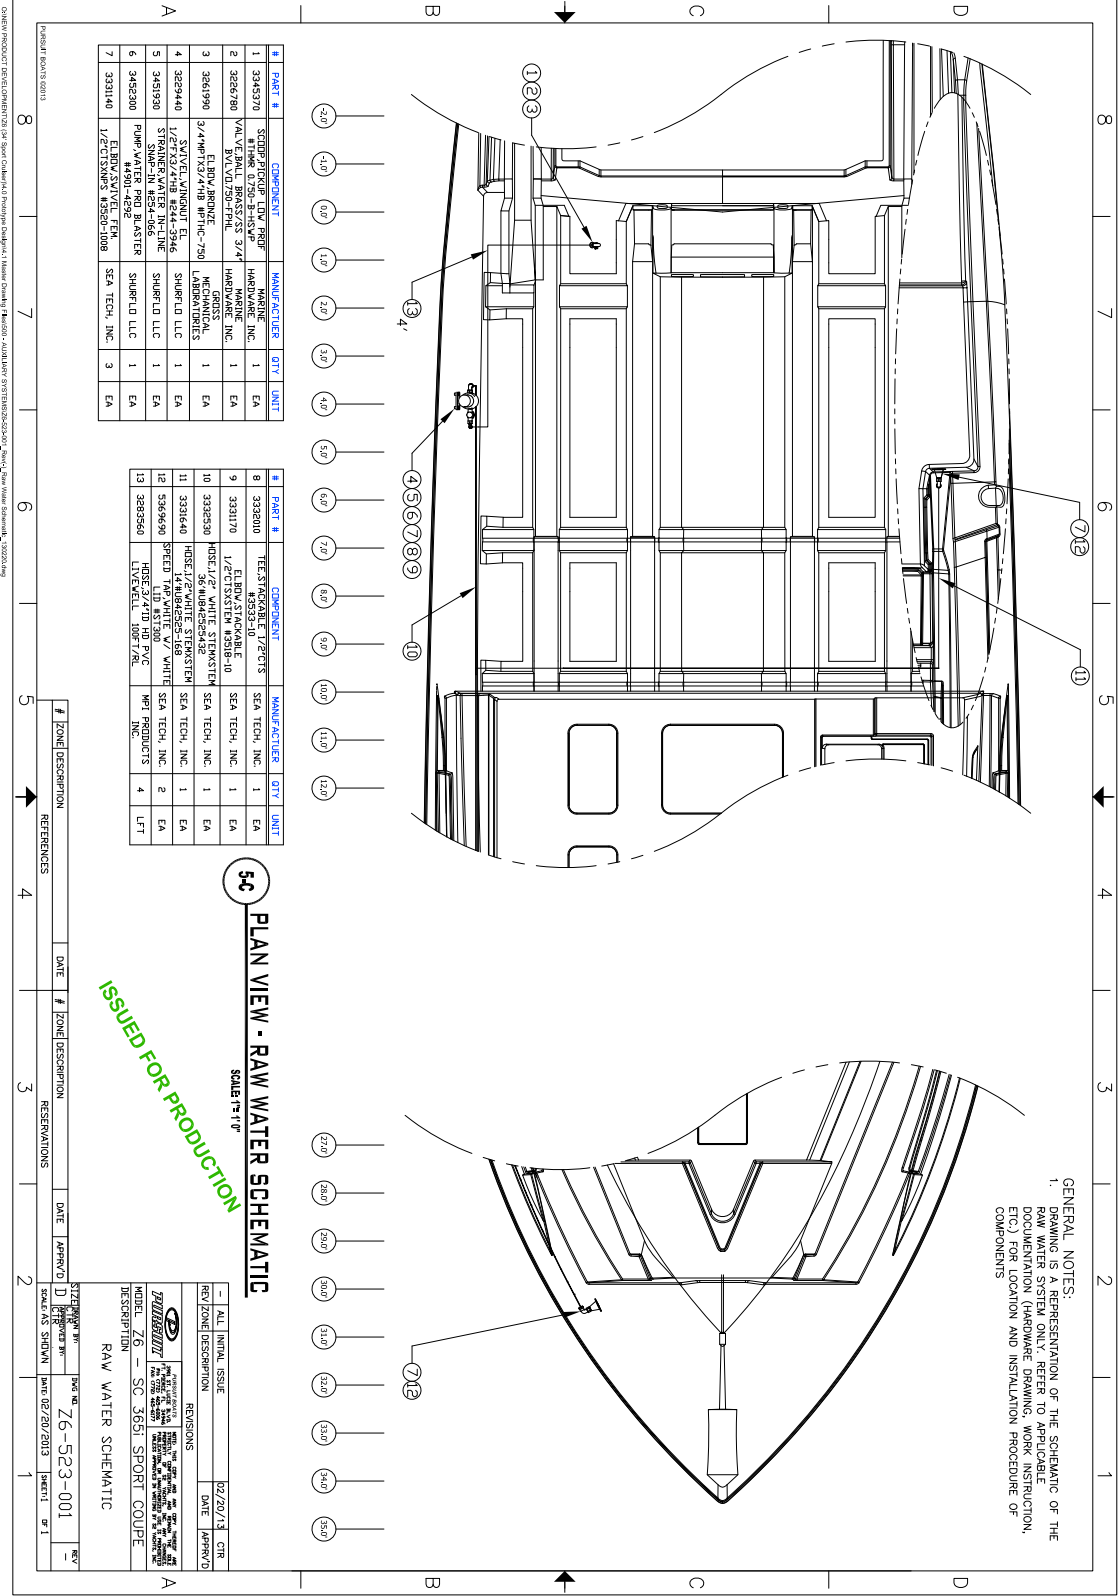

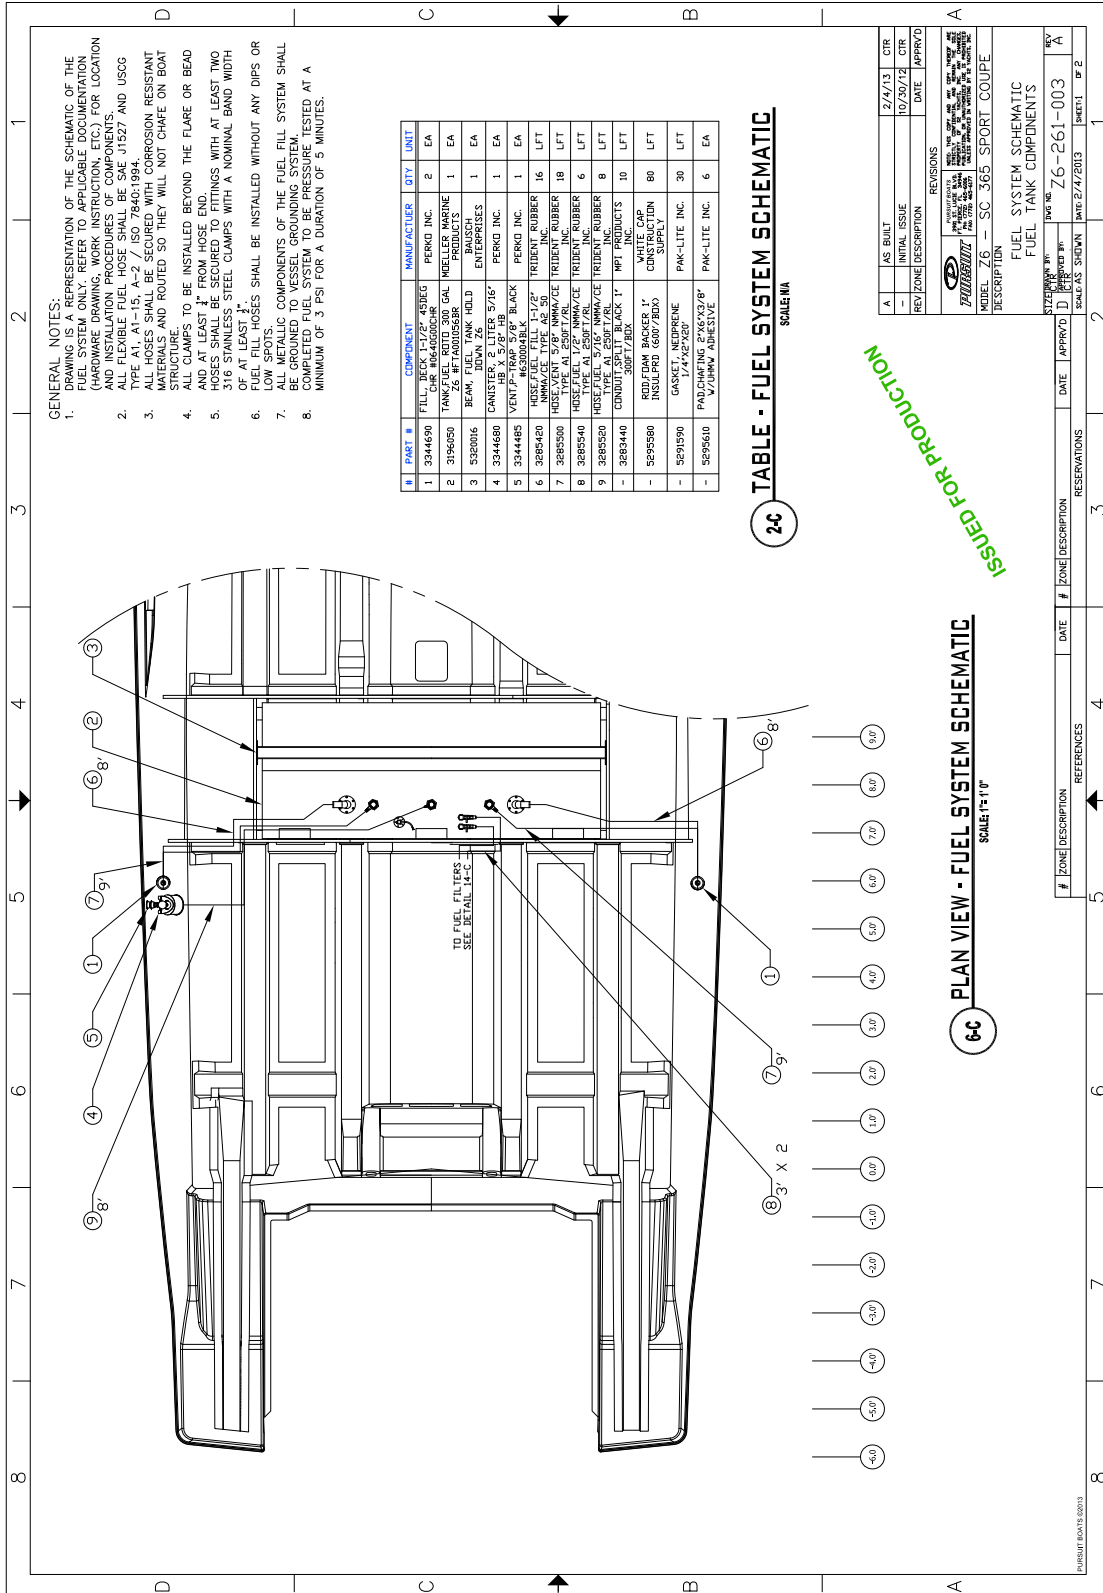

- GENERAL NOTES:**
- DRAWING IS A REPRESENTATION OF THE SCHEMATIC OF THE FUEL SYSTEM ONLY. REFER TO APPLICABLE DOCUMENTATION (HARDWARE DRAWING, WORK INSTRUCTION, ETC.) FOR LOCATION AND INSTALLATION OF ALL COMPONENTS.
  - ALL FUEL FILL HOSES SHALL BE 3/4" O.D. 1/2" I.D. USCG TYPE A1, A1-15, A-2 / ISO 7840:1994.
  - ALL HOSES SHALL BE SECURED WITH CORROSION RESISTANT MATERIALS AND ROUTED SO THEY WILL NOT CHAFE ON BOAT STRUCTURE.
  - ALL HOSES TO BE INSTALLED BEYOND THE FLARE OR BEAD AND AT LEAST 1" FROM HOSE END.
  - HOSES SHALL BE SECURED TO FITTINGS WITH AT LEAST TWO 316 STAINLESS STEEL CLAMPS WITH A NOMINAL BAND WIDTH OF AT LEAST 1/2".
  - FUEL FILL HOSES SHALL BE INSTALLED WITHOUT ANY DIPS OR SAGS.
  - ALL METALLIC COMPONENTS OF THE FUEL FILL SYSTEM SHALL BE GROUNDED TO VESSEL GROUNDING SYSTEM.
  - COMPLETED FUEL SYSTEM TO BE PRESSURE TESTED AT A MINIMUM OF 3 PSI FOR A DURATION OF 5 MINUTES.

PART #	COMPONENT	MANUFACTURER	QTY	UNIT
1	FILL, BACK 1-1/2" 45DEG CHR 806405000UR	PERKO INC	2	EA
2	TANK, FUEL 36.0 GAL 26.5 FT 1400058R	PERKINS MARINE PRODUCTS	1	EA
3	BEAM, FUEL TANK HOLD JOHN Z6	BAUSCH ENTERPRISES	1	EA
4	33444680 CHAINSTAY 5/16" HB X 5/8" HB	PERKO INC.	1	EA
5	33444685 VENT P-TRAP 5/8" BLACK	PERKO INC.	1	EA
6	3285420 HOSE/FUEL FILL 1-1/2" NMA/CE TYPE A2 30	TRIENTY RUBBER INC.	16	LFT
7	3285500 HOSE/FUEL FILL 1-1/2" NMA/CE TRIENTY RUBBER	TRIENTY RUBBER	16	LFT
8	3285540 HOSE/FUEL 1/2" NMA/CE TRIENTY RUBBER	TRIENTY RUBBER	6	LFT
9	3285520 HOSE/FUEL 3/16" NMA/CE TRIENTY RUBBER	TRIENTY RUBBER	8	LFT
-	3285340 CONDUIT 300T/RBX 1" PPR INC.	PPR INC.	10	LFT
-	5295580 ROD/FAM BACKER 1" 1/4X2X20	WHITE CAP SUPPLY	80	LFT
-	5291990 GASKET, NEOPRENE INSULPRD 600/7200	PAK-LITE INC.	30	LFT
-	5295610 PAD/7000/200/3/8" VULCAN ADHESIVE	PAK-LITE INC.	6	EA

**2-C** TABLE - FUEL SYSTEM SCHEMATIC  
SCALE: N/A


ISSUED FOR PRODUCTION

**6-C** PLAN VIEW - FUEL SYSTEM SCHEMATIC  
SCALE: 1"=1'0"

A	AS BUILT	2/4/13	CTR
-	INITIAL ISSUE	10/30/12	CTR
REV	ZONE DESCRIPTION	DATE	APPROV'D
REVISIONS			
MODEL Z6 - SC 365i SPORT COUPE			
DESCRIPTION FUEL SYSTEM SCHEMATIC			
FUEL TANK COMPONENTS			
SIZE/REV BY	DATE	DATE	REV
D	W	2/4/2013	A
SHEET 1 OF 2			REV Z6-261-003

#	ZONE DESCRIPTION	DATE	#	ZONE DESCRIPTION	DATE	APPROV'D
RESERVATIONS						
REFERENCES						

PURSUIT DATE: 02/13  
GENERAL PRODUCT DEVELOPMENT/26 (P) Sport Coupe/3D Product Design/1 Master Drawing/26250-PROPULSION-PROPULSION PLANT/2626-002 Rev/14 Fuel System Schematic\_11/30/12.dwg

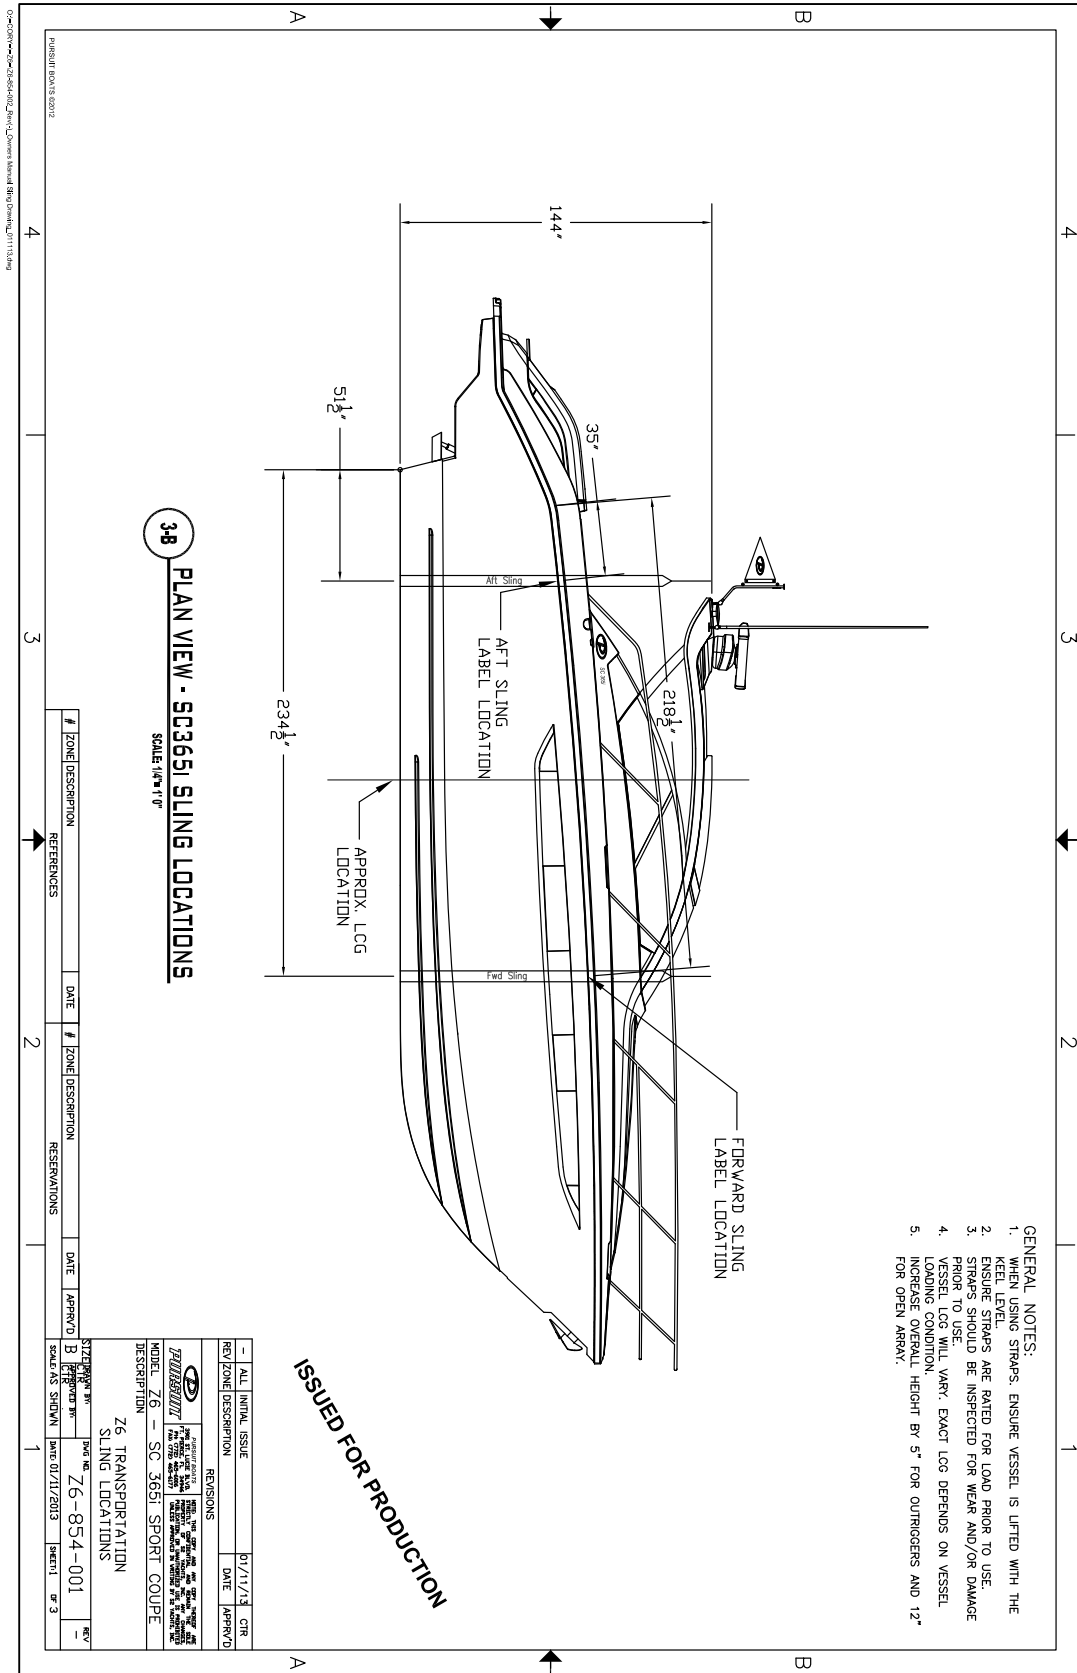


- GENERAL NOTES:**
1. WHEN USING STRAPS, ENSURE VESSEL IS LIFTED WITH THE CENTER OF GRAVITY.
  2. ENSURE STRAPS ARE RATED FOR LOAD PRIOR TO USE.
  3. STRAPS SHOULD BE INSPECTED FOR WEAR AND/OR DAMAGE PRIOR TO USE.
  4. VESSEL LOG WILL VARY. EXACT LOG DEPENDS ON VESSEL.
  5. LOADING CONDITION, INCREASE OVERALL HEIGHT BY 5" FOR OUTRIGGERS AND 12" FOR OPEN ARRAY.

**ISSUED FOR PRODUCTION**

**38 PLAN VIEW - SC365i SLING LOCATIONS**  
SCALE: 1/4" = 1'-0"

#	ZONE DESCRIPTION	RESERVATIONS	DATE	#	ZONE DESCRIPTION	RESERVATIONS	DATE	APPROV'D
1				1				
2				2				
3				3				
4				4				

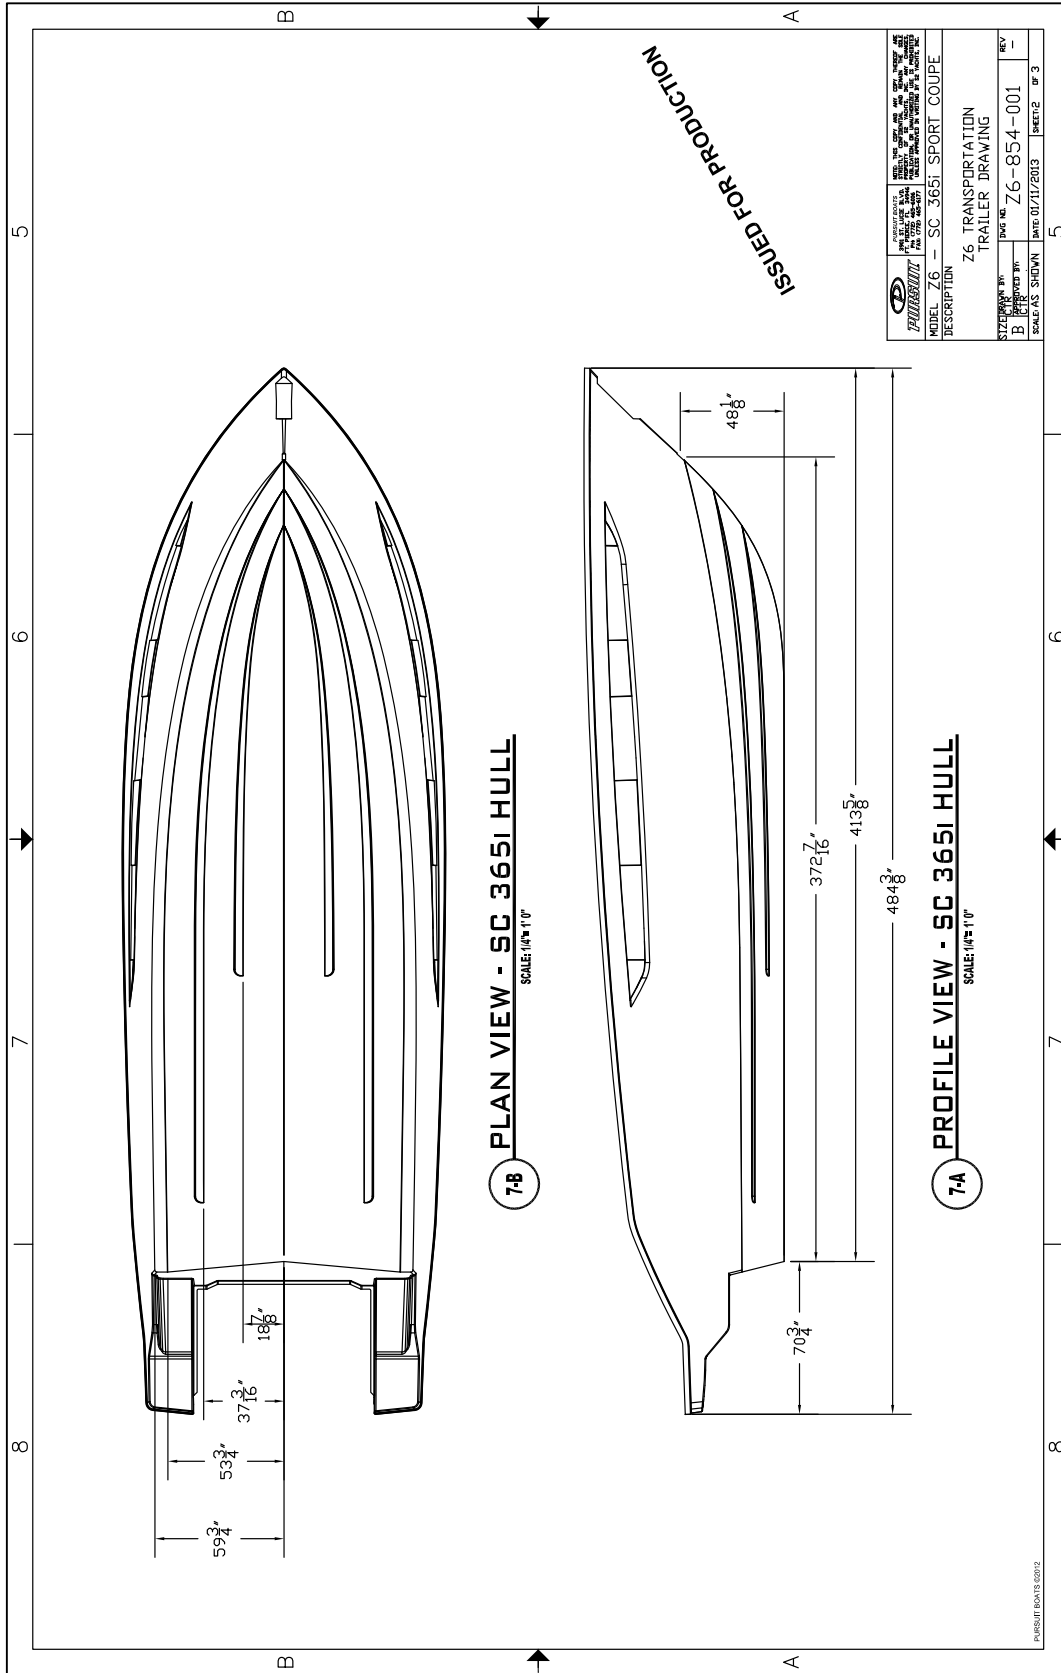











***PURSUIT***®



## Series TS2 Digital Temperature Switch

### Specifications - Installation and Operating Instructions

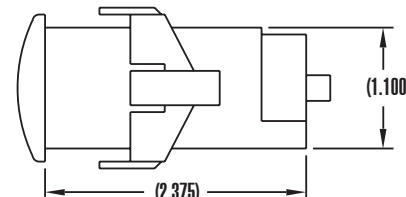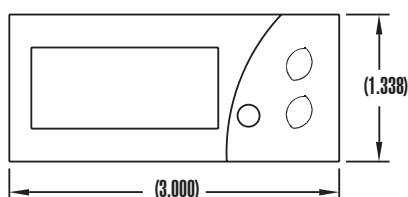

#### DESCRIPTION

Monitor and control temperature for heating and cooling applications with the Series TS2 Digital Temperature Switch. The Series TS2 offers twelve programmable functions to customize the unit to fit application requirements. Use the 16 Amp SPDT relay output to drive a motor, compressor, or fan. Designed with the OEM in mind, the TS2 offers the ability to configure multiple units with the touch of a button.

Programming multiple units is quick and easy. Simply program one switch with the desired parameter settings and connect the configuration key (sold separately) to the back of the unit. Press the button on the configuration key and download the parameter settings. Connect the key to the other switches to upload the stored settings with the push of a button.

The TS2 features set point adjustments, static defrost timing, compressor mean time, hysteresis, and ambient probe adjustment. Security protection is offered using a password code. The Series TS2 Digital Temperature Switches are designed to operate with PTC (1000Ω @ 25°C) probes sold separately.


#### INSTALLATION

The thermostat must be installed by authorized professionals. It should be located in a place free of vibrations, impacts, water and corrosive gases.

A hole measuring 71 x 29 mm must be cut in the panel where the thermostat is to be fitted (apply silicone to make it leaktight). Then, the fixing cups must be fitted, sliding them onto the thermostat until secure. Do not force tightening of the screw if the U-brackets are used. The connections must be covered with the rear cover for this.

#### WIRING INSTRUCTIONS

Avoid installing the probe's cables in proximity with any power cable. If the length of the probe cables measures more than 100 meters, a recalibration adjustment must be made (parameter P1).

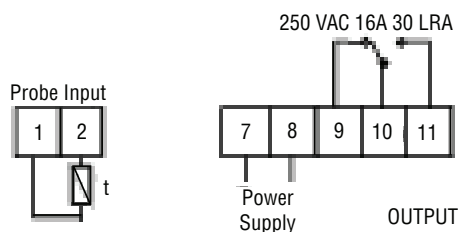

#### SPECIFICATIONS

**Probe Range:** -58 to 302°F (-50° to 150°C).

**Input:** PTC thermistor 1000Ω @ 25°C.

**Output:** SPDT relay rated 16A @ 240 VAC resistive.

**Horsepower Rating (HP):** 1 HP.

**Control Type:** ON/OFF.

**Power Requirements:** 115 VAC, 230 VAC, 12 VAC/VDC or 24 VAC/VDC (depending on model).

**Accuracy:** ±1°C.

**Display:** 3-digit, Red, 1/2" digits.

**Resolution:** ±1 digit.

**Memory Backup:** Nonvolatile memory.

**Ambient Operating Temperature:** 14 to 158°F (-10 to 70°C).

**Storage Temperature:** -4 to 176°F (-20° to 80°C).

**Weight:** 2.3 oz (65 g).

**Agency Approvals:** CE, cUR, UR.

#### FRONT OPERATION PUSH BUTTONS



Pushing SET once gives access to the SP. Pushing for 8 seconds gives way to the requested code. After entering the correct code, all parameters are accessible. This button alternates between text parameters and their value. It validates the modified parameters. When pressed with DOWN, it exits parameter programming.



Pressing this arrow allows the user to go to the next parameter or increase the value viewed on the display. When pressed for 8 seconds, it activates or deactivates defrosting.



Pressing this arrow allows the user to go to the previous parameter or decreases the value viewed on the display. When pressed for 8 seconds, it activates or deactivates the continuous cooling cycle. When pressed simultaneously with SET, it exits the programming mode.

## PROGRAMMING PARAMETERS


Access only to Set Point SP (without code protection):

- Press and release SET. SP text appears on the display.
- Press SET again. The real value is shown on the display.
- Modify the value using the UP and DOWN keys.
- Press SET to store the new SP value.
- Press SET and DOWN to quit programming, or wait 1 minute for the controller to TIMEOUT.

Access to all parameters (code protected):

- Press SET for 8 seconds. The access code value 00 is shown on the display.
- Using the UP and DOWN buttons, select the code (factory-set code is 00).
- Press SET to enter the code. If it is correct, the first parameter label will be shown on the display (SP).
- Move to the desired parameter with the UP and DOWN keys.
- Press SET to see the value.
- Modify the value with the UP and DOWN keys.
- Press SET to enter it, and exit to next parameter.
- Press SET and DOWN to quit programming, or wait 1 minute for the controller to TIMEOUT.

## SETTING THE KEYBOARD CODE TO ZERO

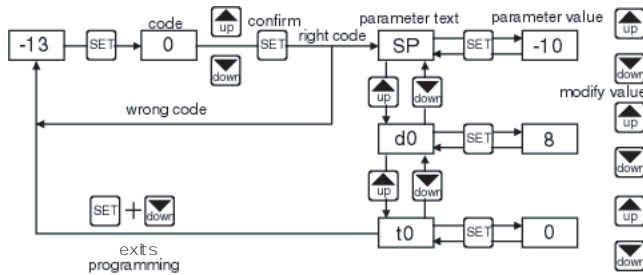

The keyboard code can be set to zero by holding the SET key and turning the controller off then on again.

## LED INDICATIONS

Out: This indicates that the compressor is connected. It waits the programmed minimum stop time of the compressor.

Def: This indicates that defrosting is activated.

## MESSAGES DISPLAY

In normal operation, the probe temperature will be shown. In case of alarm or error, the following messages will be shown:

- Er- Memory error.
- -- Short-circuited probe error.
- oo- Open probe error.

	Description	Units	Range
SP	Set point	degrees	r1 to r2
r0	Differential or hysteresis	degrees	1 to 20°
r1	Lower value for set point	degrees	-50 to 150°C -58 to 302°F
r2	Higher value for set point	degrees	-50 to 150°C -58 to 302°F
d0	Heating or cooling control	option	Ht/Co
d2	Time for defrosting	minutes	0 to 59'
d8	Interval time between defrosting	hours	0 to 24
c0	Minimum stop time for compressor	minutes	0 to 59'
c1	Continuous cycle time	hours	0 to 24
c2	ON time of fault cycle	minutes	0 to 999
c3	OFF time of fault cycle	minutes	0 to 999
P1	Ambient probe adjustment	degrees	-10° to 10°
P4	Decimal point	option	yes/no
H5	Parameter access code	numeric	0 to 255
H6	Ambient probe type	option	ptc/ntc
t0	Maximum temperature on display	degrees	-50 to 150°C -58 to 302°F

©Copyright 2014 Dwyer Instruments, Inc.

Printed in U.S.A. 7/14

FR# R0-443771-00 Rev. 4

## PARAMETERS

### PARAMETER DESCRIPTIONS

**SP = Set Point.** Temperature wished to regulate the machine. Can vary from r1 to r2.

**r0 = Differential**

For heating control if temperature is > SP then output is OFF. When the temperature drops to <SP - r0 the output is ON.

For cooling control if temperature is < SP then output is OFF. When the temperature increases to > SP + r0 the output is ON.

**r1 = Lower Set Point Limit**

**r2 = Higher Set Point Limit**

**d0 = Heat or Cooling Control.** Ht = heating control, Co = cooling control.  
**d2 = Defrosting Time Remaining,** in minutes. If d2 = 0, defrosting will not start.

**d8 = Interval Between Two Defrostings,** in hours.

**c0 = Minimum time for compressor to be OFF.** Minimum time from when the compressor stops till it connects again.

**c1 = Continuous Cycle Time.** The remaining time for a continuous cold cycle.

**c2 = ON time** of fault cycle, during probe error.

**c3 = OFF time** of fault cycle, during probe error.

**P1 = Ambient Probe Calibration.** Offsets degrees to adjust the ambient probe.

**P4 = Decimal Point.** Display decimal point in normal operation. Always present in parameter menus.

**H5 = Access Code to Parameters.** Factory-set as 00.

**H6 = Ambient Probe Type.** Sets probe type to be NTC or PTC.

**t0 = Temperature Display Limit.** Maximum temperature shown on the display, although the real temperature can be greater.

### OPERATION IN CASE OF ERROR

If the probe or thermostat memory should fail, the compressor will be connected for 5 minutes ON then 5 minutes OFF.

### MAINTENANCE

#### CLEANING

Clean the surface of the display controller with a soft, damp cloth. Never use abrasive detergents, petrol, alcohol or solvents.

#### REPAIRS

After final installation of the TS Series Digital Temperature Switch, no routine maintenance is required. A periodic check of system calibration is recommended. The devices are not field repairable and should be returned to the factory if recalibration or other service is required. After first obtaining a Returned Goods Authorization (RGA) number, send the material, freight prepaid, to the following address. Please include a clear description of the problem plus any application information available.

Dwyer Instruments, Inc.  
Attn: Repair Department  
102 Highway 212  
Michigan City, IN 46360 U.S.A

# WATER WITCH®

PATENT  
PENDING



## Float Switch Replacement

### Model 101 101-24

- *MERCURY FREE*
- *OILS AND FUELS — Will not activate switch*
- *SIMPLE INSTALLATION — Mounts at any angle*
- *DELAY ON — To avoid false pump cycles*
- *DELAY OFF — Controls standing water level*
- *ELECTRONIC — No wear, sticking, or electrolysis*
- *STAINLESS STEEL METAL PARTS*
- *EXCEEDS BOTH U.S. COAST GUARD & U.L. STANDARDS*
- *20 YEARS — Marine experience*

**5** YEAR  
LIMITED  
WARRANTY

MEMBER  
**ABYC**®  
Setting Standards for Safer Boating

### SPECIFICATIONS:

Power Required: 12 Vdc (Model 101)  
24 Vdc (Model 101-24)

Power used: .004 Amps.


Size: 2.135" W x 1.350" H x 1"D

Weight: 3 Ounces


Delay on: 6-8 Seconds

Delay off: 14-16 Seconds

Max load: 15 Amps. (Model 101)  
10 Amps. (Model 101-24)

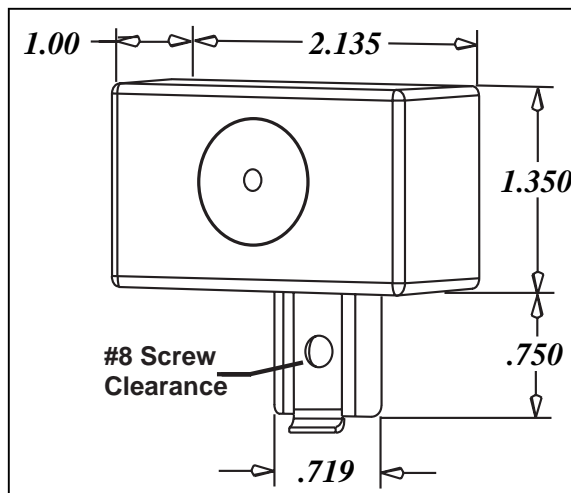

TOP  
MOUNT

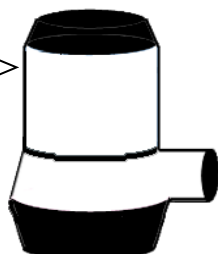

HOSE  
MOUNT




See instructions on reverse →

# Replacing your old float switch

Confirm float being replaced is on the positive (+) side of the pump.

1. Cut and splice the RED wire on the model 101 to the (+) wire coming from the battery .
2. Cut and splice the BROWN wire from the model 101 to the positive pump wire.
3. Cut and splice the BLACK wire on the model 101 to common ground (-).

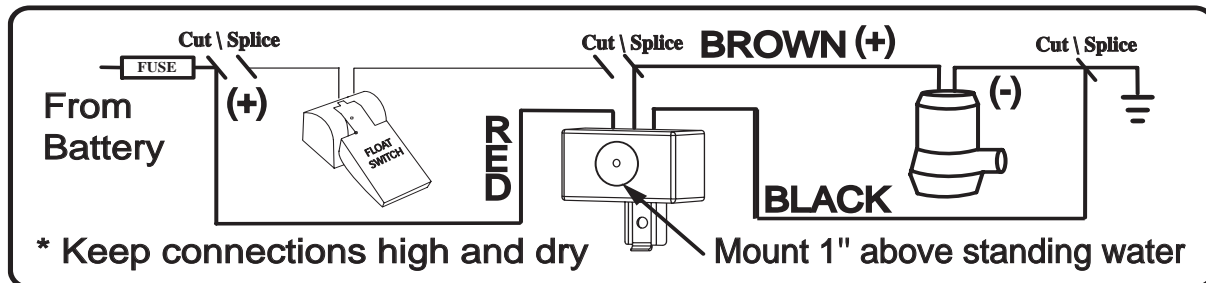

## CAUTION:



- Connecting the BROWN wire to ground, as this may damage the switch.
- Mount the Model 101 with sensor about 1" above standing water in your bilge.
- Make all wire connections sealed and above any water contact.

## TESTING:

Test the Water Witch by placing a wet rag across the sensor and the metal mounting bracket for the 8 second delay period required to turn on the pump.

**Every time power is applied, the Water Witch will operate the pump for several seconds in a self calibrate mode.**

## Common Wiring Configurations

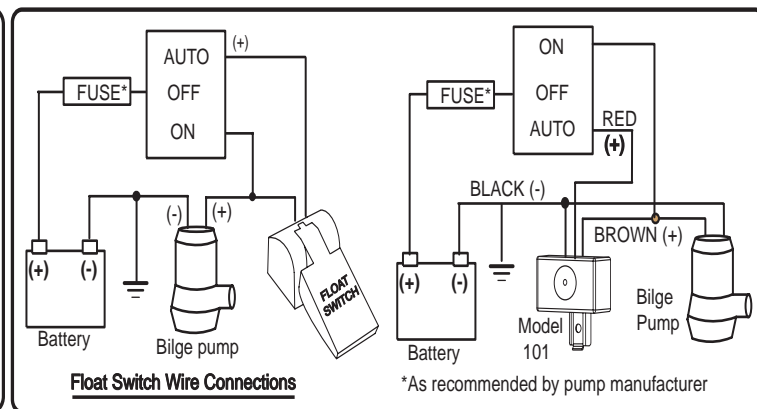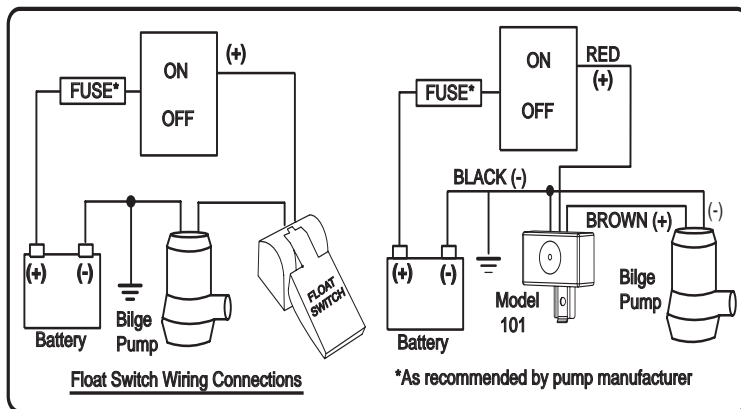

## 2-way switch

## 3-way switch

## NOTE:

If large amounts of rain water can enter the bilge, it may dilute the normal, fresh or salt, water outside our sensitivity window. Corrective action can be to switch pump on manually to remove diluted water or to add minerals such as salt, baking soda, bilge cleaners, etc... **NORMAL FRESH WATER HAS AMPLE MINERAL CONTENT FOR PROPER OPERATION.**

## LIMITED WARRANTY

WATER WITCH, INC. warrants this *control* for a period of 5 years from the date of purchase against defects in material and workmanship providing it has not been subject to physical or electrical abuse or misuse. If it ceases to operate, return *control*, freight prepaid, with a copy of your sales receipt. Water Witch, Inc. reserves the right to repair or replace the *control* at its option. **IN NO EVENT WILL WATER WITCH, INC. BE LIABLE FOR MORE THAN THE REPLACEMENT COST OF THE CONTROL UNDER THIS WRITTEN WARRANTY OR UNDER ANY IMPLIED WARRANTY OR MERCHANTABILITY.** This warranty gives you specific legal rights. However, you may also have other rights which vary from state to state and country to country.

Phone (772) 220-6652



1

Fax (772) 220-6653

Location: 3171 SE Waaler St., Stuart, FL 34997

Mailing: P.O. Box 326, Port Salerno, FL 34992

## **WARRANTY - O.E.M. ALUMINUM PRODUCTS**

EFFECTIVE JANUARY 1, 1998

- 1) ALL ALUMINUM PRODUCTS DESIGNED AND FABRICATED BY BAUSCH ENTERPRISES ARE WARRANTED FOR A PERIOD OF TWO YEARS AGAINST BREAKAGE UNDER NORMAL CONDITIONS AND PROPER MAINTENANCE.
- 2) PRODUCT DESIGNS SUBMITTED TO BAUSCH ENTERPRISES BY O.E.M. CUSTOMERS MUST PASS BAUSCH ENTERPRISES TESTING PROCEDURES TO BE ELIGABLE FOR WARRANTY COVERAGE.
- 3) WARRANTY DOES NOT INCLUDE FINISHES OR ACCESSORY ITEMS SUCH AS OUTRIGGERS, ROD HOLDERS, ETC. NOT MANUFACTURED BY BAUSCH ENTERPRISES.
- 4) INSTALLATION OF AFTERMARKET ACCESSORIES SUCH AS OUTRIGGERS, ELECTRONICS BOXES, ETC. BY A DEALER OR BOAT OWNER WILL VOID WARRANTY UNLESS APPROVED BY BAUSCH ENTERPRISES.
- 5) UNLESS OTHERWISE APPROVED, ALL WARRANTY REPAIRS TO BE PERFORMED AT BAUSCH ENTERPRISES. IN THE EVENT A "FIELD" REPAIR IS NECESSARY A WRITTEN QUOTE MUST BE SUBMITTED FOR APPROVAL BY BAUSCH ENTERPRISES PRIOR TO WORK BEING PERFORMED.
- 6) WELD CRACKS OR ANY OTHER SUSPECT PROBLEMS SHOULD BE ATTENDED TO IMMEDIATELY. FAILURE TO DO SO MAY RESULT IN FURTHER UNNECESSARY DAMAGE.
- 7) BAUSCH ENTERPRISES RESERVES THE RIGHT TO REFUSE ANY WARRANTY CLAIM IN THE EVENT OF OBVIOUS ABUSE, INCORRECT INSTALLATION AND/OR IMPROPER MAINTENANCE.
- 8) CLAIMS TO BE SUBMITTED TO BAUSCH ENTERPRISES BY THE BOAT MANUFACTURER.





Phone (772) 220-6652



1

Fax (772) 220-6653

Location: 3171 SE Waaler St., Stuart, FL 34997

Mailing: P.O. Box 326, Port Salerno, FL 34992

## **MAINTAINENCE GUIDELINES FOR BAUSCH ENTERPRISES ALUMINUM PRODUCTS**

BAUSCH ENTERPRISES IS PROUD TO BE PROVIDING HIGH QUALITY AUMINUM MARINE PRODUCTS TO THE BOATING INDUSTRY.

ALL BAUSCH PRODUCTS ARE MANUFACTURED WITH ONLY THE HIGHEST QUALITY MATERIALS AVAILABLE TO INSURE NOT ONLY LASTING STRUCTURAL INTEGRITY, BUT ALSO LONG LASTING ATTRACTIVE APPEARENCE.

TO KEEP YOUR ALUMINUM PRODUCTS LOOKING GOOD AND PERFORMING WELL, WE SUGGEST THE FOLLOWING GUIDELINES.

1. **ROUTINE CLEANING** - THOROUGHLY WASH AND CHAMOIS ALL ANODIZED ALUMINUM PARTS WITH FRESH WATER AFTER EACH USE. PARTICULAR ATTENTION MUST BE PAID TO TOPS WITH ALUMINUM FRAMES EQUIPPED WITH CANVAS OR FIBERGLASS TOPS. THE AREAS DIRECTLY UNDER THE TOPS COLLECT MOISTURE, SALT AND DIRT AND ARE MORE PRONE TO PITTING IF NOT CLEANED OFTEN. CLEANING OF STORED BOATS AT LEAST WEEKLY IS RECOMMENDED ESPECIALLY IF STORED OUTSIDE AND SUBJECT TO SALT SPRAY, ROAD FILM, ETC.
2. **PROTECTION** - ANODIZED ALUMINUM PARTS SHOULD BE COATED WITH A METAL PROTECTOR AT LEAST ONCE EVERY TWO MONTHS. BAUSCH ENTERPRISES RECOMMENDS RUPP ALUMA GUARD OR SIMILAR NON ABRASIVE METAL PROTECTOR.
3. WHITE SPOTS AND STAINS MAY BE CAUSED BY SOAP DRYING ON THE ALUMINUM AND/OR WATER IMPURITIES.
4. ROUTINLY CHECK ALL BOLTS AND FASTENERS. ROUTINE BOAT OPERATION CAN CAUSE LOOSENING OF FASTENERS AND MAY RESULT IN WELD FATIGUE IF NOT CORRECTED.
5. MAIN LEGS AND BRACES MAY COLLECT WATER INSIDE THE PIPE. DRAIN HOLES ARE DRILLED NEAR THE MOUNTING PADS AND MUST BE KEPT CLEAN TO PREVENT WATER FROM COLLECTING AND POSSIBLY FREEZING IN NORTHERN CLIMATES. WATER FREEZING IN THE PIPE CAN RESULT IN PIPE SPLITING AND/OR WELD CRACKING.

FOR ANY QUESTIONS, PLEASE CALL DANA OR TODD BAUSCH AT 772-220-6652 OR E-MAIL [DANA@BAUSCHENTERPRISES.COM](mailto:DANA@BAUSCHENTERPRISES.COM)



# ***CAUTION***

Leaving foredeck cushions installed for an extended period of time may result in gelcoat damage.

Water that becomes trapped between the cushion and foredeck may cause the gelcoat to blister. Blistering is not covered by the Pursuit Limited Warranty. Remove the cushions every two – three weeks and allow them to dry out on the bottom side. For longer life we recommend that the cushions be stored out of the elements when not in use.

