

OC30.1

Quille Relevable - Operating Instructions



BENETEAU
AVANT-GARDE IN BOATING

Operating Instructions: Keel command

- You have two positions (keel UP – keel DOWN)
- Keel command button (electric) is placed on the starboard side at the helm (see the command button here below)



- The above button activates a pump to operate the hydraulic spring that moves the keel

BENETEAU

Operating Instructions: Keel Button

- the red button is for SECURITY reason, once unlocked you push the above button and the system switch ON
- by pushing on the left buttons the keel goes UP and DOWN
- the buttons are electric, are simply connected to a pump
- the hydraulic oil is pumped from a dedicated tank into the hydraulic spring
- the spring is connected to the keel (POSITION UP – POSITION DOWN)



BENETEAU

Operating Instructions: Keel Position - UP



BENETEAU

Operating Instructions: Keel Position - DOWN



BENETEAU

Interiors: Keel Lifting System

- The keel lifting system is hidden by the saloon table
- Table leaves: open/close
- Canvas to hide the hydraulic spring



BENETEAU

Interiors: Keel Lifting System

- The keel lifting system is hidden by the saloon table
- **Table leaves: open/close**
- Canvas to hide the hydraulic spring



BENETEAU

Interiors: Keel Lifting System

- The keel lifting system is hidden by the saloon table
- Table leaves can be opened
- **Canvas to hide the hydraulic spring**



BENETEAU

THANK YOU



BENETEAU
AVANT-GARDE IN BOATING